



1

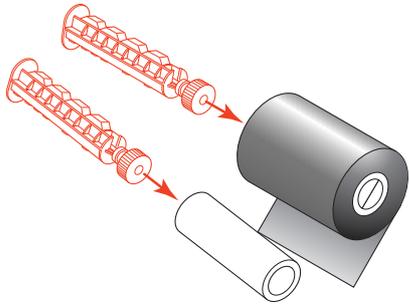


Insert ribbon holders

4

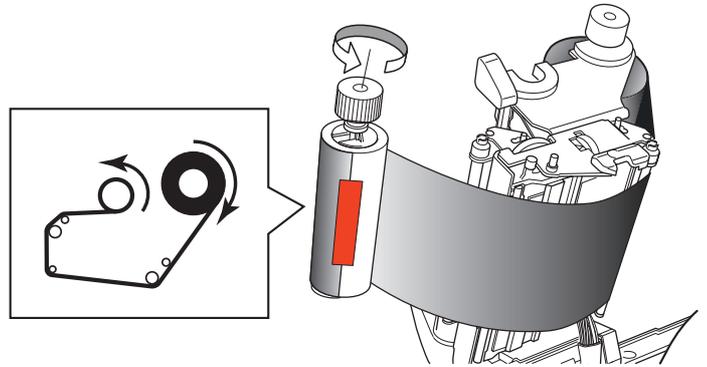


Attach Ribbon with tape

2

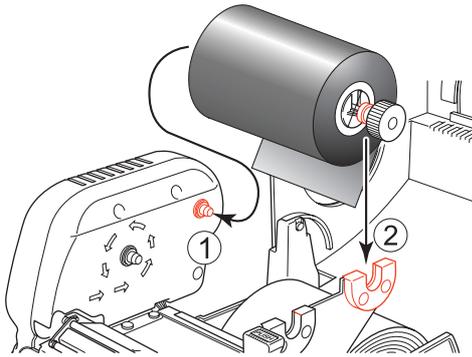


Load New Ribbon

5

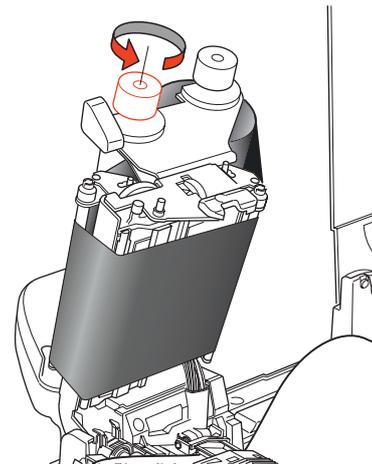


Wind out creases

3 **Open Ribbon Section...**






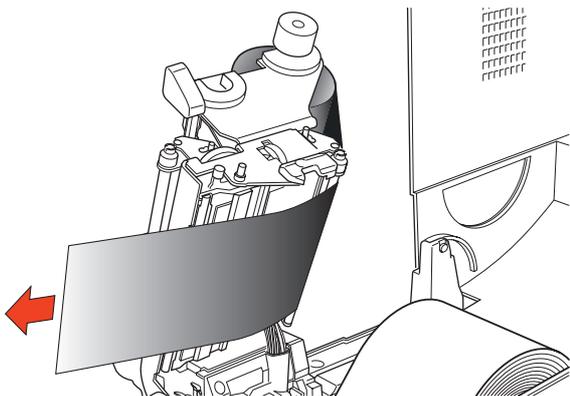


...Pull Ribbon Forward

6

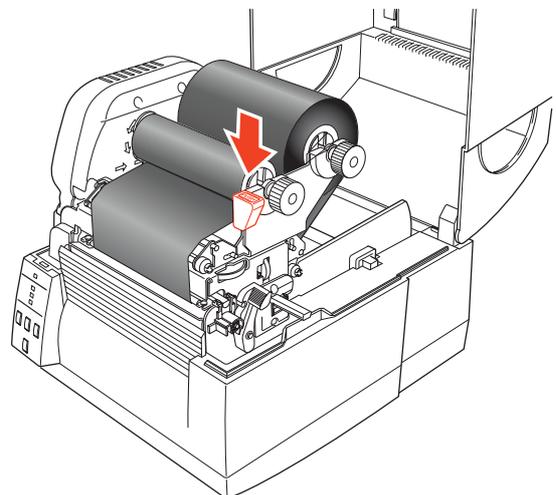

Close Ribbon Section

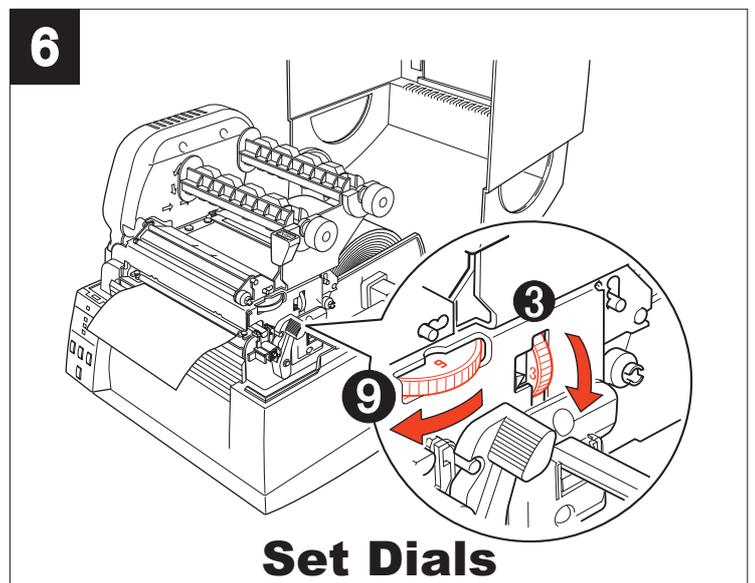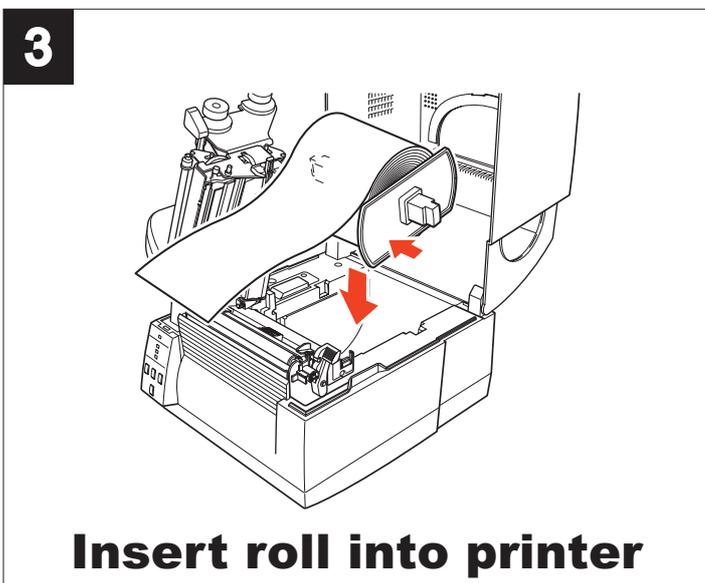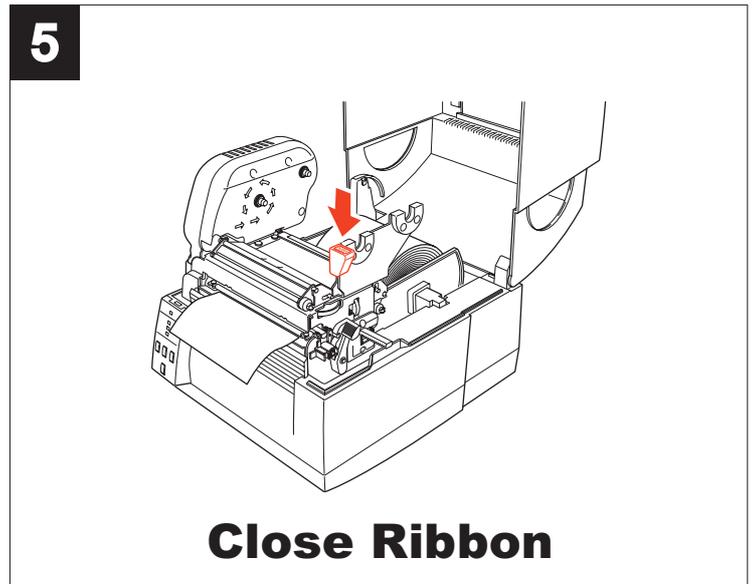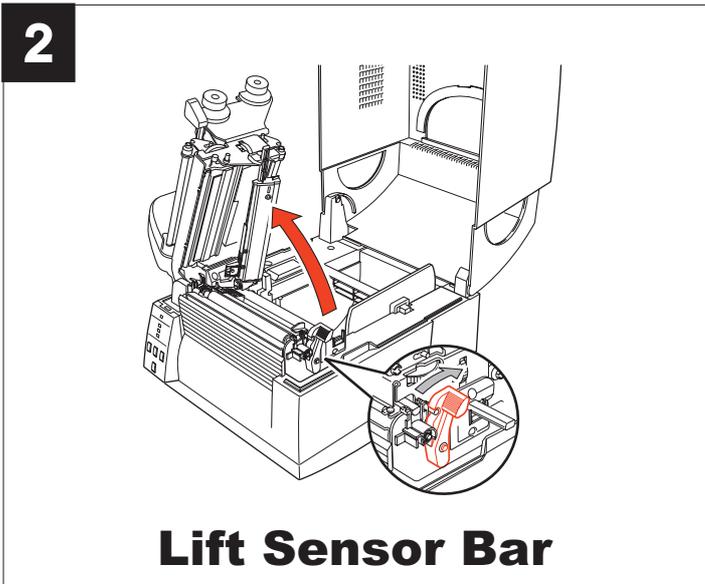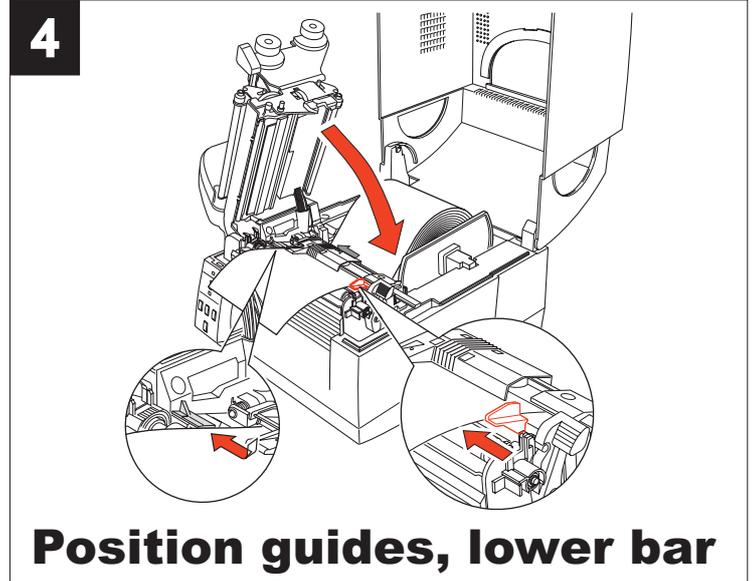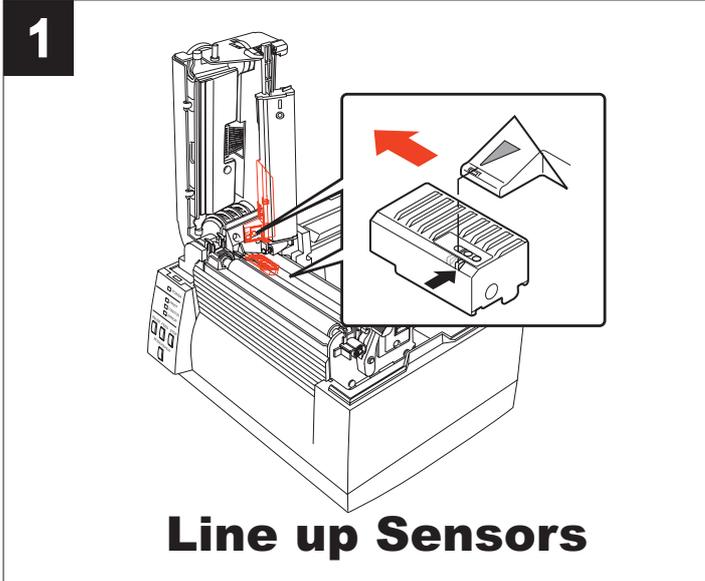




CL-S621 Print Head Cleaning


When replacing printer ribbon, follow these simple instructions on how to clean the print head. This will ensure good quality print and reduce wear on the print head.

Ribbon

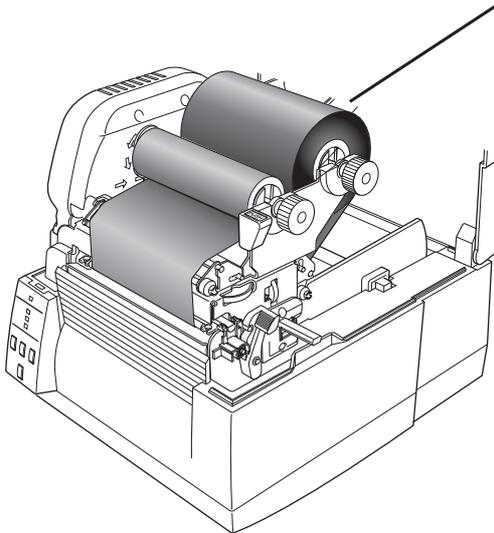

Remove waste ribbon to reveal print head (the head requires cleaning every time the ribbon is replaced).

Head

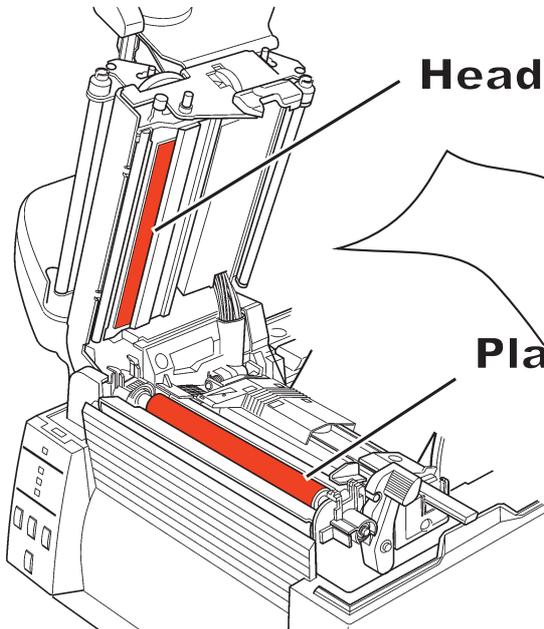

Clean the print head using alcohol wipes by firmly but carefully wiping the head. Also rotate and wipe the platen roller.

Platen roller