

SUPERLOCK 2.0 CODE SINGLE-SIDED KEYPAD



CODE: C

5-Year Warranty

Reversible Handing

Suitable for metal gate frames. For wooden gates, our surface-mounted option is available.

INCLUDED IN THE BOX

- 2.5mm hex key + 3mm hex key
- 2 x M8 fixing bolts
- Face plate
- Latchbolt
- Strike plate (2 x self-drilling fasteners)
- Code changing pack





TECHNICAL SPECIFICATIONS

Lock type	Mechanical keypad gate lock
Keypad type	Single-sided
Handing	Reversible, supplied right-handed
Latchbolt throw	20mm (3/4")
Lock case width	70mm (2 3/4")
Fixing method	3-hole drilling. Bolt-on
Fixings included	Yes
Warranty	5 years
Compatible Keeps	BSK, BSKS, BSKG
Compatible Shroud	BQS

Our Superlock Code Single-Sided Gate Lock provides the convenience of a keyless entry on one side and simple exit on the other. Designed for box section metal gate frames, this slim and sturdy lock is easy to install and adjust, offering reliable and convenient day-to-day use.

Product code	Description
BDGS1030	To fit 10-30mm (1/2" to 1 1/4") gate frames
BDGS4060	To fit 40-60mm (1 1/2" to 2 1/4") gate frames
Available in:	Black RAL9005 Moss Green RAL6005

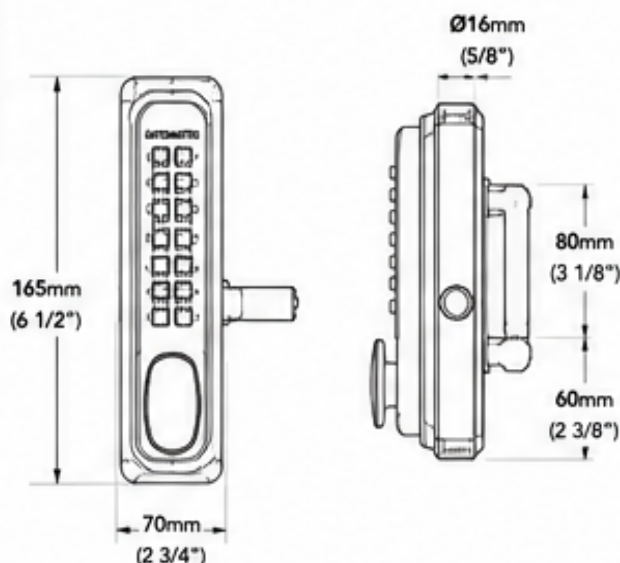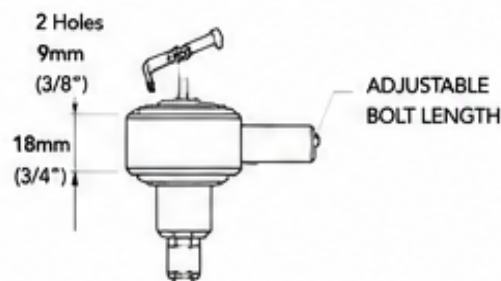

HELP & SUPPORT

Need further assistance? Our customer support team can help with order queries, product identification, spare parts, warranty information and general after-care.

 UK: 0121 272 1777
 www.clafabrications.co.uk
 sales@cla-group.co.uk

INSTALLATION INSTRUCTIONS

1. Check the gate handing. If left-hand is required, reverse the handing using the instructions below. For right-hand gates, go to step 2.
2. Drill 2 x 9mm (3/8") holes at 140mm (5 1/2") centres for fixing bolts provided.
3. Drill a 18mm (3/4") clearance hole for the latchbolt at 60mm (2 3/8") centres up from the bottom fixing hole.
4. Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
5. Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
6. Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
7. Fix strike plate by either welding or screw fixing onto the gate post.

HOW TO CHANGE HANDING FROM RIGHT TO LEFT HANDING


Handing refers to the side on which the gate is hinged. This determines whether the lock should be set for left-hand or right-hand installation. When standing outside the gate, if the hinges are on the left, the lock must be changed to left-hand setting.




OUR LOCKS ARE SUPPLIED RIGHT-HANDED. IF A RIGHT-HANDED LOCK IS REQUIRED, SKIP THE STEPS BELOW AND CONTINUE WITH INSTALLATION.



1. Using the 3mm hex key, unscrew the two screws located at the top and bottom.

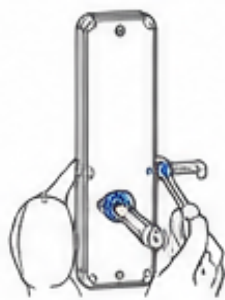

2. Remove the keypad. On the inside handle, unscrew ONLY the blue screw and screw it into the adjacent hole.

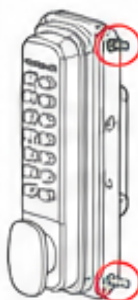


3. Refit the keypad, on the correct side, using the 3mm hex key, ensure the spindle and gaskets are correctly in place.



Check that the code and handle work correctly and then follow the instructions install the lock onto the gate.

HOW TO CHANGE THE CODE

1. Check the original code is working on the keypad.
2. Remove the keypad off the lock. To do this, unscrew the two screws fixing the keypad to the panel.
3. Turn the keypad over and remove the 4 screws.
4. Lift off the covering panel carefully as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'

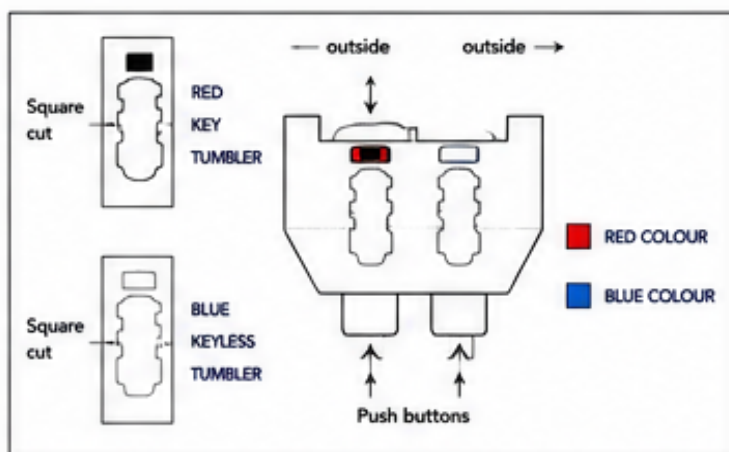

6. Replace the covering panel and tighten the 2 screws
7. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the panel using the 2 screws and reassemble the lock.

MAINTENANCE

6 Monthly:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.



SUPERLOCK 2.0 CODE DOUBLE-SIDED KEYPAD



CODE: C

5-Year Warranty

Reversible Handling

Suitable for metal gate frames. For wooden gates, our surface-mounted option is available.

INCLUDED IN THE BOX

- 2.5mm hex key + 3mm hex key
- 2 x M8 fixing bolts
- Face plate
- Latchbolt
- Strike plate (2 x self-drilling fasteners)
- Code changing pack



TECHNICAL SPECIFICATIONS

Lock type	Mechanical keypad gate lock
Keypad type	Double-sided
Handing	Reversible, supplied right-handed
Latchbolt throw	20mm (3/4")
Lock case width	70mm (2 3/4")
Fixings included	Yes
Warranty	5 years
Compatible Keeps	BSK, BSKS, BSKG
Compatible Shroud	BQS

Keyless access from both sides, with auto-latching security every time the gate closes. The Superlock 2.0 Double-Sided Keypad combines mechanical keypads on both sides with straightforward three-hole bolt-on fitting, giving you reliable access control without power or batteries.

Product code	Description
BDG1030	To fit 10-30mm (1/2" to 1 1/4") gate frames
BDG4060	To fit 40-60mm (1 1/2" to 2 1/4") gate frames
Available in:	Black RAL9005 Moss Green RAL6005



HELP & SUPPORT

Need further assistance? Our customer support team can help with order queries, product identification, spare parts, warranty information and general after-care.

UK: 0121 272 1777

www.clafabrications.co.uk

sales@cla-group.co.uk

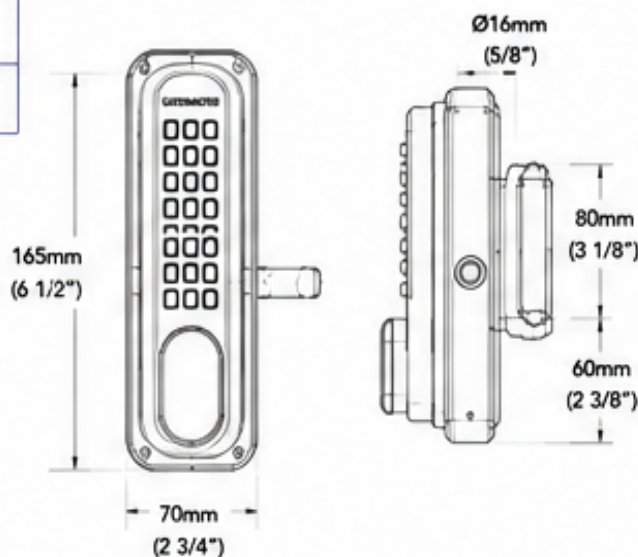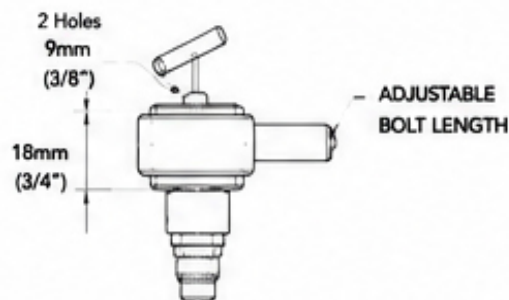


INSTALLATION INSTRUCTIONS

1. Check the gate handing. If left-hand is required, reverse the handing using the instructions below. For right-hand gates, go to step 2.
2. Drill 2 x 9mm (3/8") holes at 140mm (5 1/2") centres for fixing bolts provided.
3. Drill a 18mm (3/4") clearance hole for the latchbolt at 60mm (2 3/8") centres up from the bottom fixing hole.
4. Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
5. Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
6. Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
7. Fix strike plate by either welding or screw fixing onto the gate post.


HOW TO CHANGE HANDING FROM RIGHT TO LEFT HANDING

Handing refers to the side on which the gate is hinged. This determines whether the lock should be set for left-hand or right-hand installation. When standing outside the gate, if the hinges are on the left, the lock must be changed to left-hand setting.

 Left-Hand Lock




Right-Hand Lock

 

OUR LOCKS ARE SUPPLIED RIGHT-HANDED. IF A RIGHT-HANDED LOCK IS REQUIRED, SKIP THE STEPS BELOW AND CONTINUE WITH INSTALLATION.



1. Using the 3mm hex key, unscrew the top screw of the inside keypad.

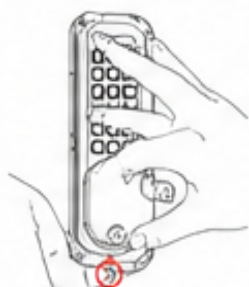

2. Enter the code and turn the handle, then use a 2.5mm hex key to unscrew the bottom screw of the keypad.




3. Refit the keypad on the correct side using the 3mm hex key, ensuring the flat spindle and rubber gaskets are in place. Use a 3mm hex key for the top screw & 2.5mm for the bottom screw. Make sure that the keypad with screws is located on the inside of the gate.



Check that the code and handle work correctly and then follow the instructions install the lock onto the gate.

HOW TO CHANGE THE CODE

1. Check the original code is working on the keypad.
2. Remove the keypad off the lock. To do this, unscrew the two screws fixing the keypad to the panel.
3. Turn the keypad over and remove the 4 screws.
4. Lift off the covering panel carefully as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'

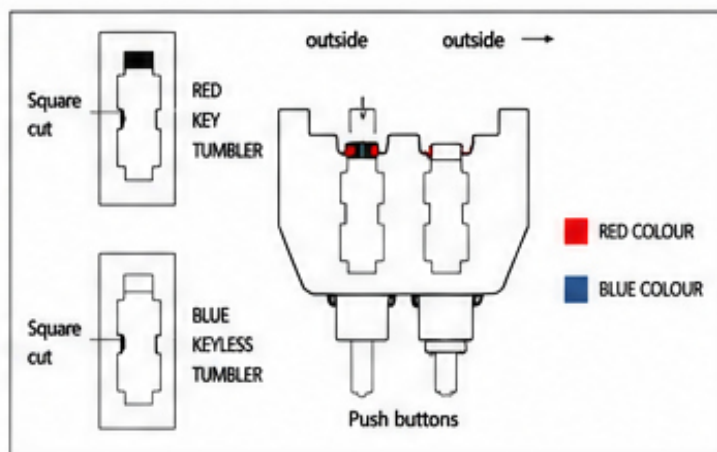

6. Replace the covering panel and tighten the 2 screws
7. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the panel using the 2 screws and reassemble the lock.

MAINTENANCE

6 Monthly:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

