


This quick reference walks you through setting up and using your PAX D135 Bluetooth® wireless PIN pad with your CARDZ3N-powered point of sale.


Contents Checklist

ITEM	QTY.
PAX D135 Terminal	1
USB Cable	1

Product Description

The diagrams below point out the key hardware features of the D135, front and back.

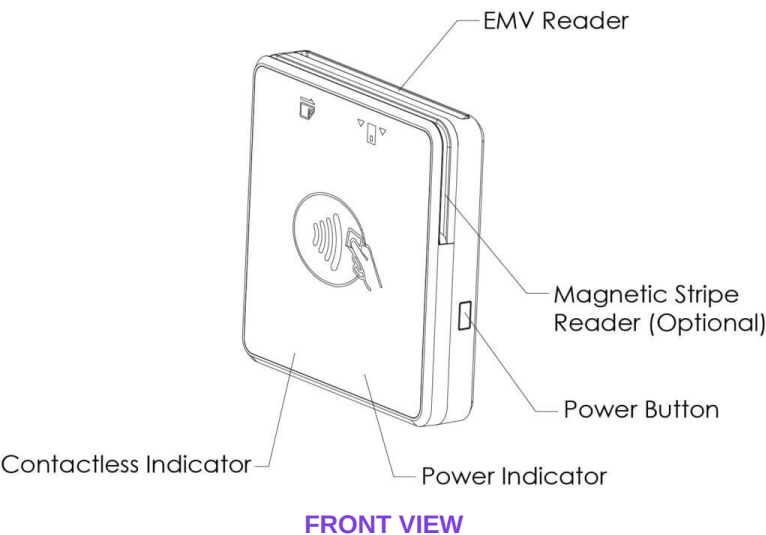

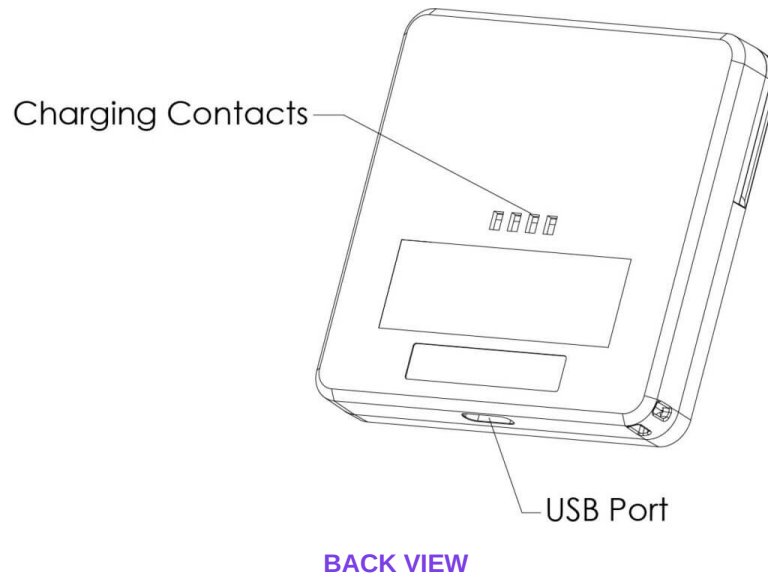

Basic Operating Instructions

Power On / Off

- **Power ON:** Press and hold the power button until the device beeps, then release.
- **Power OFF:** Press and hold the power button. When all four colored lights flash simultaneously, power-down is complete.

Power Indicator

- **Green light on** — more than 20% battery remaining.
- **Red light on** — less than 20% battery remaining.
- **Red light flashing slowly** — insufficient power; the device will shut down automatically.

Charging Indicator

- **Red light flashing slowly** — the device is charging.
- **Green light on (steady)** — the device is fully charged.

Status / Tamper Indicator

The D135 includes hardware and software mechanisms that detect if the terminal has been opened or modified. If tampering is detected, the blue status lights will indicate as follows:

- **Blue indicators 1 and 4 on** — the machine is currently compromised.
- **Blue indicators 1, 2, 3, and 4 all on** — the machine has been tampered with in the past.

In either case, remove the device from service and contact CARDZ3N support before continuing use.

USB Connection

- 1 Turn the D135 on.
- 2 Connect the phone, tablet, or other external device to the D135 using the provided USB cable.

Bluetooth® Wireless Connection

- 1 Turn the D135 on.
- 2 In your device's Bluetooth settings, scan for the D135 signal. By default, the device name is **PAX D135_XXXX**, where XXXX is the last four characters of the D135's MAC address (this name may be customized).
- 3 Pair your device with the D135. If prompted for a passkey during pairing, enter the passkey and confirm to complete the connection.

Card Readers

The D135 supports the following card reader methods:

Magnetic Stripe (Swipe)	Slide the card through the reader slot left-to-right or right-to-left, with the magnetic stripe facing the body of the device. Ensure the card is fully inserted while swiping.
IC / Smart Card (Dip)	Insert the card fully into the reader with the metallic contacts facing up and toward the device.
Contactless (Tap)	Reads cards and devices within roughly one inch. For best results, center the card or device over the indicated area at the top of the terminal, as close as possible.

Cleaning the Device

- Do not use industrial-strength or abrasive cleaners.
- Do not immerse the device in water or any liquid.
- Do not spray water or cleaner directly into the EMV card reader or any port.

Installation & Usage Tips

- If any cable becomes damaged, replace it before continued use.
- Do not insert unknown materials into any port on the D135 — this may cause serious damage.
- If repairs are required, contact a professional technician rather than attempting them yourself.
- Avoid exposing the device to excessive heat, dust, or strong electromagnetic environments.
- Do not vibrate, shake, or drop the device.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by PAX Technology, Inc. is under license. Other trademarks and trade names are those of their respective owners. PAX Technology Inc. reserves the right to change product technology specifications without notice.