

KIENZLE ACTIVE SmartSlim Short instructions



Model no. MU-KI-90A



The complete operating instructions are available in the **MSmartfit app**. You can access training videos on how to use the device at the following internet address https://www.kienzle1822.com/Videos/MU-KI-90A_inst.mp4 or using the following QR code:




COMMISSIONING

- Remove the protective film from the display.
- **Fully charge the smartwatch before using it for the first time:**
 - Connect the smartwatch to the USB charging cable. Make sure that the metal pins of the USB charging cable are exactly on the contact points of the smartwatch. The USB charging cable is held magnetically.
 - Connect the USB charging cable to a USB charger or a powered USB port on your computer.



Contact points

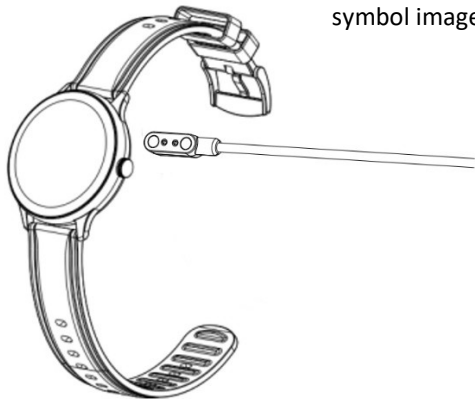

symbol images

Connect the smartwatch to the USB charging cable

- To view the battery charge level on the display during charging, press the button on the side of the smartwatch case.
- When the battery is 100% charged, remove the USB plug from the USB charger or USB port.
- Disconnect the USB charging cable from the smartwatch.

- After charging, press the button on the side of the smartwatch case to turn the smartwatch on.
- Now download the **MSmartfit app** for free from the App Store or Play Store:



- Activate Bluetooth and location on your smartphone.
- Connect the smartwatch to the **MSmartfit app**.
DO NOT connect via the Bluetooth settings on your smartphone!



Compatible Bluetooth® devices: The following devices that have Bluetooth® 5.0 or higher are compatible with the smartwatch and the **MSmartfit app**:

- Smartphones with iOS 12.0 and newer versions
- Smartphones with Android™ 8.0 and newer versions

If you have any **questions**, please contact our customer service:
E-mail: service@kienzle1822.de

WATERPROOFNESS

The watch is waterproof in the following situations:

Rain, splashes, washing hands (splashing water), showering, bathing, swimming: YES

Water sports (e.g. diving): NO

Avoid pressing the button underwater.

WARRANTY

We provide a 24-month guarantee for this product. The guarantee period begins on the date of sale (cash receipt, proof of purchase). During this period, we will repair any defects that are due to material or functional defects free of charge, with the exception of: batteries, improper handling, falls, impacts, etc.

E-mail: service@kienzle1822.de

Safety Instructions/Conformity/Disposal

KIENZLE
1822

Google Play™ and Android™ are trademarks of Google Inc. Apple, the Apple logo, iPad and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc. and are used by Krippel-Electronics GmbH under license. Other trademarks and brand names are the property of their respective owners.

Safety

Intended use

The watch is designed exclusively to record your activities and sleeping habits and to exchange data with smartphones. It is designed to collect data that you can evaluate using the MSmartfit app. The watch is intended for private use only and is not suitable for commercial, therapeutic or medical use. It is not a children's toy. Only use the watch as described. Any other use is considered improper and can lead to property damage or personal injury. The manufacturer or dealer accepts no liability for damage caused by improper or incorrect use.

Safety instructions

WARNING! Risk of injury! Incorrect operation can lead to serious injuries. If you have a pacemaker, consult your doctor before wearing the watch for the first time.

WARNING! Risk of explosion! Batteries can explode if they are heated to a high temperature. Do not heat the watch. Keep the watch away from hot surfaces. Do not throw the watch into an open fire. Protect the watch from direct sunlight. Do not charge the battery in the immediate vicinity of hot surfaces or objects.

WARNING! Dangers for children and people with reduced physical, sensory or mental abilities (e.g. partially disabled people, elderly people with limitations in their physical and mental abilities) or lack of experience and knowledge (e.g. older children). This watch can be used by children aged eight years and above and by people with reduced physical, sensory or mental abilities or lack of experience and knowledge if they are supervised or have been instructed on how to use the watch safely and have understood the resulting risks.

WARNING! Risk of burns from battery acid! Leaking battery acid can cause burns. Avoid contact of battery acid with skin, eyes and mucous membranes. If you come into contact with battery acid, immediately rinse the affected areas with plenty of clean water and seek medical attention.

CAUTION! Risk of injury! Incorrect operation can cause injury. Do not use the watch if it is visibly damaged. Do not open the watch case and leave repairs to specialists. Liability and warranty claims are excluded if you carry out repairs yourself or if you use the watch incorrectly.

NOTE: Risk of damage!

Improper handling of the watch can cause damage. Keep sharp objects away from the watch. Store the watch so that it cannot fall into a tub or sink. Do not remove the battery from the watch; it is permanently integrated and cannot be replaced. Only charge the empty battery using the USB charging cable provided with a USB charger (5V DC max. 0.5A) or a powered USB port on your computer. Use the watch at an ambient temperature between -10 °C and +45 °C. Do not place any objects on the watch and do not apply pressure to the display. Avoid very strong magnetic fields (e.g. mobile phones, TV sets, hair dryers, electric shavers, electric welding equipment, transformers), as otherwise deviations in the transmission of the measured data may occur.

NOTE: Risk of damage! Connecting the watch to the USB charging cable incorrectly can cause the watch or the cable to heat up. Make sure that the metal pins of the USB charging cable are exactly aligned with the contact points on the watch.

Technical data:

Watch: Frequency range: 2402 - 2480 MHz

Maximum transmission power: -3,31 dBm

Battery: Type: Lithium-ion polymer battery
Voltage: 3.7 V

Capacity: 145 mAh

Charging current: 0.5A

Cleaning the watch

NOTE: Risk of damage! Improper cleaning can lead to damage.

Do not use aggressive cleaning agents, brushes with metal or nylon bristles or sharp or metallic cleaning objects. Make sure that the optical sensor on the bottom of the case is free of deposits. This will ensure accurate pulse measurement.

Storing the watch

NOTE: Risk of damage! Improper handling of the watch can lead to damage. Store the watch in a clean and dry place between -10 °C and +50 °C. Keep the watch away from direct sunlight.



Declaration of conformity: Krippel-Electronics GmbH hereby declares that the radio equipment type Smartwatch MU-KI-90A complies with Directive 2014/53/EU (RED) and Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <https://www.kienzle1822.de/anleitungen>



Dispose of packaging: Dispose of packaging separately. Put cardboard and cartons in the waste paper bin and foil in the recycling bin.

Dispose of your watch: Old devices must not be disposed of in household waste!



This symbol indicates that, according to the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national law, this product must not be disposed of with household waste. This product must be returned to a designated collection point. This can be done, for example, by returning it when purchasing a similar product or by handing it in to an authorized collection point for the recycling of waste electrical and electronic equipment. We hereby draw your attention to the obligation of distributors to take back old equipment free of charge under certain conditions. Incorrect handling of old equipment can have negative effects on the environment and human health due to potentially hazardous substances that are often contained in waste electrical and electronic equipment. By disposing of this product correctly, you will also contribute to the effective use of natural resources. Information about collection points for old equipment can be obtained from your local council, public waste disposal authority, an authorized body for the disposal of waste electrical and electronic equipment or your waste disposal service. We hereby point out that the end user is responsible for deleting personal data from the old device to be disposed of.

Batteries and rechargeable batteries must not be disposed of in household waste!

Batteries contained in electrical devices must, if possible, be removed from the device and disposed of separately. However, the battery in this watch is permanently integrated and cannot be removed.



As a consumer, you are legally obliged to hand in all batteries and rechargeable batteries, regardless of whether they contain harmful substances* or not, to a collection point in your community/district or to a retailer so that they can be disposed of in an environmentally friendly manner. Only hand in the battery to your collection point when it is discharged. *marked with: Cd = cadmium, Hg = mercury, Pb = lead