

NOTE: The device must be using firmware version RC15 or later. In order for the commands to work the user must switch the Universal Remote function. You can do this by accessing the devices settings menu > IR Control and then switch to Universal remote.