

Unplugging the EGRcooler

If you are doing emissionoff tuning for your truck but are leaving the EGRcooler in place, unplug these connectors to not have warning codes

6.4L Powerstroke EGRPlugs to be undone

Step One: The two plugs circled are the only two plugs required to remove located on the front of the engine near the fan shroud

