

## EGR AND INLET AIR VALVE POWER SUPPLY

IF YOU LIVE IN A COUNTRY OR PROVINCE WHERE THERE ARE NO EMISSIONS LAWS AND YOU HAVE OPTED TO REMOVE THE EMISSIONS SYSTEM OFF OF YOUR L5P THEN YOU WILL NEED TO DISCONNECT THE EGR VALVE POWER SUPPLY AND THE INLET AIR VALVE POWER SUPPLY. DETAILED PICTURES OF THE LOCATIONS ARE BELOW.



