

Replacing Solenoid NK 100-EVO



Solenoid

Notice: Always make sure the power is off to compressor and contact the manufacturer for advice.

Call 800-531-9656 to find a local trained air compressor service technician.

WARNING: To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

Compressed Air Systems

Simplicity. It's What We Do.

compressed-air-systems.com | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website



Step 1

Shut off the main power supply.

Step 2

Remove Solenoid bolts.



Step 3

Solenoid plunger assembly.

Note: It is recommended to replace this when you replace the solenoid.



Step 4

Remove solenoid electrical connection



Electrical connection removed



Compressed Air Systems, LLC

600 S 2nd Ave
Mansfield, TX, 76063

1-800-531-9656

Fax 972-352-6364

Simplicity. It's What We Do.