

# Replacing Solenoid NK30-31



Solenoid

**Notice:** Always make sure the power is off to compressor and contact the manufacturer for advice.

**Call 800-531-9656 to find a local trained air compressor service technician.**

**WARNING:** To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

## Compressed Air Systems

Simplicity. It's What We Do.

[compressed-air-systems.com](http://compressed-air-systems.com) | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website



## Step 1

Shut off the main power supply.


## Step 2

Unscrew and remove solenoid electrical connections set screw.




## Step 3

Remove solenoid electrical connection.

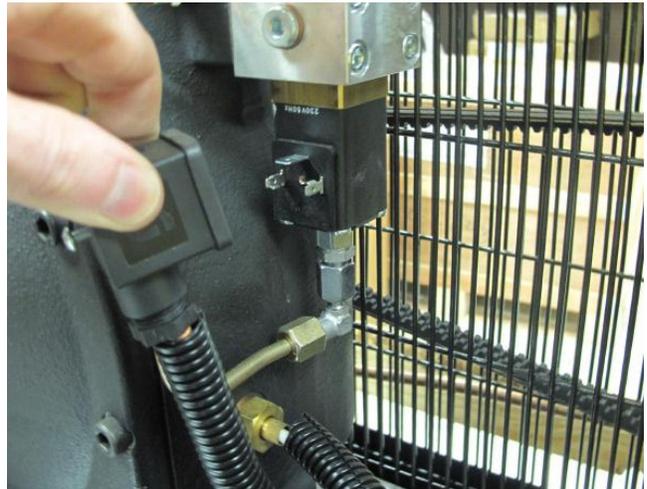

## Step 4


Remove solenoid electrical connection

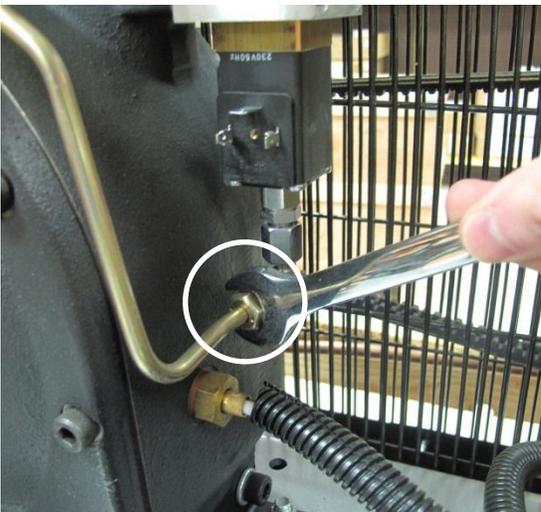

Control air line removed

## Step 5

Remove solenoid bolts (solenoid will fall off control block once removed).

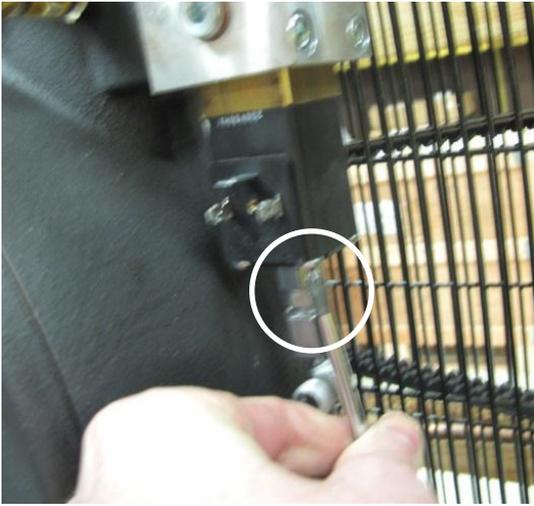

Solenoid removed

## Step 6

Install the new solenoid.





**Compressed Air Systems, LLC**

600 S 2nd Ave  
Mansfield, TX, 76063

**1-800-531-9656**

Fax 972-352-6364

**Simplicity. It's What We Do.**