


Replacing Centrifugal Unloader Elbow

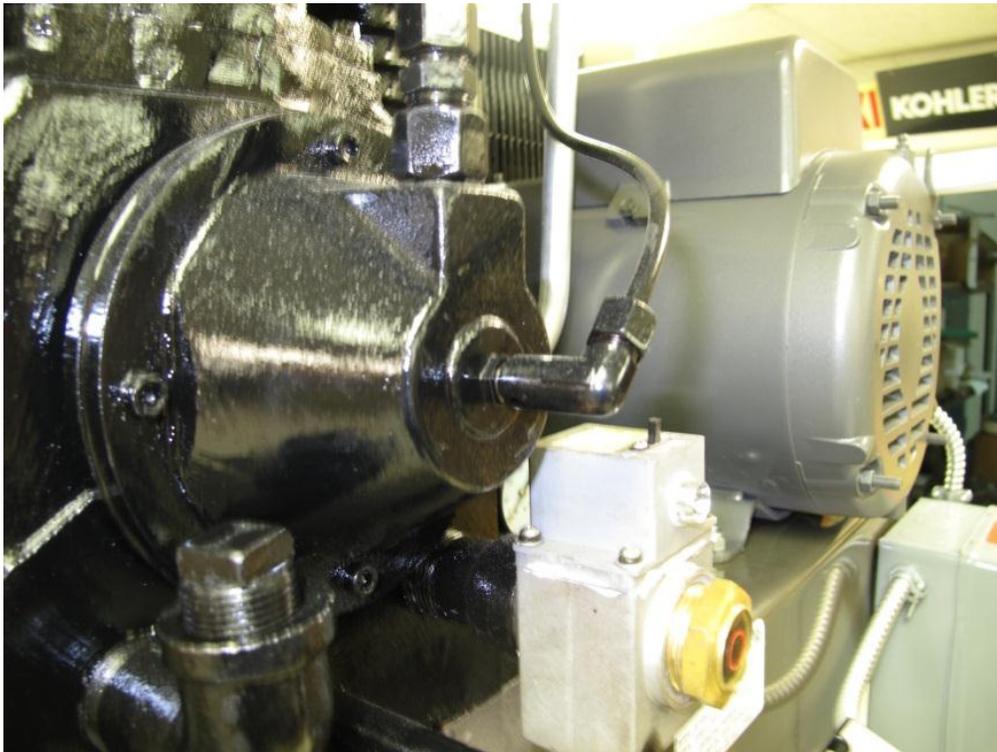

Notice: Notice: Always make sure the power is off to compressor and contact the manufacturer for advice.

Call 800-531-9656 to find a local trained air compressor service technician.

WARNING: To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

Compressed Air Systems

Simplicity. It's What We Do.

compressed-air-systems.com | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website




Step 1

Before changing Magnetic starter and power is off.

Warning: Injury can occur if this is not done.

Step 2



Remove air line from unloader elbow.

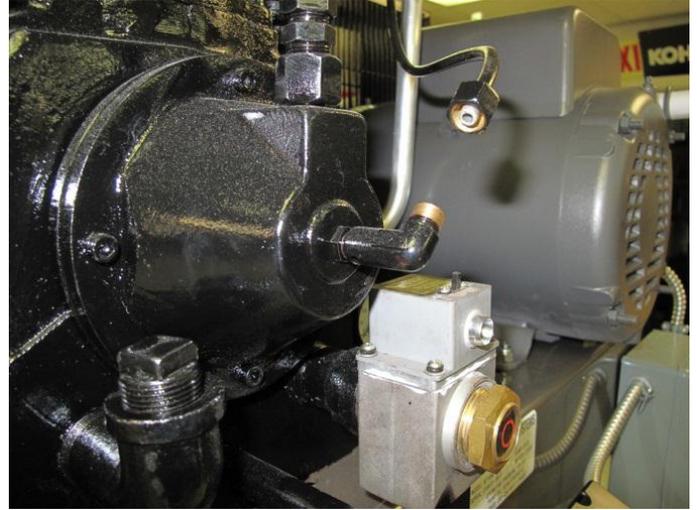

Unloader air line removed.

Step 3

Remove old unloader elbow.

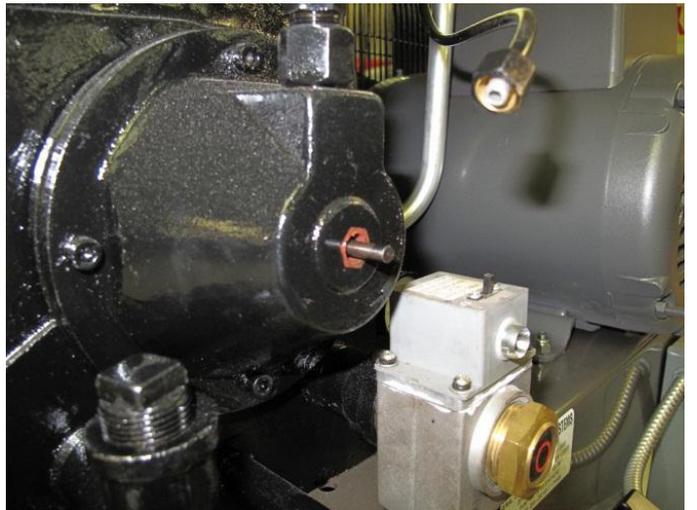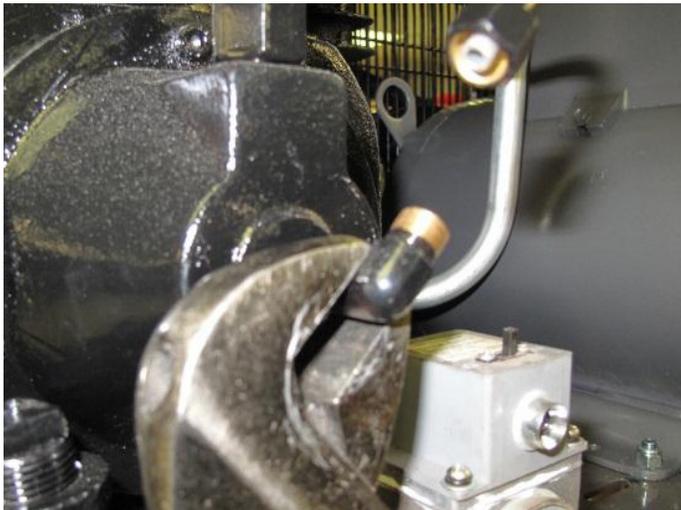

Unloader elbow removed. Centrifugal unloader pin visible in stationary position.

Step 5

New Unloader elbow installed. Centrifugal unloader pin depressing elbow pin 1/8 inch in stationary position.



Step 6

Lock nut installed against unloader cone.



Step 7

New unloader elbow installed in proper position with unloader line installed.





Compressed Air Systems, LLC

600 S 2nd Ave
Mansfield, TX, 76063

1-800-531-9656

Fax 972-352-6364

Simplicity. It's What We Do.