

# Replacing Temperature Switch



**Notice:** Always make sure the power is off to compressor and contact the manufacturer for advice.

**Call 800-531-9656 to find a local trained air compressor service technician.**

**WARNING:** To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

## Compressed Air Systems

Simplicity. It's What We Do.

[compressed-air-systems.com](http://compressed-air-systems.com) | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website



## Step 1

Shut off the main power supply.

## Step 2

Remove temperature switch bracket nuts.





## Step 3

Temperature switch bracket and nuts remove.



## Step 4

Unscrew probe fitting from port.

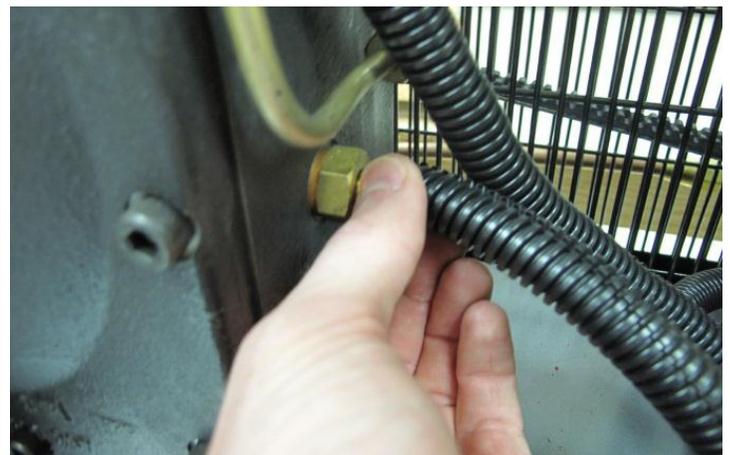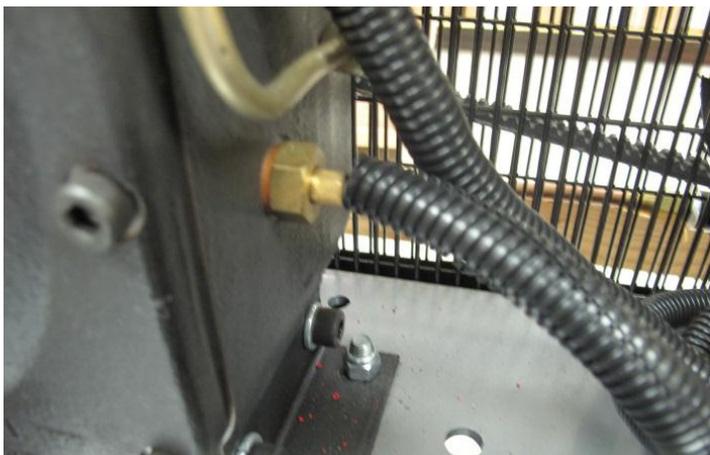


Step 4

Probe removed from fitting.



Step 5


Remove wire incoming nut and cover set nuts

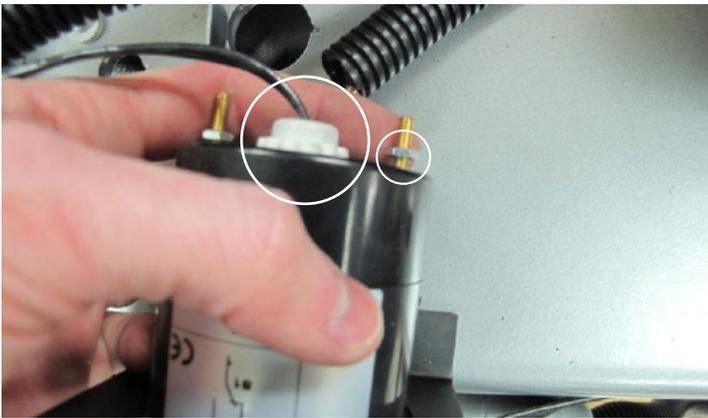

Step 6

Remove incoming wires from positions 1 and 2.

**Note:** Mark wires to make sure they go back in the same place.

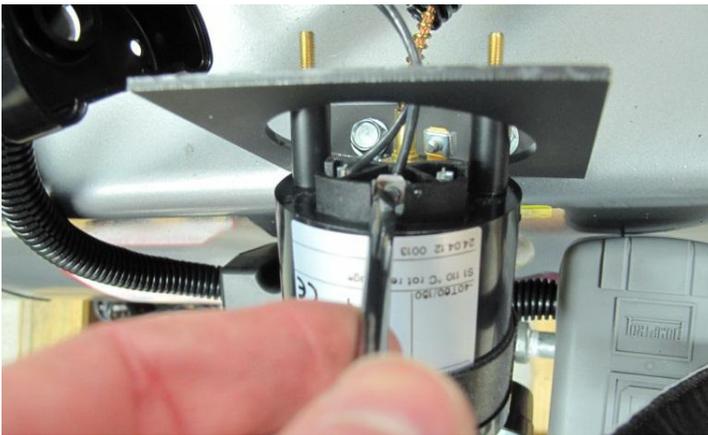

Wires removed from old switch

## Step 7

Install wires back into positions 1 and 2 on new switch.



## Step 8

Put new switch installed back in place.





**Compressed Air Systems, LLC**

600 S 2nd Ave  
Mansfield, TX, 76063

**1-800-531-9656**

Fax 972-352-6364

**Simplicity. It's What We Do.**