


Cleaning Pneumatic Auto Tank Drain

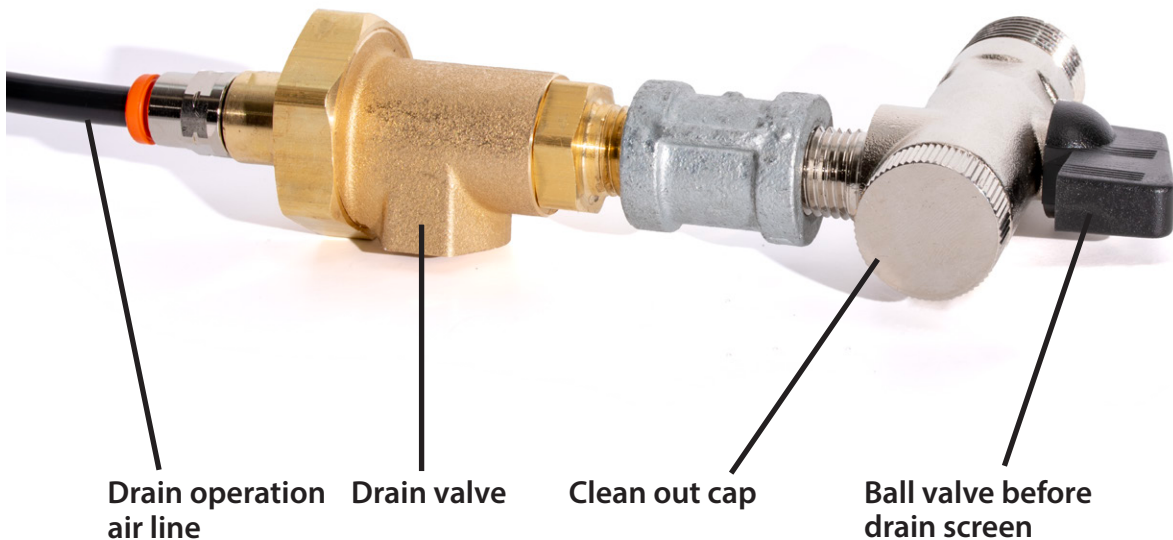

Notice: Always make sure the power is off to compressor and contact the manufacturer for advice.

Call 800-531-9656 to find a local trained air compressor service technician.

WARNING: To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relive all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

Compressed Air Systems

Simplicity. It's What We Do.

compressed-air-systems.com | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website



Step 1

Shut off the main power supply.


Step 2

Unscrew and remove drain clean out cap.



Step 3


Remove drain screen out of the auto tank drain.
Wash drain screen until no debris is visible.

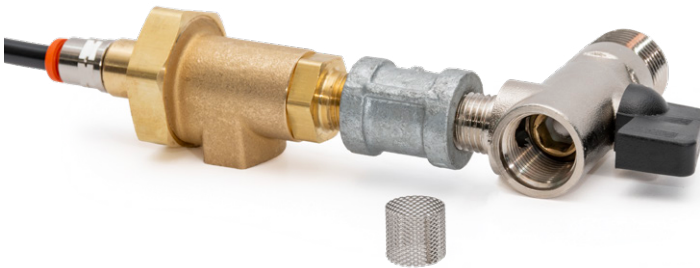

Step 4

Notice: Before and during Step 4, DO NOT directly look at drain opening air pressure.
Debris will come out of the opening.

With drain screen removed, open the ball valve to ensure drain is open and drained.

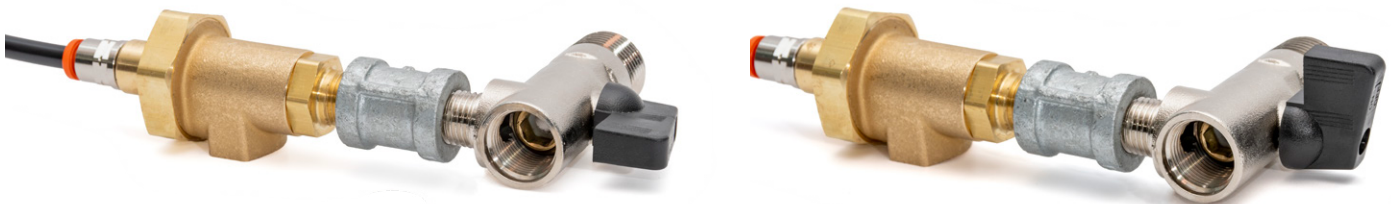

Step 5

Once drain is clean, place drain screen and clean out cap back in place.



Compressed Air Systems, LLC

600 S 2nd Ave
Mansfield, TX, 76063
1-800-531-9656
Fax 972-352-6364

Simplicity. It's What We Do.