

Cleaning Electric Auto Tank Drain



Notice: Always make sure the power is off to compressor and contact the manufacturer for advice.

Call 800-531-9656 to find a local trained air compressor service technician.

WARNING: To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

Compressed Air Systems

Simplicity. It's What We Do.

compressed-air-systems.com | 1-800-531-9656 | Fax 972-352-6364

© Compressed Air Systems, LLC



Scan to visit our website



Step 1

Shut off the main power supply.

Step 2

Turn drain shut off ball valve to closed position.

Step 3

Slowly remove drain clean out cap.

Step 4

Remove drain filter screen.

Step 5

Clean drain filter screen.

Step 6

Slowly open drain ball valve with pressure in the tank to blow any debris that might be in the discharge flow path.

Warning: Do not look at drain discharge during this step

Step 7

Close the drain ball valve.



Step 8

Re-install the drain screen and drain clean out cap

Step 9

Open ball valve and push the test button on the drain to ensure proper function.

Sometimes this has to be repeated 2-3 times.

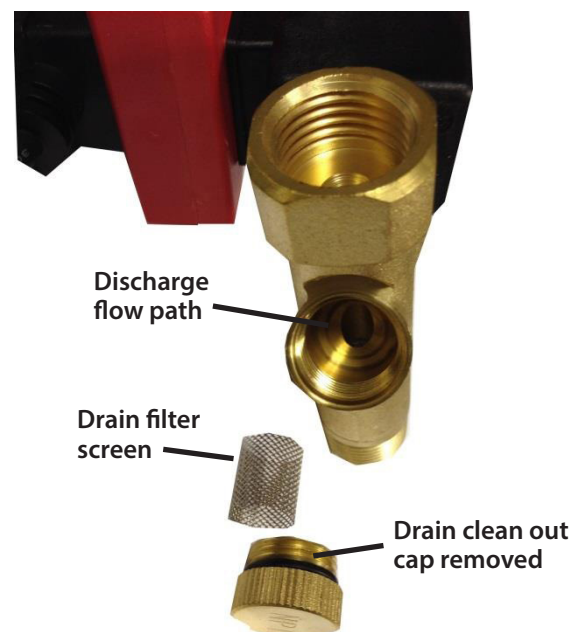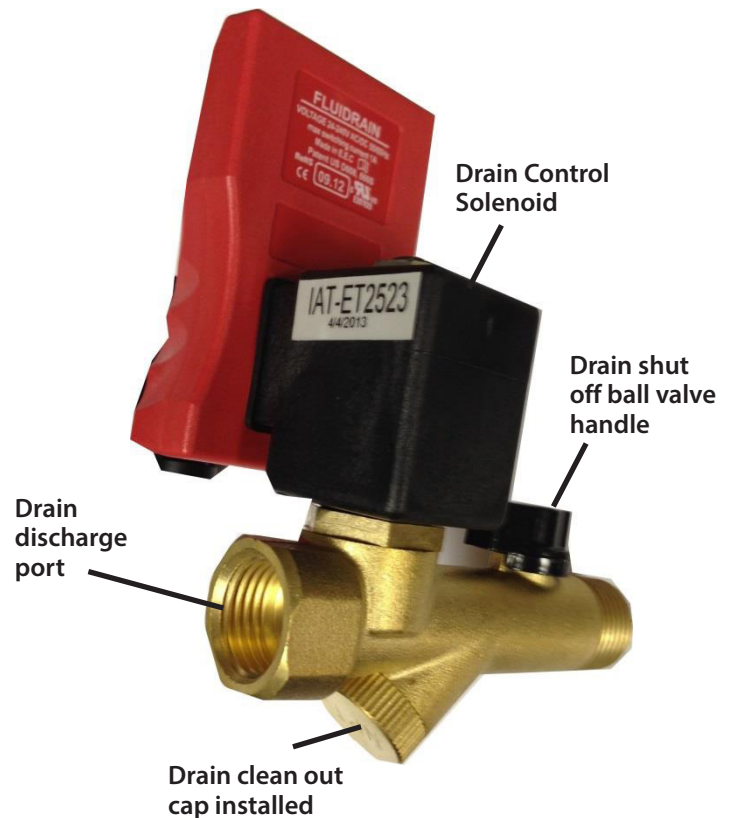



Compressed Air Systems, LLC

600 S 2nd Ave
Mansfield, TX, 76063

1-800-531-9656

Fax 972-352-6364

Simplicity. It's What We Do.