




Installation Instructions for Merchandiser Graphic on Dispenser with Icemaker Adaptor

WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

ED250 Model:

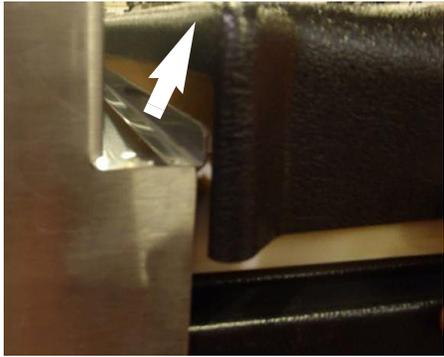
		
<p>1. Remove ice maker lid from the top of the dispenser.</p>	<p>2. Lift up on the merchandiser and disengage the hooks from the sheet metal cabinet.</p>	<p>3. Place the merchandiser face down on a counter. Loosen the three screws holding the retainer tabs.</p>
		
<p>4. Bend the top lip of the merchandiser back slightly to release the diffuser and graphic.</p>	<p>5. Replace the graphic in the diffuser.</p>	<p>6. Insert the diffuser with the graphic by bending the top lip of the merchandiser to engage the retainer. Position retainers and tighten the three screws.</p>




Installation Instructions for Merchandiser Graphic on Dispenser with Icemaker Adaptor



7. Place merchandiser on the beverage panel and insert the merchandiser brackets into the sheet metal cabinet slots. Push merchandiser down to engage hooks.

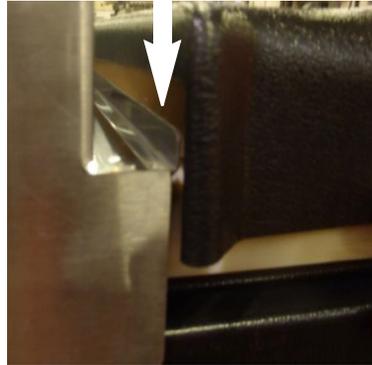

8. Return the lid to its proper position on top of the dispenser, aligning the lid flange with the flange of the adapter.

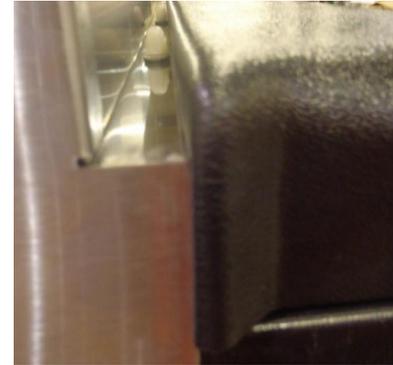

9. The lid flange must sit flush to the adapter between the nylon acorn nuts and the adapter flange.

NOTE: The lid has to engage the adapter flange to be secured properly.

IDC255 Model:



1. IDC graphic is changed from the front by pressing the graphic down with both hands. Reverse the process by inserting the graphic tabs into the merchandiser.

NOTE: For IDC255 units, the merchandiser and lid do not need to be removed in order to replace the graphic.