



IMI CORNELIUS INC ■ One Cornelius Place ■ Anoka, MN 55303-6234


Telephone (800) 238-3600

Facsimile (800) 535-4231

INSTALLATION INSTRUCTIONS

PUSH LEVER ASS'Y KIT (P/N 151607000) OR (P/N 151674000) ON SELF-CLOSING DISPENSING VALVE

Read and understand these instructions thoroughly before installing this kit. Retain these instructions as part of your equipment manual.

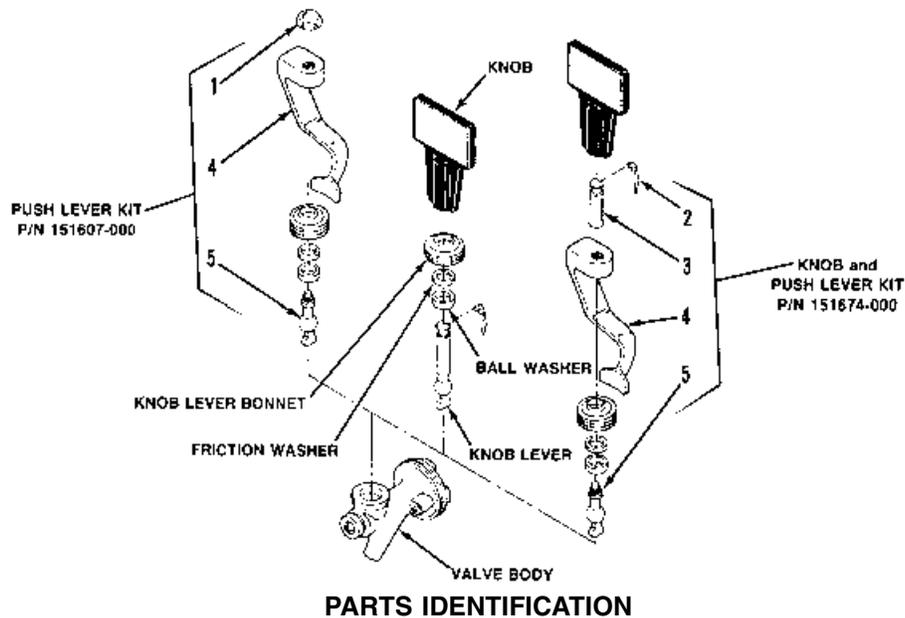

LOOSE-SHIPPED PARTS

Loose-shipped parts are shown in above illustration and are listed in table below.

Table 1. Loose-Shipped Parts

Item No.	Part No.	Name	Qty.
KIT (P/N 151607000)			
1	110666000	Hex Knob	1
4	151704000	Push Lever	1
5	150375000	Knob Lever	1
6	151629000INS	Kit Instructions	1
KIT (P/N 151674000)			
2	151062000	Retaining Spring	1
3	151672000	Upper Lever	1
4	151704000	Push Lever	1
5	150375000	Knob Lever	1
6	151629000INS	Kit Instructions	1

IMPORTANT: Only qualified Personnel should install this kit.

UNPACKING KIT

NOTE: Item numbers of applicable kit parts list are in reference to item numbers on illustration.

Unpack and inspect the kit. Make sure all items in kit are present and in good condition.

INSTALLATION

1. Remove knob.
2. Remove and retain knob lever bonnet, friction washer, and ball washer.
3. Pull knob lever from slot in shaft and seat assembly of valve body. Knob lever is surplus.
4. Push KNOB LEVER (item 5) into slot of shaft and seat assembly in valve body.

Install ball washer and friction washer as shown in the illustration, then install and tighten the knob lever bonnet.

5. Install PUSH LEVER (item 4) on KNOB LEVER (item 5). Align push lever on knob lever so center point of push surface on push lever is aligned with center point of dispensing valve outlet, then place push lever down on splines of knob lever.
6. On dispensing valve not using KNOB (item 1).
 - A. Screw HEX KNOB (item 1) on KNOB LEVER (item 5) to secure push lever in position.
7. On dispensing valve using knob.
 - A. Install RETAINING SPRING (item 2) on UPPER LEVER (item 3).
 - B. Install knob on UPPER LEVER (item 3).
 - C. Screw knob and upper lever assembly on KNOB LEVER (item 5). DO NOT overtighten.
8. Test dispensing valve for proper operation.