



IMI CORNELIUS INC ■ One Cornelius Place ■ Anoka, MN 55303-6234


Telephone (800) 238-3600

Facsimile (612) 422-3246

INSTALLATION INSTRUCTIONS

LEVER-ACTUATING CONVERSION KIT (P/N 3429) ON SELF-SERVE SF-I DISPENSING VALVE

The purpose of the Lever-Actuating Conversion Kit (P/N 3429) is to convert the Self-Serve SF-1 dispensing valve from a push-button actuated valve to a lever-actuated valve. Retain these Instructions as part of your equipment manual.

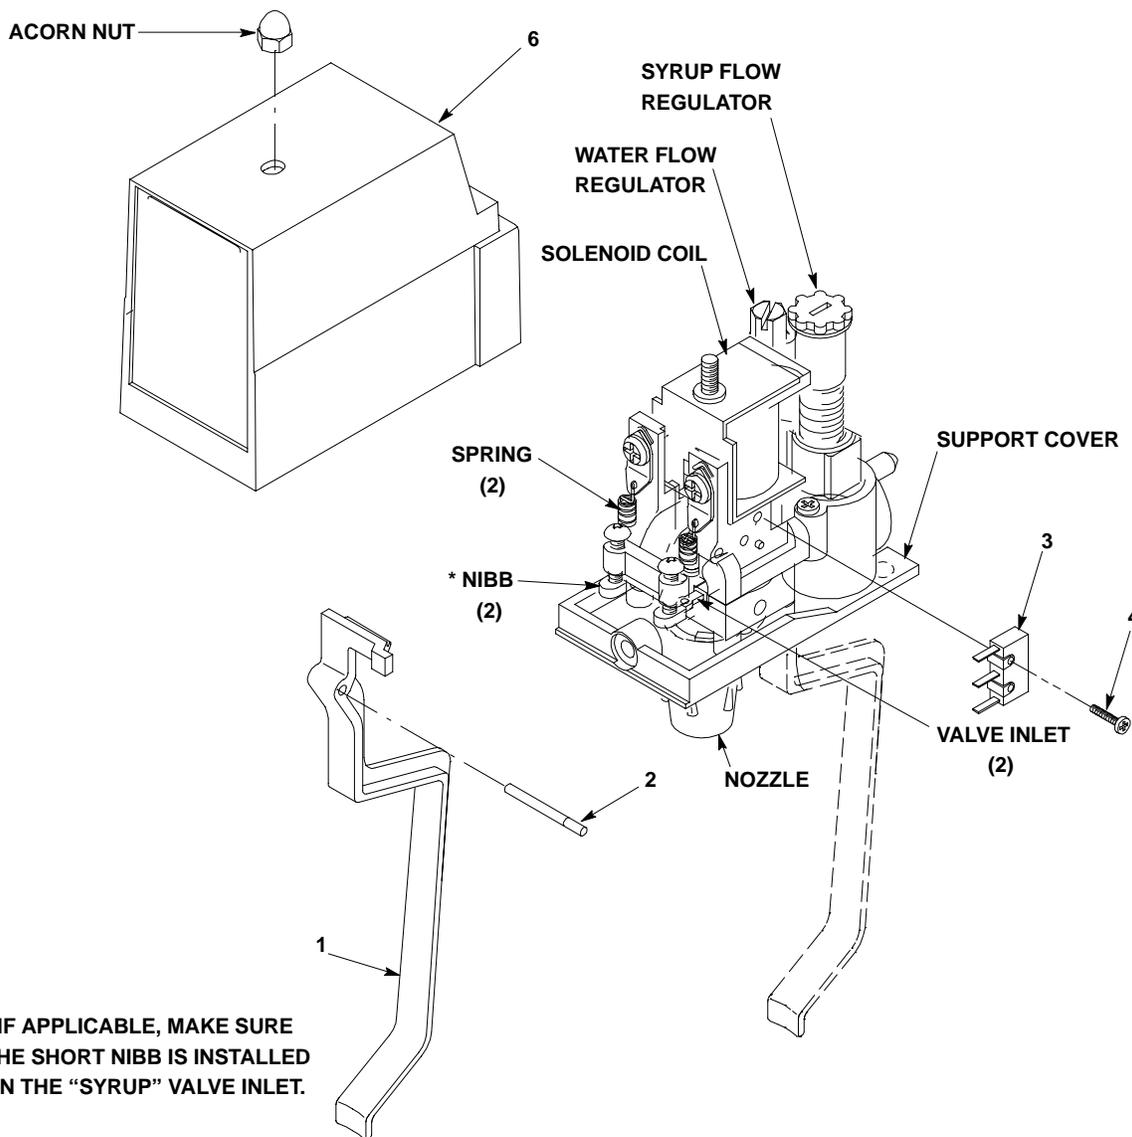


* IF APPLICABLE, MAKE SURE THE SHORT NIBB IS INSTALLED ON THE "SYRUP" VALVE INLET.

Table 1. Loose-Shipped Parts			
Item No.	Part No.	Name	Qty.
1	3282	Actuating Lever	1
2	317820000	Groove Pin, Actuating Lever	1
3	317783000	Micro Switch	1
4	317825000	Machine Screw, Phil Truss Hd; No. 2-56 by 7/16 Long	1
5	317821000	Wiring Harness, (connected to micro switch)	1
6	317884011	Dispensing Valve Cover	1
7	317905661	Decal Kit, (12 Decals)	1

Note: Only qualified personnel should install this kit.

1. Remove cover from the dispensing valve.
2. Disconnect dispensing valve wiring harness connector from Dispenser wiring harness mating connector.
3. Remove dispensing valve from the Dispenser.
4. Disconnect the self-serve dispense switch red and white electrical wires from the two solenoid coil terminals.
5. Remove self-serve dispense switch from the dispensing valve.
6. Remove nozzle and syrup distributor from the dispensing valve.
7. Remove support cover from bottom of the dispensing valve.
8. Remove valve block from the dispensing valve.
9. Remove solenoid coil and the valve inlets from the dispensing valve.
10. Place ACTUATING LEVER (item 1) in position in dispensing valve.
11. Reinstall valve inlets and solenoid coil on the dispensing valve. MAKE SURE THE VALVE INLETS ARE PROPERLY INSTALLED. IMPROPERLY INSTALLED VALVE INLETS WILL NOT ALLOW THE VALVE INLETS TO OPEN AND CLOSE PROPERLY. IF APPLICABLE, MAKE SURE THE SHORT NIB IS INSTALLED ON THE "SYRUP" VALVE INLET.
12. Place GROOVE PIN, ACTUATING LEVER (item 2) in actuating lever, then place lever in position on the dispensing valve.
13. Place valve block in position on the dispensing valve.
14. Place support cover in position on the dispensing and secure with four screws.
15. Install MICRO SWITCH (item 3) on the dispensing valve and secure with MACHINE SCREW (item 4).
16. Connect two electrical wires on the micro switch wiring harness to two terminals on the solenoid coil.
17. Reinstall dispensing valve on the Dispenser.

18. Connect dispensing valve wiring harness connector to mating connector on the Dispenser wiring harness.
19. Reinstall nozzle and syrup distributor on the dispensing valve.
20. Test dispense the dispensing valve for proper operation.
21. Install DISPENSING VALVE COVER (item 6) on the dispensing valve.

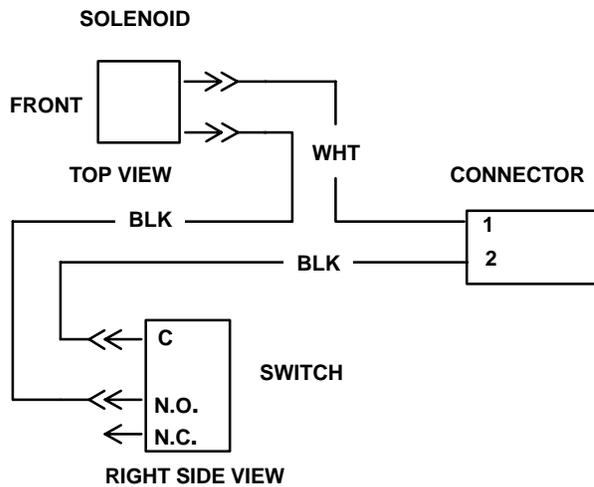

WIRING DIAGRAM

