

INSTALLATION INSTRUCTIONS

SEV SYRUP SEPARATOR

1. Remove valve nozzle.
2. With the arm of the Syrup Separator facing the front of the valve, push the separator up to the valve body. The notches in the rim of the Syrup Separator fit over the two (2) screws. Turn the Syrup Separator to the right (as you face the valve) to lock it in place.
3. Hold the Brix Cup below the Syrup Separator in the proper position ensuring syrup chamber is under spout, actuate the valve so that the syrup and water are dispensed into their respective Brix Cup sections.
4. When the ratio of water-to-syrup is satisfactory, remove the syrup Separator and replace the valve nozzle.

