

# INSTALLATION INSTRUCTIONS

## SEV Syrup Separator

### SAFETY INSTRUCTIONS

**WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### QUALIFIED SERVICE PERSONNEL

**WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

### SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

**WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.

**Failure to keep this area clean may result in injury or equipment damage.**

## INSTRUCTIONS

1. Remove valve nozzle.
2. With the arm of the Syrup Separator facing the front of the valve, push the separator up to the valve body. The notches in the rim of the Syrup Separator fit over the two (2) screws. Turn the Syrup Separator to the right (as you face the valve) to lock it in place.
3. Hold the Brix Cup below the Syrup Separator in the proper position ensuring syrup chamber is under spout, actuate the valve so that the syrup and water are dispensed into their respective Brix Cup sections.
4. When the ratio of water-to-syrup is satisfactory, remove the syrup Separator and replace the valve nozzle.

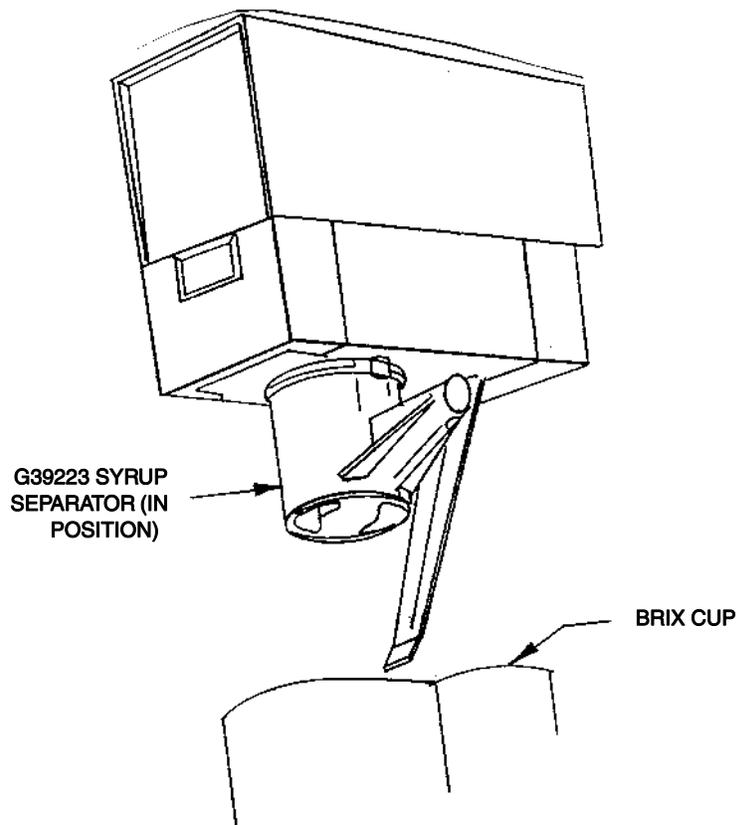


Figure 1.