




ADJUSTMENT PROCEDURE FOR CODED AUTOSET PORTION CONTROL WITHOUT TOP OFF FEATURE

The following are instructions for adjusting the Coded Autaset Portion Control for size of drinks dispensed. Retain these instructions as part of your equipment manual.

ADJUSTING PORTION CONTROL FOR SIZE OF DRINKS DISPENSED

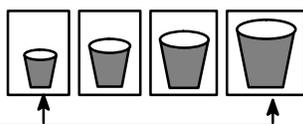

1. Simultaneously, press and hold  push button switches on Coded Autaset Portion Control Module until LED light in center of module starts blinking, then release switches. Blinking LED indicates set mode is active.
2. Put desired amount of ice in cup, place cup under valve and push selected size button (small, medium, large, or extra large). Hold button in until cup fills to desired portion then release button. Repeat the above procedure for remaining sizes.
3. After programming all drinks sizes, press and release "CANCEL/POUR"  to return the Coded Autaset Portion Control to the operational mode. Blinking LED light will go out.

If at a future date, it is decided to change portion size of the drinks, the individual sizes can be adjusted by the above procedure. It is not necessary to reprogram every size.

CANCEL/POUR:

1. Push and release to cancel or stop valve dispensing;
2. Push and hold for continuous pour;

The portion control has full memory retention when programming and in case of power failure.

IMI CORNELIUS COMPANY-P.O. BOX 1527-MASON CITY, IOWA 50402
AC 515-424-9324-TOLL FREE 1-800-531-5767-FAX 515-424-3601

INSTALLATION INSTRUCTIONS FOR CODED AUTO SET PORTION CONTROL CCUSA ITEM NUMBER 21974 FOR A SINGLE SOLENOID VALVE

The auto set portion control operates on 24 volts AC. The control will adapt to a "SABRE" style (Single Solenoid Valve).

INSTALLATION

1. Remove the front cover by sliding it up, loosen screw on front of valve and remove rear cover.
2. Disconnect the valve 24 volt A.C. electrical (white plug) from the dispensing valve connector.
3. Remove the entire valve wiring harness from the dispensing valve (valve lever and micro switch can be removed if desired).
4. Attach the portion control wiring harness as shown in Figure 1.
5. Replace rear cover on the valve and tighten the screw.
6. Slide portion control cover in place.
7. Refer to adjustment procedure for setting valve for proper operation.

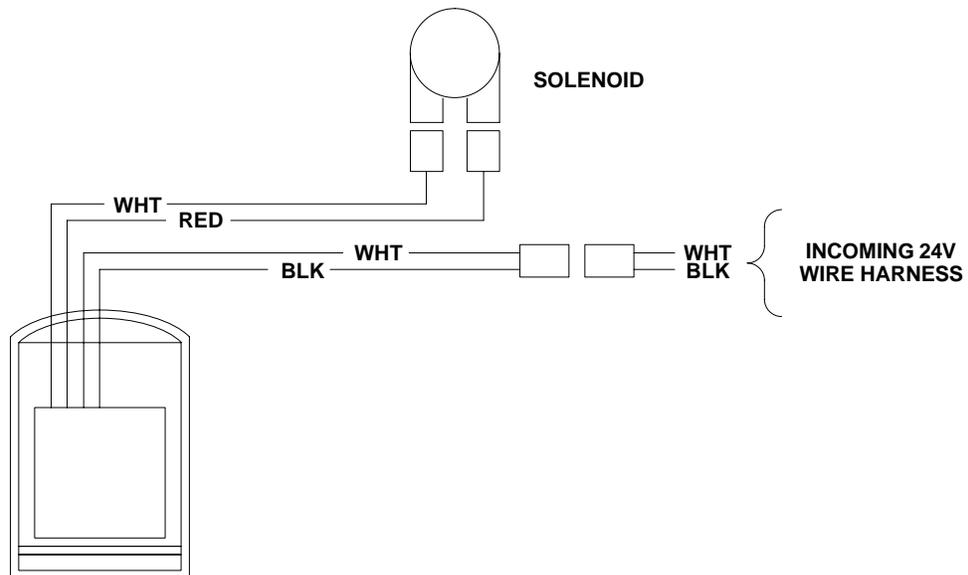


FIGURE # 1