
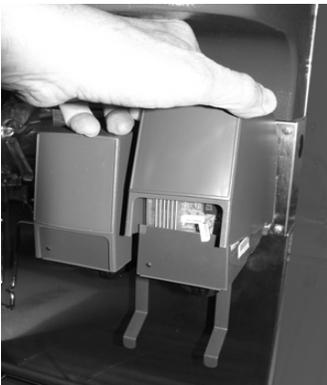
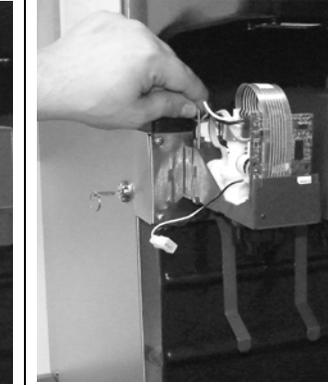
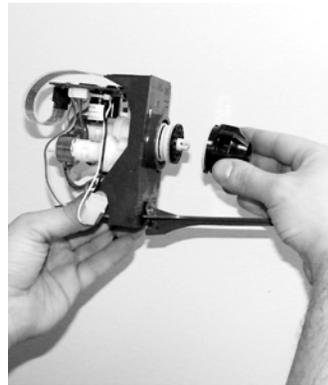
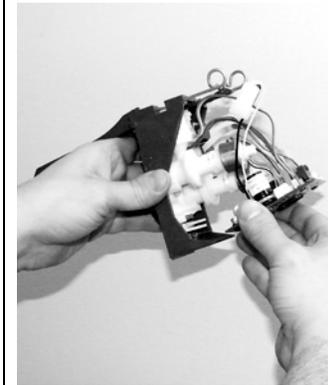
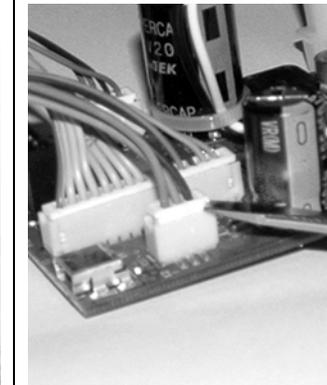
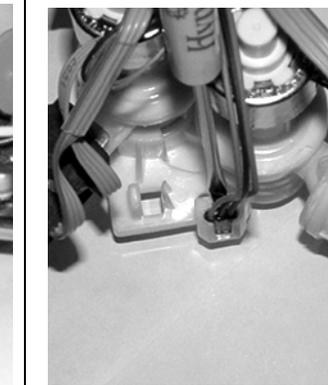
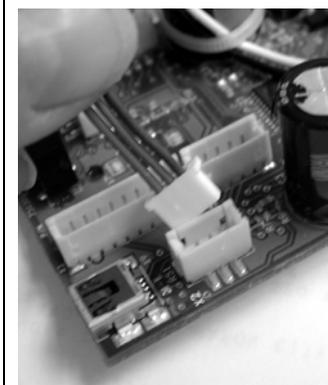
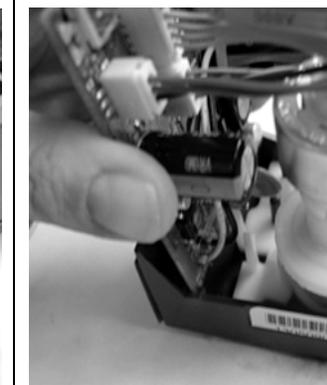




⚠ CAUTION - Only trained and certified technicians should service this unit. ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES.

				
1. Remove Cover	2. Close Backblock	3. Dispense to release pressure	4. Unplug Power Connector	5. Remove Retaining Spring
				
6. Remove Valve	7. Remove Nozzle/Diffuser	8. Unplug Keypad & Remove PCB	9. Remove the switch connector	10. Remove switch by pressing retainer with small screwdriver
				
11. Replace switch in mixing body.	12. Proper placement of Lever Switch	13. Replace switch connector on PCB	14. Align PCB w/ slots & push into base	15. Snap assembly back into base

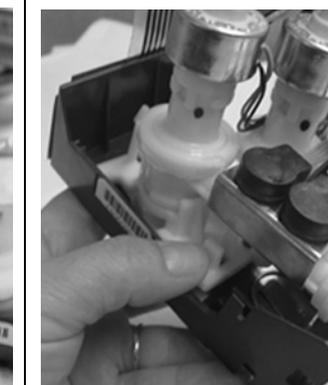

Leopard *ERV*TM Lever Switch Replacement Guide

Revision: C

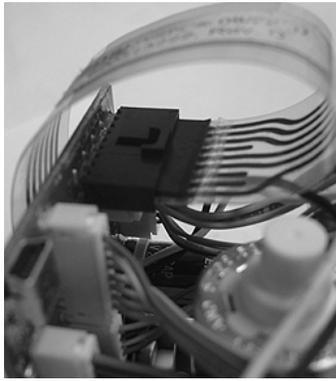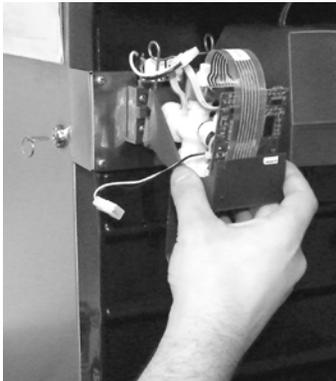 <p>16. Reconnect keypad connector to PCB</p>	 <p>17. Replace diffuser and nozzle</p>	 <p>18. Replace valve onto the unit</p>	 <p>19. Reconnect power connector</p>	<p>20. For Portion Control Valves:</p> <p>Check and verify that portion sizes are correct. If not, perform the manual portion procedure. (Refer to TomCat manual for details. Part No. 620920851INS)</p> <p>For Lever or Pushbutton Valves: Dispense product for 4 to 5 seconds.</p>
<p>If problems are encountered, contact Cornelius Technical Support at 1-800-238-3600.</p>				