





**CAUTION** - Only trained and certified technicians should service this unit. ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES.

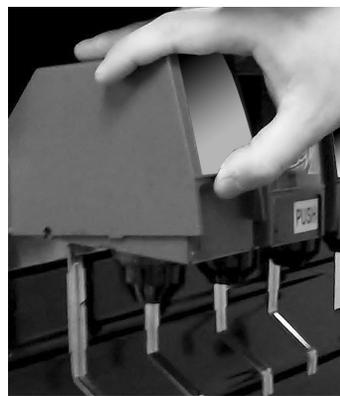

1. Remove Cover

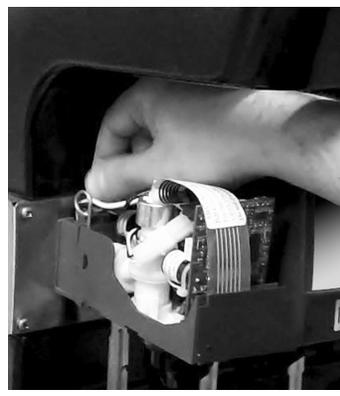

2. Close Backblock



3. Dispense to release pressure




4. Unplug Power Connector




5. Remove Retaining Spring




6. Remove Valve

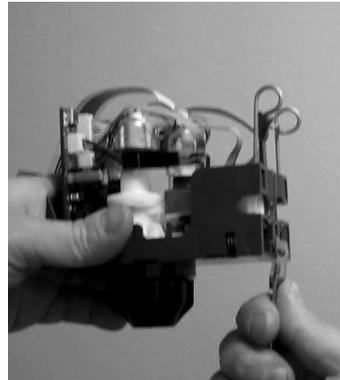


7. Grasp Valve body and lever

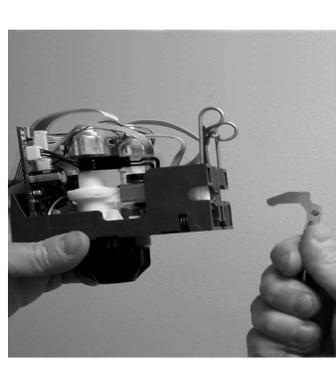

8. Pull lever straight out rear of valve

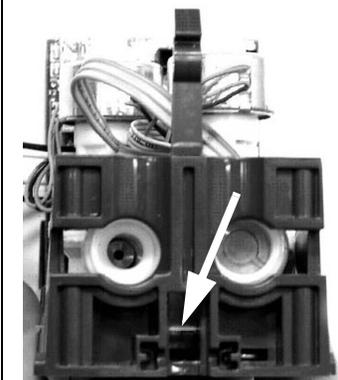

9. Angle the new lever so the end goes over top of spring

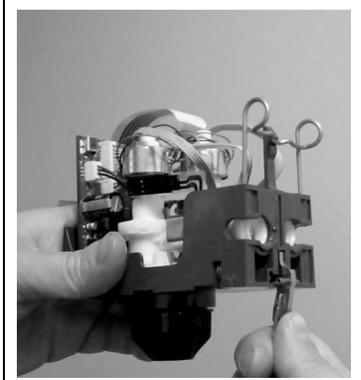

10. Push lever into support base until lever pins are in pivot points



11. Replace valve, retaining spring & open Backblock



12. Press down the Retaining Spring & open the Backblocks.



13. Reconnect power connector

**14. For Portion Control Valves:**

Check and verify that portion sizes are correct. If not, perform the manual portion procedure. (Refer to TomCat manual for details. Part No. 620920851INS)

For Lever or Pushbutton Valves:  
Dispense product for 4 to 5 seconds.

If problems are encountered, contact Cornelius Technical Support at 1-800-238-3600.