
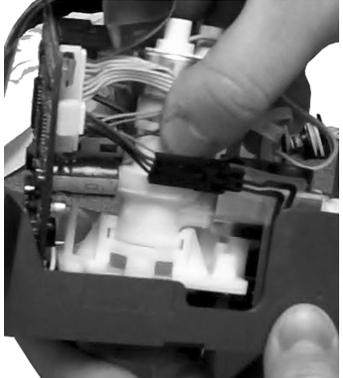
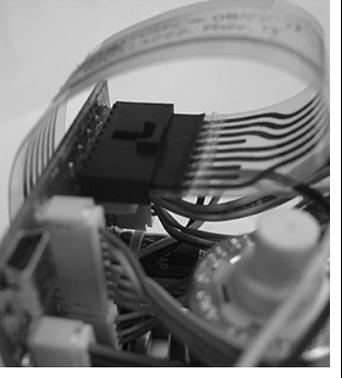


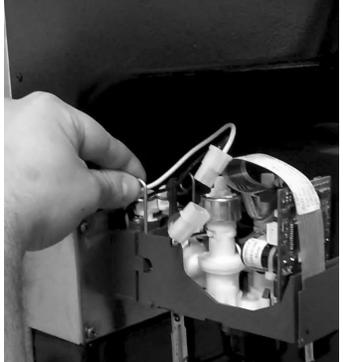

CAUTION - Only trained and certified technicians should service this unit. ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES.

 <p>16. Insert PCB in slots & push into base</p>	 <p>17. Reinstall the assem. into the base by snapping mixing body into tabs. See following pict. for tab locations</p>	 <p>18. Position Connector below motor shell.</p>	 <p>19. Reconnect keypad connector to PCB</p>	 <p>20. Replace diffuser and nozzle</p>
 <p>21. Replace valve onto the unit</p>	 <p>22. Press down the Retaining Spring.</p>	 <p>23. Open the Backblocks.</p>	 <p>24. Reconnect power connector</p>	<p>Setup the valve using the Tomcat setup device. Refer to the Tomcat manual for details. (Part No. 620920851INS)</p>
<p>25. For Portion Control Valves:</p> <p>Check and verify that portion sizes are correct. If not, perform the manual portion procedure. (Refer to TomCat manual for details.)</p> <p>For Lever or Pushbutton Valves: Dispense product for 4 to 5 seconds.</p>	<p>If problems are encountered, contact Cornelius Technical Support at 1-800-238-3600.</p>			