

INSTALLATION INSTRUCTIONS

NOTE: This merchandiser should not be used with Hoshizaki ice makers

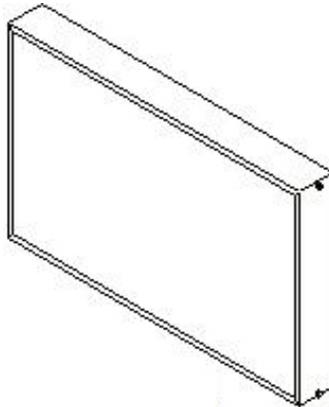


Figure 1



WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

1. Remove front panel of ice maker, and lay on flat surface.
2. Remove the side cover (2, 8-32 knurled head screws), and the 2 front plastic panels from the lighted display (See Figure 2).
3. Remove light bulb.
4. For the 30" wide and 42" wide merchandisers only. Remove 4 cover plates from the reflector panel (8 screws). (see Figure 2).
5. Place the bottom of the lighted display merchandise 5-5/8" from the bottom of the ice maker panel. (see Figure 3) center merchandiser left to right on the ice maker panel. Using the 4 bottom holes in the rear panel as a template, drill 4-.312 (5/16") diameter holes centered at the small end of the key slot in the ice maker panel.
6. Insert the 8-32 well nuts into the 4-.312 (5/16) diameter holes in the ice maker panel.
7. Fasten the lighted display to the ice maker panel with 4 8-32 x 1/2" screws.
8. Replace ice maker panel with lighted display fastened. (see note).
9. Replace the lighted display front panels (lens, graphic, and diffuser) and side cover.

NOTE: On certain ice makers it may not be possible to secure the ice maker front panel to the ice maker with the merchandiser attached. On those ice makers follow these steps.

1. Back off the 4 screws holding the merchandiser to the front panel 1/8".
2. Push merchandiser up until the head of the screws are in the larger diameter hole of the keyhole.
3. Pull the merchandiser off.
4. Attach ice maker panel to ice maker. (2 screws)
5. Reinstall merchandiser, tighten the 4 mounting screws.

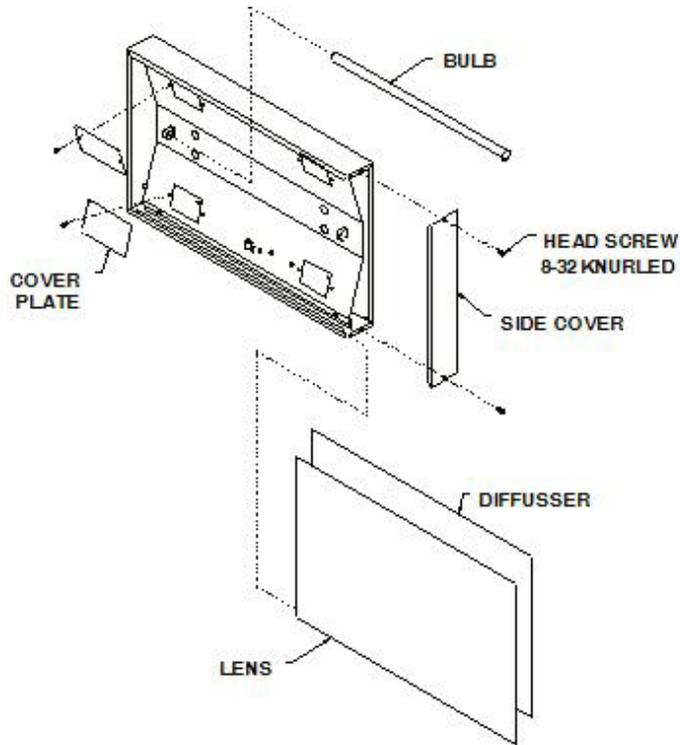


Figure 2.

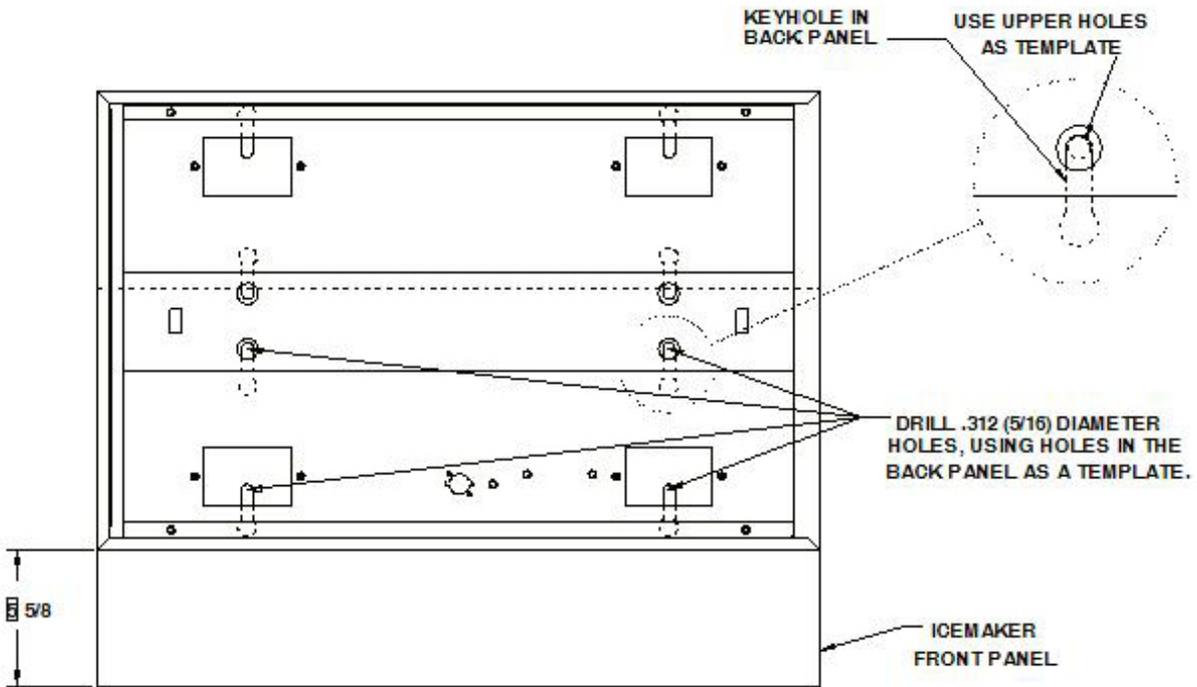


Figure 3.