

# INSTALLATION INSTRUCTIONS

## FOR HINGED MERCHANDISER

### Installation Notes:

#### WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

1. Remove (4) screws securing icemaker cover to dispenser wrapper and secure side plates to icemaker cover.
2. Secure uprights to side plates with 8–32 machine screws, (3) per side.

**NOTE: Note: Stiffener of upright should be to the inside. Upright should be flush with the front of the icemaker cover.**

3. Secure the uprights to the icemaker cover with #8 self drilling screws. (3) per tie in plate.
4. Attach tie in plate to uprights with #8 self drilling screws into pilot holes in uprights. (3) per upright.
5. Attach tie in plate to icemaker cover with #8 self drilling screws. (3) per tie in plate.
6. Install swing arms in upright pivot brackets.
7. Install merchandiser onto hinge halves in uprights.
8. Connect merchandiser to 115V power source with cord and plug from rear of merchandiser.
9. Reconnect power to icemaker and dispenser.

