

**REMGOR[®]**

IMI CORNELIUS INC.
 One Cornelius Place
 Anoka, MN. 55303-6234
 Telephone 1-800-238-3600
 Facsimile 1-800-258-0255

INSTALLATION INSTRUCTIONS FOR REMOTE ICE LEVEL LIGHT

Table 1. Loose-Shipped Parts

Item No.	Part No.	Name	Qty.
1	32266	Remote Light Fixture	1
2	32376	Lamp, 120V	1

1. Check contents of the kit before proceeding (see Table 1).
2. Mount remote ice level signal in a convenient location. (50-ft. max. from ice beverage dispenser)
3. Connect 24V cable from remote ice level light to ice dispenser unit blue jumpers in bottom of dispenser.
4. Connect 120V power cord to a convenient outlet.
5. Low ice level light is now ready for operation.

NOTE: When operating properly, the alarm and/or light will come on when the ice is below the sensor (thermostat) level. It should go off when the ice is above the sensor. The valves should work at all times. This is only a warning devise, not a shutoff.

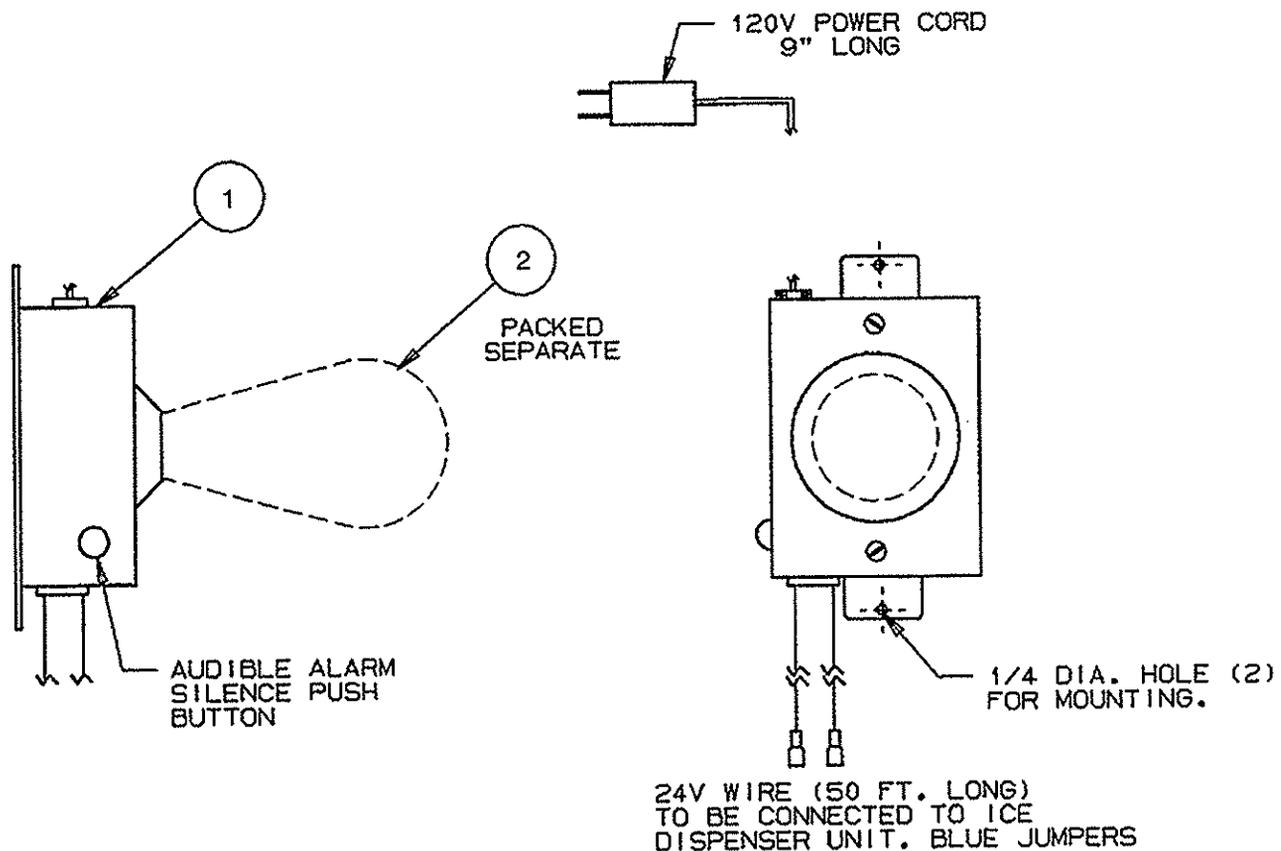


FIGURE 1. ICE LEVEL LIGHT