

# INSTALLATION INSTRUCTIONS

## Remote Ice Level Light

### SAFETY INSTRUCTIONS

 **WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### QUALIFIED SERVICE PERSONNEL

 **WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

### SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

 **WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

 **CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.


**Failure to keep this area clean may result in injury or equipment damage.**

## PARTS LIST

**Table 1. Loose-Shipped Parts**

Item No.	Part No.	Name	Qty.
1	32260	Remote Light Fixture	1
2	620307204	120V Lamp (White)	1

1. Check contents of the kit before proceeding.
2. Mount Remote Ice Level Signal in a convenient location. (50 ft. max. from ice-beverage dispenser).
3. Connect 24V cable from Remote Ice Level Light to the ice dispenser unit, blue jumpers in bottom of dispenser.
4. Connect 220V power cord to a convenient outlet.
5. Low ice level light is now ready for operation.

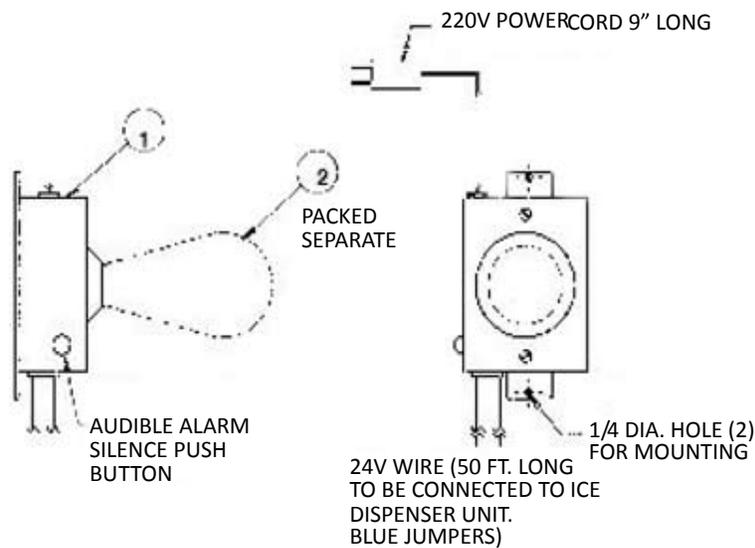

**Figure 1.**