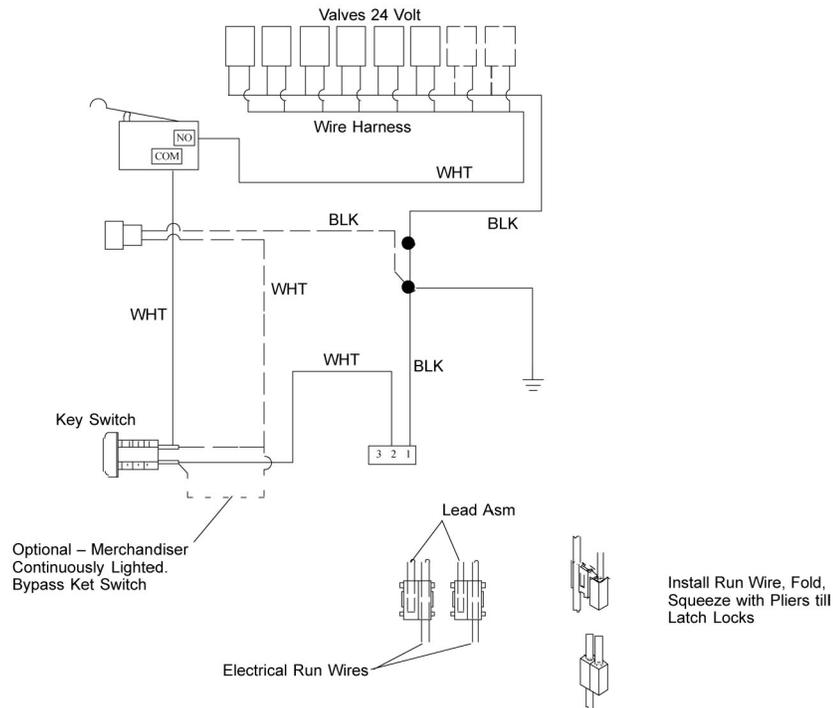


# INSTALLATION INSTRUCTIONS

## FOR 24 VOLT MERCHANDISER



**Figure 1.**

Please read and understand these instructions before beginning the installation.



**WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

1. Remove the tower cap, drain grill and splash panel / back access panel.
2. Connect merchandiser 24 Volt lead assembly to the mating connector taped to back of tower.(Units without a 24 Volt lead assembly in the tower, select desired location for the connector provided with merchandiser Refer to diagram)
3. Install the 24 Volt lead per selected location. (See Detail A)
4. Connect 24 Volt lead assembly to mating connector on the bottom of lighted merchandiser.
5. Install the grill and splash panel / back access panel on the tower.
6. Place merchandiser on the top of tower and secure with the two screws.
7. Connect electrical power to the unit.

# MERCHANDISER 24 VAC

Model: 16-6167

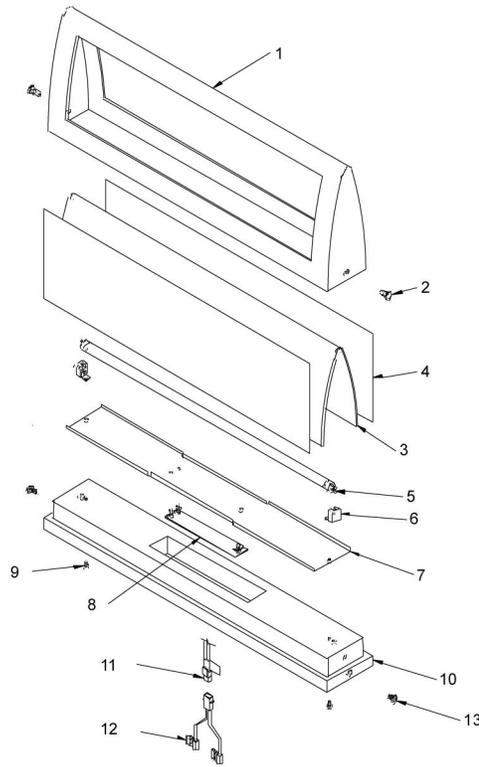


Figure 2.

SI No.	Part Number	Description
1	166252116 625210201	Dome Outer 23" Merch. Dome Outer 18" Merch.
2	166037002	Clip Canoe Black
3	161098006 161098008	Lens Retainer, Lens Retainer, 18" Merch
4	161098XXX	Sign, Specify size & logo
5	163501000 161012000	Lamp, 23" Merch. Lamp, 18" Merch.
6	161010001	Lamp holder

SI No.	Part Number	Description
7	167766006 167766007	Reflector, 23" Merch. Reflector, 18" Merch.
8	167761001	Transformer, 24 Volt
9	164082001	Screw
10	166252201 166252202	Base 23" Merch. Base 18" Merch.
11	163518000	Connector
12	167770000	Lead Assembly
13	164085000	Screw