

# QLT 180 AIR FILTER INSTALLATION & CLEANING INSTRUCTIONS

## SAFETY INSTRUCTIONS

### WARNING:

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

## QUALIFIED SERVICE PERSONNEL

### WARNING:

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

## SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

### WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### CAUTION:

Always be sure to keep area around the unit clean and free of clutter.

**Failure to keep this area clean may result in injury or equipment damage.**

# INSTRUCTIONS

1. The QLT 180 Juice dispenser is equipped with a condenser filter. The filter has a magnetized frame and is installed as shown below.

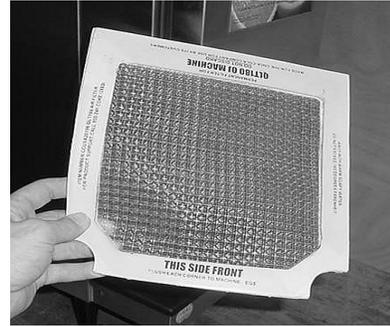


Figure 1.

**⚠ CAUTION:**

This is a permanent filter that must be removed and cleaned with mild soap and warm water every 30 days.

**DO NOT DISCARD**

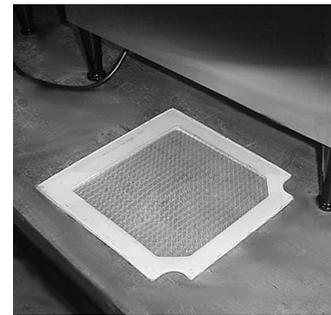


Figure 2.

2. Place the filter on the counter with the lettering facing down and the plain side visible.

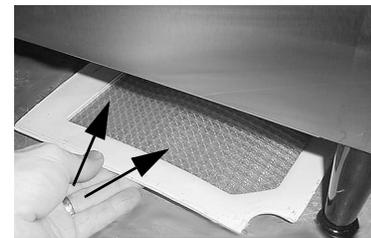


Figure 3.

3. Slide the filter under the unit as shown. Once completely under, lift filter up to the bottom of the unit. The cut outs are to fit around the FRONT legs.



Figure 4.

4. The filter is held in place by magnets built into its frame. To remove, simply pull down until the filter releases from the unit.