

INSTALLATION INSTRUCTIONS

FFV - From Standard to Self-Serve Lever

1. Disengage front cover from valve rear cover.
2. Remove rear cover by loosening the screw in the front and lifting up on the cover.
3. Turn the water and syrup shutoff valves to the *OFF* position on the valve mounting block.
4. Activate valve one or two times to drain and relieve pressure.
5. Turn *OFF* power to the dispensing valves.
6. Disconnect the 24VAC electrical connector from the dispenser valve connector.
7. Lift up the valve retainer assembly and remove valve from the dispenser.
8. Remove the valve lever screw and washer and set aside for reuse. Remove valve lever and spring and set aside for reuse.
9. Place lever spring over valve body boss (see Figure 1).
10. Assemble *Self-Serve Lever* onto valve body by inserting top end of lever (switch actuation end) through slot on bottom of valve body and positioning hole in lever over valve body boss (see Figure 1).
11. Place washer over valve body boss. Secure with valve lever screw and o-ring previously set aside.

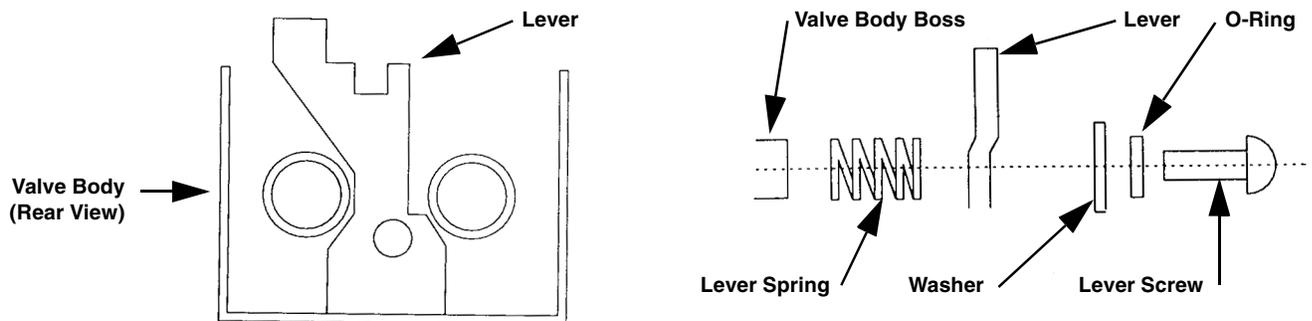


FIGURE 1

12. Replace valve on the dispenser by lifting the retainer and pushing the valve onto the mounting block. Push the retainer down to lock the valve in place.
13. Turn the syrup and water shutoff valves, on the valve mounting block, to the *ON* position.
14. Reconnect the 24VAC connector to the valve at the dispenser.
15. Place the rear cover on the valve and tighten the screw at the front of the cover.
16. Place the new plain front cover on the valve.
17. Turn power *ON* to dispensing valve.

Activate the lever and check operation of the valve. If the valve fails to operate, check the position of the switch in the valve body and the movement of the lever. If the valve turns on without activating the lever, then the switch is wired incorrectly.