

### ICE MAKER CLEANING INSTRUCTIONS

The CRACKED-ICE ICE MAKER should be cleaned at a minimum of three month intervals (more frequently in hard water areas) in the following manner.

1. Stop the Ice Maker at the completion of the harvest cycle and remove the Ice Maker housing and cover.
2. Add two teaspoons of Virginia Ice Machine Cleaner (available from most refrigeration wholesalers).
3. NOTE: Virginia Ice Machine Cleaner is mild acid. Normal care should be taken - Keep out of eyes and cuts.
3. There is a three-position clean switch, located near harvest timer, showing clean - run - flush. With switch set in clean position and Ice Machine cleaner in sump, turn on Ice Maker and run until unit is thoroughly cleaned.
4. With a narrow brush, such as a 1" wide paint brush, but with a long handle, brush the water/acid solution so that it cleans the water reservoir, water float, water circulating pump and any other surfaces requiring cleaning.
5. Set clean switch to flush position. Allow Ice Machine to run and flush until acid solution is completely removed from machine.
6. Turn off the Ice Maker and siphon or drain the water from the water reservoir. Then turn switch to run position.
7. Wipe the water reservoir and other surfaces clean.
8. Replace the Ice Maker cover and housing. Turn on the water and check operation. The Ice Maker is ready for normal use.

### ICE DISPENSER REMOVAL AND CLEANING INSTRUCTIONS

After disconnecting water drain line, bin thermostat leads, and two prong power plug, the dispenser can be removed by one of two methods, 1) the slide out method is accomplished by removing wing nuts located at right and left bottom front of dispenser, 2) the lift out method is accomplished by removal of band wrapped around base of dispenser.

The Automatic Ice Dispenser interior should be cleaned at least once a month. After removal of hopper, remove agitator assembly and wash and rinse it thoroughly, and wash down the inside of hopper and top cover with a mild detergent solution and rinse. Replace agitator assembly. Sanitize the inside of hopper and agitator with a mixture of household bleach and water, check package for proper mixture. (Do not use metal scrapers or abrasives on the surface of the hopper as it will destroy the smooth surface.) You can then replace top cover and hopper, unit can then be put back into operation.