

INSTRUCTIONS FOR DISABLING

SYRUP FLOAT SOLD-OUT SWITCH

ON

TWO AND FOUR-FLAVOR FCB POST-MIX DISPENSERS

Note: Only qualified personnel should perform this procedure.



WARNING: To avoid possible fatal electrical shock or serious injury, make sure electrical power is disconnected from dispenser before proceeding to perform this procedure.

1. Shut dispenser down, then disconnect electrical power.
2. Remove both side panels or back panel by removing one screw on lower center of each panel, then lift panels straight up about two inches to remove.
3. Locate both wires from float switch and disconnect electrical wires from harness.
4. Perform step 3 above for all float switches.
5. Reinstall side panels on dispenser by reversing removal procedure.



WARNING: By disabling the float switch and using 5 gallon tanks of syrup the possibility of freeze up and damage to unit can occur.

