

The Back Tees

Golf Simulator Startup Guide

Sim Lock

The simulator will be locked to a black screen until 5 minutes prior to your tee time.

Moving the mouse between screens

The computer monitor and the golf impact screen work like two monitors side by side. To move your mouse from the small screen to the big screen, just keep sliding it to the left. The cursor will appear on the large impact screen. Slide it back right to return.

Already Look Good?

If the big screen (the golf impact screen to your left) is already showing a course or the GSPro software, and there's an image on the computer monitor in front of you, you're all set. Skip everything below and start playing. To exit out of someone's current game, click the four-dots in the top-right corner of the golf impact screen, and select End Round.

Hitting Area

The hitting area is on the hitting strip between the middle tee hole and the back tee hole.

1 If the computer isn't on, turn it on

Find the power button on the right-hand side of the PC tower (the actual computer box under or beside the desk, not the monitor screen in front of you). Press it once.

2 Let it boot, the big screen and software will come on automatically

Give it a minute or two. The projector will turn on and GSPro (the golf simulation software) should launch on its own on the large impact screen to your left.

If a window called Uneekor Connect pops up, just minimize it by clicking the button in the top-right corner of that window.

3 Open Uneekor from the taskbar

Look at the computer monitor (the small screen in front of you). At the very bottom of the screen, find the yellow "U" icon in the taskbar. Click it to open Uneekor.

Once it opens, click the GSPro button inside the Uneekor window. This connects the launch monitor so it can send your real shot data (ball speed, spin, launch angle) into the game.

4 Pick your experience and swing away

On the large impact screen to your left, choose a course, game mode, or the driving range, then step up and go.

The Play button is in the bottom-right corner of the GSPro screen. It can be easy to miss.

Sound & Entertainment

Bluetooth speakers: Connect your phone via bluetooth to RCS80-1 for room audio.

YouTube TV: All TVs have a subscription to YouTube TV

NEED HELP?

Contact us — we want you to have a great round.

(731) 413-2970 // (731) 460-9067