

# Rotary Screw Pressure Switch Adjustment



**Notice: Consult manufacturer prior to making any adjustment on the control pressure switches. The switches are set and tested prior to shipping. Call 800-531-9656 to find a local trained air compressor service technician.**

**WARNING:** To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

## Industrial Gold

Quality Air Compressors at a Great Price.

industrialgold.com ■ 1-800-531-9656 ■ Fax 972-352-6364

© Industrial Gold 04-2026



Scan to visit our website



## Step 1

Shut off the main power supply.

## Step 2


Locate the adjustment screws. The screws for pressure range is circled in red. The screws for adjustment differential pressure adjustment is circled in green.



## Step 3

Adjust accordingly to the information below.

Turn **RED** adjustment screw clockwise to increase operating pressure.

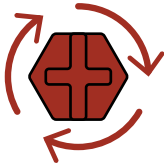

Turn **RED** adjustment screw counterclockwise to decrease operating pressure.



Turn **GREEN** adjustment screw clockwise to increase differential pressure.



Turn **GREEN** adjustment screw counterclockwise to decrease differential pressure.





**Industrial Gold**

600 S 2nd Ave  
Mansfield, TX, 76063

**1-800-531-9656**

Fax 972-352-6364

**Quality Air Compressors at a Great Price.**