

Replacing Solenoid NK30-31



Solenoid

Notice: Always make sure the power is off to compressor and contact the manufacturer for advice.

Call 800-531-9656 to find a local trained air compressor service technician.

WARNING: To avoid personal injury, always shut OFF the main power supply and disconnects to the compressor, relieve all air pressure from the system, and check electrical system with electrical probe before starting any service or maintenance on the compressor.

Industrial Gold

Quality Air Compressors at a Great Price.

industrialgold.com ■ 1-800-531-9656 ■ Fax 972-352-6364

© Industrial Gold 04-2026



Scan to visit our website



Step 1

Shut off the main power supply.


Step 2

Unscrew and remove solenoid electrical connections set screw.





Step 3

Remove solenoid electrical connection.

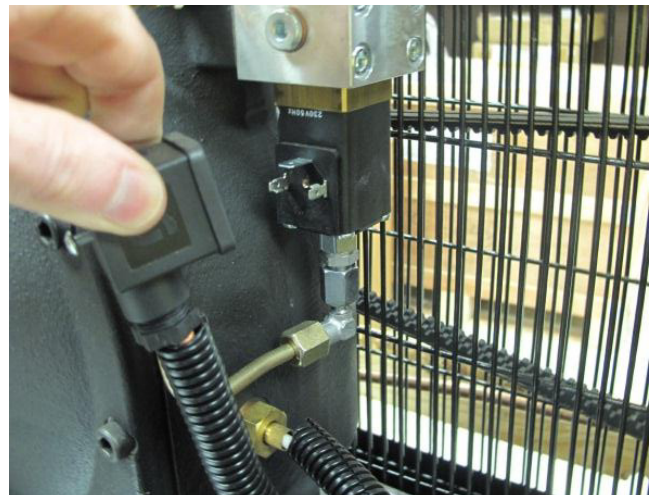

Step 4


Remove solenoid electrical connection

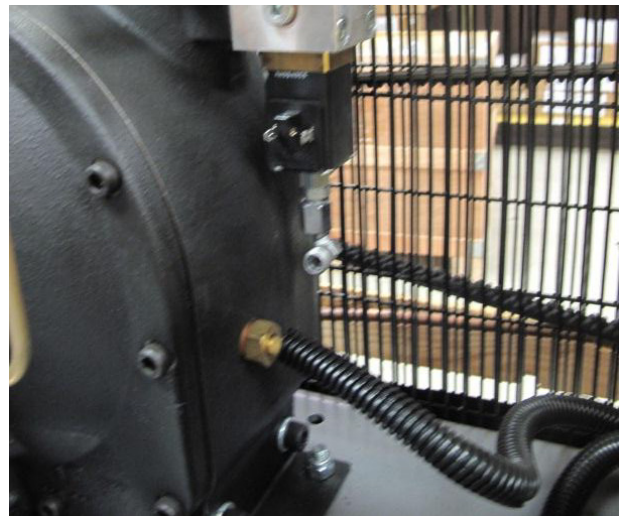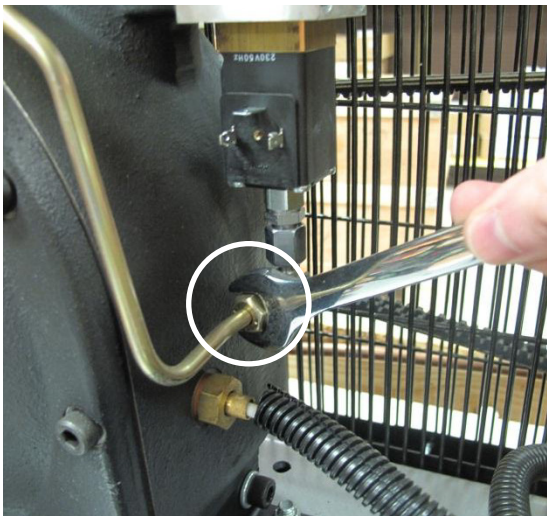

Control air line removed

Step 5

Remove solenoid bolts (solenoid will fall off control block once removed).

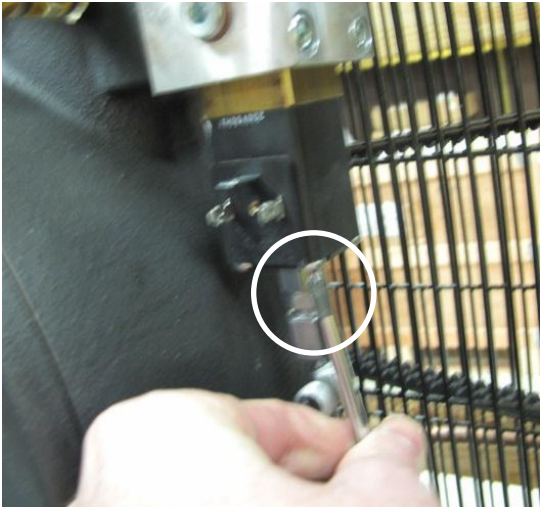

Solenoid removed

Step 6

Install the new solenoid.





Industrial Gold

600 S 2nd Ave
Mansfield, TX, 76063

1-800-531-9656

Fax 972-352-6364

Quality Air Compressors at a Great Price.