

## Open Frame Electric Rotary Screw Compressor

# Installation Guide

**All air compressors must be installed by a qualified and trained technician. If you need a qualified technician, call 800-531-9656 or 972-352-6304. Improper installation may result in damage to the compressor, personal injury, and will void the warranty of the compressor package.**

**NOTE: INSPECT SHIPMENT FOR DAMAGES.  
IF DAMAGED GOODS ARE RECEIVED, REPAIR COST & RESPONSIBILITY IS ON THE RECEIVER.**

**Warning:** Read all installation steps, compressor package operation manual, notices and warnings prior to beginning compressor package installation. Failure to do so can result in personal injury or damage to compressor package.

**Warning:** Always wear proper protective eye wear, hearing protection, and other mandated safety clothing and devices when installing compressor packages

**Notice:** Compressor package should not be mounted to a moving piece of equipment that will be moving while the compressor package is in operation. The compressor package should not be mounted to a piece of equipment that adds additional vibration to the compressor package. The compressor package is only designed to handle its own organic vibration during operation. Failure to follow either one of these guidelines may result in pre-mature failure of compressor package, components and/or personal injury.

**ATTENTION:** All incoming electrical power connections are to be made on the main motor contactor(s) DO NOT attach incoming power wires to package pressure switch. This will result in electrical component damage not covered under warranty.

**NOTICE:** To ensure full compressor tank warranty all tank mounted compressor packages must be mounted on factory supplied vibration isolation pads.

**Warning:** Before beginning steps 6-17 verify power supply is off to compressor disconnect, and compressor package

**Notice:** All compressor air receivers should be inspected by a certified pressure vessel technician at least once per year, to check for leaks, weak points in the metal or any other deformity of the air receiver. If at any time a receiver appears out of conformance with ASME/CRN certification or a deformity is believed to have developed no matter how minor it may appear the tank should be locked out of service immediately

## Industrial Gold

**Quality Air Compressors at a Great Price.**

industrialgold.com | 1-800-531-9656 | Fax 972-352-6364

© Industrial Gold



Scan to visit our website





**Warning:** Always wear proper protective eye ware, hearing protection and safety clothing when working around the compressor package. No loose or baggy clothing should be worn around compressor package at any time.



**Warning:** On Electric motor powered air compressors make sure electrical system is up to National Electric Code (NEC) prior to installing compressor system. Failure to install a compressor with a proper NEC electrical system can cause personal injury, compressor package damage and void compressor package warranty.



**Notice:** To ensure full compressor tank warranty all tank mounted compressor packages must be mounted on factory approved vibration isolation pads. A compressor should NEVER be installed while still on or in its original packaging. Failure to properly install the compressor system with approved vibration isolation pads will result in the compressor tank warranty being void.



**Notice:** Industrial Gold compressors can operate at pressures from 0-250 PSI depending on the compressor package design and build specifications. Always verify that the system the compressor is installed into can handle the maximum operational pressure of the compressor. NEVER install a compressor in a system that can not handle the compressors maximum operating pressure.



**Notice:** Compressed air is extremely dangerous when not properly used or installed. Always make sure a trained compressed air professional has looked over the air system prior to use. Improper installation or use of compressed air can cause bodily injury or death. NEVER pressurize an object that was not designed to be pressurized. Pressurizing objects not properly engineered for the maximum operating pressure of the compressor system can cause bodily injury or death.

### Step 1

Verify compressor package install site can handle weight load of compressor package.

**Note:** this should have been done prior to the sale of the compressor package.

**Notice:** Installing compressors on the roof, mezzanine, 2nd story or higher of a building can result in higher DBA readings for the compressor package as well as additional vibration.

### Step 2

Make sure compressor installation site is clear of debris and has adequate space around where the compressor will sit for service (minimum of 24") and ventilation (must be able to get clean fresh air through oil/air cooler during operation, without recirculating cooler hot air discharge). If site is excessively dusty or dirty due to grinding, sanding, or due to the nature of the selected application site a new site should be sought out.

### Step 3

Make sure site voltage for compressor installation is correct.

When reading voltage read across the lines to get an exact voltage. On single phase units, read across L1 (Line 1) and L2 (Line 2) to get the operational voltage. On 3 phase units, read across L1 to L2, then L2 to L3 (Line 3), then from L1 to L3 this gives the most accurate reading of the voltage. It is also recommended to read the voltage at both the main electrical panel and at the compressor disconnect to check for voltage drops prior to installation.

- A. 208-230 volt compressors can operate on voltages from 207-253 volts
- B. 460-480 volt compressor can operate on voltage from 420-505 volts
- C. On either 208-230 or 460-480 volt compressor packages; the lower the site voltage, the more amps the compressor motor will draw. (See electric motor MFG. website for amp draw at 208 volt if applicable)
- D. If voltage is lower than 207 on 208-230 or higher than 505 on 460-480 volt package then, a special low or high voltage motor is required as well as a different motor contactor and controls (this should be confirmed prior to compressor sale)
- E. If compressor package is being powered by a generator verify generator has enough power to start the compressor package. An easy calculation for the amount of power required to start a compressor is below.

Max running amps X operating voltage = running kilowatts (then) Running Kilowatts x 4= Starting Kilowatts required to start the compressors drive motor.

## Step 4

Verify that main power wires leading to compressor disconnect are proper size per National Electric Code (NEC) and local applicable standards. Failure to have properly sized wire can cause damage to the electrical components of the compressor package. Incorrect wire size for the compressor package may also result in the loss of electric component warranty.

## Step 5

Verify that the breaker for the compressor is properly sized for the compressor total full load amps. NEC and local applicable standards should be followed. Failure to do so will result in damage to electrical components. Incorrect breaker size for the compressor package may also result in the loss of electric component warranty.

**STOP**

**Warning:** Before beginning **Steps 6-17**, verify power supply is off to compressor disconnect, and compressor package.

## Step 6

Uncrate compressor package (verify package is intact and not missing parts).

## Step 7

Remove compressor shipping pallet.

**Warning:** Only use forklift or approved lifting device to remove compressor from shipping pallet

## Step 8

Set compressor into place on vibration isolation pads.

## Step 9

Drill holes in floor through vibration pads and mounting location on compressor package to set compressor package anchors in place.

## Step 10

Tighten compressor package anchor nuts to set anchors in floor.

## Step 11

Back anchor nuts off to ½ to ¾ turn past hand tight.

## Step 12

Connect airline to compressor package air discharge.

**Note:** It is recommended to use a flexible line between the compressor package and the system piping to avoid damage due to compressor vibration

## Step 13

Remove knock out on compressor operation panel or drill/cut hole for main electrical power wires for compressor. No connections are to be made on the pressure switch during standard installation. Pressure switch's are pre-set from the factory.

## Step 14

Attach incoming compressor package wire conduit to compressor operation panel.

**NOTICE:** Air compressors must be installed by trained installation personnel. Installation sheets must be sent back in for warranty activation. If you need help finding a qualified technician to properly perform installation, call 800-531-9656 or 972-352-6304.

## Step 15

Install compressor package incoming power wires to proper terminal on main motor contactor.

**A.** On single phase compressor packages ports L1(line 1) and L2 (line 2)

**B.** On 3 phase compressor packages ports L1 L2 L3 (line 3)

**Note:** Make sure incoming power wires are properly torqued into place.

This is also a good time to verify all electrical power wires are torqued properly.

## Step 16

Install ground wire in compressor panel.

## Step 17

Verify all wire terminal connections in compressor package are torqued to proper specs.

## Step 18

Turn power on to the compressor package.

## Step 19

Verify voltage of incoming power on the main drive motor starter.

## Step 20

Wait for green light on compressor smart contactor to come on.

## Step 21

With green light on smart contactor on, turn compressor package on for 1-3 seconds to verify for proper compressor rotation and cooling fan rotation.

**Note:** When facing the front of the compressor airend opposite the motor shaft, the compressor should turn clockwise on standard belt drive compressors, verify direction on direct drive units with directional arrows.

**Notice:** Do not allow compressor to run for more than 3 seconds on this step, doing so may cause damage to compressor airend.

**If rotation is incorrect:** turn power off to compressor package.

**A.** On 3 phase compressors; once power is confirmed to be off, switch incoming power wire from L1 to L3 position and place L3 incoming power wire in L1 position.

**B.** On single phase compressor packages; if rotation is incorrect, check motor wiring diagram for proper rotation wiring diagram.

## Step 22

Close ball valve on compressor storage tank discharge.

## Step 23

Turn power back on to compressor package.

**If rotation was incorrect:** turn compressor back on for 1-3 seconds to verify that rotation is now correct if needed.



**Warning:** Always wear proper protective eye ware, hearing protection and safety clothing when working around the compressor package. No loose or baggy clothing should be worn around compressor package at any time.



**Warning:** On Electric motor powered air compressors make sure electrical system is up to National Electric Code (NEC) prior to installing compressor system. Failure to install a compressor with a proper NEC electrical system can cause personal injury, compressor package damage and void compressor package warranty.



**Notice:** To ensure full compressor tank warranty all tank mounted compressor packages must be mounted on factory approved vibration isolation pads. A compressor should NEVER be installed while still on or in its original packaging. Failure to properly install the compressor system with approved vibration isolation pads will result in the compressor tank warranty being void.



**Notice:** Industrial Gold compressors can operate at pressures from 0-250 PSI depending on the compressor package design and build specifications. Always verify that the system the compressor is installed into can handle the maximum operational pressure of the compressor. NEVER install a compressor in a system that can not handle the compressors maximum operating pressure.



**Notice:** Compressed air is extremely dangerous when not properly used or installed. Always make sure a trained compressed air professional has looked over the air system prior to use. Improper installation or use of compressed air can cause bodily injury or death. NEVER pressurize an object that was not designed to be pressurized. Pressurizing objects not properly engineered for the maximum operating pressure of the compressor system can cause bodily injury or death.

## Step 24

**Notice:** Read 24A, 24B, 24C prior to starting Step 24

Turn compressor package on with correct rotation and allow package to build to maximum operating pressure, and unload.

- A. Check voltage on main motor contactor prior to starting.
- B. Continue to check voltage on motor contactor as compressor package starts.
- C. If voltage drops more than 5% or below 207 on 208-230 volt packages or below 420 on 460-480 volt packages; and does not immediately return to original voltage, then check power supply.

A drop of 5% or more; or below the minimum operating voltage of the electric motor can cause damage to the electrical components of the compressor package resulting in loss of electrical component warranty. If drop occurs, contact electrician and compressor package owner to notify them of power issues that need to be corrected for proper operation.

## Step 25

Once compressor is running unloaded, wait 10 minutes to verify that compressor package unloaded power save feature is properly functioning. Compressor package should turn off after 10 minute of running unloaded.

**Notice:** Compressor package will unload automatically at maximum operating pressure. Compressor package pressure switch has been preset at factory during testing. Do not adjust compressor package pressure switch without consulting factory.

## Step 26

Once compressor has shut down after running unloaded for 10 minutes, open compressor storage tank ball valve to pressurize piping system.

## Step 27

Using either the compressor tank safety relief valve or tank discharge drain, release air pressure until compressor package restarts from unloaded timer stopping package.

**Note:** In most cases pressurizing the air piping system releases enough air from the system to restart the compressor.

**Warning:** When releasing air from compressor safety relief valve or tank drain DO NOT look at valve or drain.

## Step 28

Perform function test on compressor package operating system. Using STEP 27, allow the compressor package to build up to maximum operating pressure and unload. Once unloaded release air from the system to cause the compressor package to reload and compress air. Repeat this process a minimum of 6 times.

## Step 29

Check compressor temperature gauge for current operating temperature.

**Note:** on installation sheet

## Step 30

Check all compressor air and oil lines for leaks, tighten fittings as needed.

## Step 31

Check compressor tank drain for proper function. If drain has a timer feature, set timer to appropriate setting. Timer operated drains have a test button, use this to test for proper function.

**Warning:** Never look directly at compressor drain when testing or during drain operation.

## Step 32

Make sure compressor installation sheet is properly & completely filled out to be sent in for warranty registration.

## Step 33

Go over general operation and maintenance instructions of compressor package with owner and other personal that work around the compressor package. Verify if a maintenance agreement has already been set up or if one needs to be established.

## Step 34

Once Steps 1-33 have been completed, turn compressor package off. Allow airend sump pressure to bleed off. Complete sump depressurization takes approximately 5-10 minutes.

## Step 35

Once sump pressure has bled off, pull sump safety relief valve to verify sump pressure is gone.

## Step 36

Remove airend oil fill cap slowly. If hissing or air is coming out around oil cap, tighten back down and verify sump pressure has been relived. Verify proper oil level in compressor package, add oil as needed.

## Step 37

Turn compressor back on, wipe down surfaces and make sure installation sheet is complete. Compressor is now ready for full operation.

**NOTICE:** Air compressors must be installed by trained installation personnel. Installation sheets must be sent back in for warranty activation. If you need help finding a qualified technician to properly perform installation, call 800-531-9656 or 972-352-6304.



**Warning:** Always wear proper protective eye ware, hearing protection and safety clothing when working around the compressor package. No loose or baggy clothing should be worn around compressor package at any time.



**Warning:** On Electric motor powered air compressors make sure electrical system is up to National Electric Code (NEC) prior to installing compressor system. Failure to install a compressor with a proper NEC electrical system can cause personal injury, compressor package damage and void compressor package warranty.



**Notice:** To ensure full compressor tank warranty all tank mounted compressor packages must be mounted on factory approved vibration isolation pads. A compressor should NEVER be installed while still on or in its original packaging. Failure to properly install the compressor system with approved vibration isolation pads will result in the compressor tank warranty being void.



**Notice:** Industrial Gold compressors can operate at pressures from 0-250 PSI depending on the compressor package design and build specifications. Always verify that the system the compressor is installed into can handle the maximum operational pressure of the compressor. NEVER install a compressor in a system that can not handle the compressors maximum operating pressure.



**Notice:** Compressed air is extremely dangerous when not properly used or installed. Always make sure a trained compressed air professional has looked over the air system prior to use. Improper installation or use of compressed air can cause bodily injury or death. NEVER pressurize an object that was not designed to be pressurized. Pressurizing objects not properly engineered for the maximum operating pressure of the compressor system can cause bodily injury or death.

## LONG TERM STORAGE PROCEDURES:

(COMPRESSORS THAT WILL NOT BE USED FOR 60 DAYS OR MORE)

1. **Electric Powered Units-** Turn off power and disconnect power from main compressor disconnect panel.  
**Gas/Diesel/Natural Gas Powered Units-** Drain any fuel from package/disconnect any fuel source from system.
2. Drain compressor oil and change filters, refill oil. If engine driven drain engine oil, change filters, refill with oil.
3. Check compressor intake for debris, clean out if needed.  
(Cover compressor intake to prevent debris, insects, etc. from entering compressor intake).
4. Clean off compressor package.
5. Drain all moisture from air compressor tank.
6. Cover compressor to prevent debris from collecting on compressor and store in a location out of direct sunlight/rain/weather. Do not seal compressor cover as moisture may form and prematurely rust parts due to humidity not being able to escape.
7. If storage last 90 days or more every 30 days, manually rotate compressor pump/airend 1/4 turn.
8. Before putting compressor back into operation drain oil, change all filters, and check belt tension if belt driven.  
If compressor stored longer than 120 days inspect compressor intake and discharge valves on reciprocating, intake and MPV valve on rotary screws. If reciprocating, check compressor check valve for operation.
9. Follow install guide and proper start up procedures prior to putting air compressor back into service.  
(Fill out a new compressor install data sheet at time of re-installation or initial installation).

[illegible]



## NEC (National Electric Code) Guide Lines

1 Phase Motor Requirements (Copper wire must be THW, THHN-THWN, XHHW) No solid core wire

**NOTE:** Wire size is based on being within 30ft of main electrical panel installation further would need a qualified electrician to properly size the wire to account for voltage drop

| Horse Power | Voltage | Instantaneous Trip Circuit Breaker Rating | Circuit Breaker Trip Rating | Minimum Wire Size |
|-------------|---------|-------------------------------------------|-----------------------------|-------------------|
| 1.5         | 115     | 30                                        | 40                          | 12                |
| 1.5         | 230     | 15                                        | 20                          | 14                |
| 2           | 115     | 50                                        | 50                          | 10                |
| 2           | 230     | 30                                        | 30                          | 14                |
| 3           | 115     | 50                                        | 70                          | 8                 |
| 3           | 230     | 30                                        | 40                          | 12                |
| 5           | 230     | 50                                        | 60                          | 10                |
| 7.5         | 230     | 70                                        | 80                          | 8                 |
| 10          | 230     | 90                                        | 100                         | 4                 |

NOTE: Some rotary screw compressors have additional drive motors for the cooling fans these need to be taken into account when sizing the electrical system

3 Phase Motor Requirements (Copper wire must be THW, THHN-THWN, XHHW) No solid core wire

**NOTE:** Wire size is based on being within 30ft of main electrical panel installation further would need a qualified electrician to properly size the wire to account for voltage drop

| Horse Power | Voltage | Circuit Breaker Trip Rating | Minimum Wire Size |  | Horse Power | Voltage | Circuit Breaker Trip Rating | Minimum Wire Size |
|-------------|---------|-----------------------------|-------------------|--|-------------|---------|-----------------------------|-------------------|
| 3           | 200     | 20                          | 14                |  | 30          | 200     | 150                         | 2                 |
| 3           | 230     | 20                          | 14                |  | 30          | 230     | 125                         | 3                 |
| 3           | 460     | 15                          | 14                |  | 30          | 460     | 80                          | 8                 |
| 3           | 575     | 15                          | 14                |  | 30          | 575     | 60                          | 8                 |
| 5           | 200     | 35                          | 12                |  | 40          | 200     | 200                         | 1/0               |
| 5           | 230     | 30                          | 14                |  | 40          | 230     | 175                         | 1                 |
| 5           | 460     | 15                          | 14                |  | 40          | 460     | 100                         | 6                 |
| 5           | 575     | 15                          | 14                |  | 40          | 575     | 80                          | 6                 |
| 7.5         | 200     | 50                          | 10                |  | 50          | 200     | 200                         | 3/0               |
| 7.5         | 230     | 45                          | 10                |  | 50          | 230     | 200                         | 2/0               |
| 7.5         | 460     | 20                          | 14                |  | 50          | 460     | 125                         | 4                 |
| 7.5         | 575     | 20                          | 14                |  | 50          | 575     | 100                         | 6                 |
| 10          | 200     | 60                          | 8                 |  | 60          | 200     | 250                         | 4/0               |
| 10          | 230     | 60                          | 10                |  | 60          | 230     | 225                         | 3/0               |
| 10          | 460     | 35                          | 14                |  | 60          | 460     | 125                         | 3                 |
| 10          | 575     | 25                          | 14                |  | 60          | 575     | 125                         | 4                 |
| 15          | 200     | 90                          | 6                 |  | 75          | 200     | 300                         | 300               |
| 15          | 230     | 80                          | 6                 |  | 75          | 230     | 300                         | 250               |
| 15          | 460     | 45                          | 10                |  | 75          | 460     | 150                         | 1                 |
| 15          | 575     | 40                          | 12                |  | 75          | 575     | 125                         | 3                 |
| 20          | 200     | 100                         | 4                 |  | 100         | 200     | 400                         | 500               |
| 20          | 230     | 90                          | 4                 |  | 100         | 230     | 400                         | 350               |
| 20          | 460     | 60                          | 10                |  | 100         | 460     | 200                         | 2/0               |
| 20          | 575     | 50                          | 10                |  | 100         | 575     | 175                         | 1                 |
| 25          | 200     | 125                         | 3                 |  |             |         |                             |                   |
| 25          | 230     | 125                         | 4                 |  |             |         |                             |                   |
| 25          | 460     | 70                          | 8                 |  |             |         |                             |                   |
| 25          | 575     | 60                          | 10                |  |             |         |                             |                   |

NOTE: Some rotary screw compressors have additional drive motors for the cooling fans these need to be taken into account when sizing the electrical system

## **Certificate of Limited Warranty Reciprocating Compressors and Parts**

All component parts on this compressor, installed by the manufacturer, are warranted to be free of defects in workmanship and material for a period of one year. Transportation charges are the responsibility of the purchaser. This warranty extends to the original purchaser of the compressor only. The purchaser must use Synthetic Reciprocating Compressor Oil, Part Number 30100, in the compressor for the duration of the compressor warranty. There are NO express warranties other than those contained in this limited warranty statement. Covered in the one year period of the warranty are defective parts and labor only. Part defects are limited to original parts only. The compressor warranty is void in the case of abuse, lack of proper service, incorrect application, incorrect installation, and neglect. Industrial Electric stationary compressors may be repaired on site as long as the compressor is not located further than 50 miles from the service center. The purchaser is responsible for any additional travel expense beyond 50 miles from the service center. Gas/Diesel Engine Driven, Single Stage Stationary, and Contractor Series compressors must be repaired at the closest service center to the compressor. The purchaser is responsible for any travel expense if they do not wish to bring the compressor to the service center. ALL "SPECIALTY COMPRESSOR" WARRANTY SERVICE MUST BE PERFORMED AT THE CLOSEST SERVICE CENTER TO THE COMPRESSOR. A "SPECIALTY COMPRESSOR" is any compressor packaged with options other than those that apply to the standard models in the catalog. Warranty labor for the first year is only covered for work performed Monday-Friday 8am-5pm excluding all major US holidays. BEFORE WARRANTY SERVICE IS PERFORMED, CONTACT THE MANUFACTURER TECH SUPPORT FOR FASTEST SOLUTION AND APPROVAL (800-531-9656 or 972-352-6304). Warranty repairs must be authorized by the manufacturer prior to work being performed. Unauthorized work may void the package warranty. The warranty claim form MUST be submitted for any potential warranty claim to be reviewed. A copy of the original invoice must be sent in with the warranty claim form.

**The limited warranty is not active until the installation sheet, included with the compressor manual, is properly filled out and returned. Failure to return the installation sheet will prevent the warranty from being active.**

## **Certificate of Limited Warranty Parts Warranty**

New parts purchased are warrantied to be free from defects for a period of 1 year. Parts warranty is repair or replace only. Parts warranty is limited to the repair or replacement of the defective part only. No labor allowed for parts warranty. The defective part will be repaired or replaced. Freight and labor are not covered under the parts warranty. FOR A DEFECTIVE PART, CONTACT THE WARRANTY SERVICE CENTER (800-531-9656 or 972-352-6304).

## **Certificate of Limited Warranty Rotary Screw Compressors**

All component parts on this compressor, installed by the manufacturer, are warranted to be free of defects in workmanship and material for a period of one year. Transportation charges are the responsibility of the purchaser. This warranty extends to the original purchaser of the compressor only. The purchaser must use Synthetic Rotary Screw Oil, Part Number RS8000, in the compressor for the duration of the compressor warranty. There are NO express warranties other than those contained in this limited warranty statement. Covered in the one year period of warranty are defective parts and labor. Part defects are limited to original part only. The compressor warranty is void in the cases of abuse, lack of proper service, incorrect application, incorrect installation and neglect. Industrial Electric stationary compressors may be repaired on site as long as the compressor is not located further than 50 miles from the service center. The purchaser is responsible for any additional travel expense beyond 50 miles from the service center. Gas/Diesel Engine Driven compressors must be repaired at the closest service center to the compressor. The purchaser is responsible for any travel expense if they do not wish to bring the compressor to the service center. ALL "SPECIALTY COMPRESSOR" WARRANTY SERVICE MUST BE PERFORMED AT THE CLOSEST SERVICE CENTER TO THE COMPRESSOR. A "SPECIALTY COMPRESSOR" is any compressor packaged with options other than those that apply to the standard model in the catalog. The AIREND is covered by a 2 year warranty to be free from defects from manufacturing. This does not cover abuse, neglect, improper service, misapplication, or improper installation. An oil sample must be submitted with any AIREND warranty claim for verification. An "AIREND" is the rotors and bearings of the compressor. Warranty labor for the first year is only covered for work performed Monday-Friday 8am-5pm excluding all major US holidays. BEFORE WARRANTY SERVICE IS PERFORMED, PLEASE CONTACT MANUFACTURER TECH SUPPORT FOR FASTEST SOLUTION AND AUTHORIZATION (800-531-9656 or 972-352-6304). Warranty repairs must be authorized by the manufacturer prior to work being performed. Unauthorized work may void the package warranty. The warranty claim form MUST be submitted for any potential warranty claim to be reviewed. A copy of the original invoice must be sent in with the warranty claim form.

**The limited warranty is not active until the installation sheet, included with the compressor manual, is properly filled out and returned. Failure to return the installation sheet will prevent the warranty from being active.**

THIS POLICY IS LIMITED TO THE ITEMS ON THE INVOICE, WHICH IS ATTACHED WITH THIS DOCUMENT.

# THIS INSTALLATION SHEET MUST BE FILLED OUT AND RETURNED FOR WARRANTY TO BEGIN

## Electric Rotary Screw Compressor Installation Sheet

### Compressor & Installer

Compressor Model # \_\_\_\_\_ Compressor Serial # \_\_\_\_\_

Installation Company: \_\_\_\_\_ Installation Technician: \_\_\_\_\_

Technician Signature: \_\_\_\_\_ Date: \_\_\_\_\_

### Electrical Information

Compressor Voltage: \_\_\_\_\_ V Site Electrical Phase: ☐ 1-Phase ☐ 3-Phase

Site Voltage: L1: \_\_\_\_\_ V L2: \_\_\_\_\_ V L3: \_\_\_\_\_ V Checked All Electrical Connections Before Start-Up: ☐ Yes ☐ No

Breaker Size (Amps): \_\_\_\_\_ A Wire Size: \_\_\_\_\_

Incoming Power Connected to Magnetic Starter: ☐ Yes ☐ No *If No: Connected to Power Distribution Block:* ☐ Yes ☐ No

Distance from Main Panel: \_\_\_\_\_ ft Disconnect Installed at Compressor Location: ☐ Yes ☐ No

*If Duplex Unit:* Separate Disconnects for Each Drive Motor: ☐ Yes ☐ No

Incoming Voltage at Motor Start-Up: L1: \_\_\_\_\_ V L2: \_\_\_\_\_ V L3: \_\_\_\_\_ V

Incoming Voltage at Max Operating Pressure: L1: \_\_\_\_\_ V L2: \_\_\_\_\_ V L3: \_\_\_\_\_ V

Motor Amps at Max Operating Pressure: L1: \_\_\_\_\_ A L2: \_\_\_\_\_ A L3: \_\_\_\_\_ A

### Performance & Status

Compressor Rotation Correct: ☐ Yes ☐ No Max Operating Pressure: \_\_\_\_\_ PSI

Tank Drain Functional: ☐ Yes ☐ No Checked All Air Fittings for Leaks: ☐ Yes ☐ No

Checked Unit for Oil Leaks: ☐ Yes ☐ No Checked Belt Tension: ☐ Yes ☐ No

Vibration Pads Properly Installed: ☐ Yes ☐ No

Unit Location: ☐ Indoors ☐ Outdoors *If Outdoors: Unit Is Covered by Roof:* ☐ Yes ☐ No

Unit Has At Least 24" Of Space On All Sides Free Of Obstructions: ☐ Yes ☐ No

Tank Fill Time: 0-125 PSI: \_\_\_\_\_ *Write N/A if pressure not applicable to unit*

0-150 PSI: \_\_\_\_\_ *Write N/A if pressure not applicable to unit*

0-175 PSI: \_\_\_\_\_ *Write N/A if pressure not applicable to unit*

Unit Cooling Fan: ☐ Pulls Air Through Cooler ☐ Pushes Air Through Cooler

Compressor Temperature Gauge: Before Install: \_\_\_\_\_ After Install: \_\_\_\_\_

Unit Unloads At Max Operating Pressure And Begins To Release Sump Pressure: ☐ Yes ☐ No

*If Direct Drive:* Coupler Alignment Checked: ☐ Yes ☐ No

All Install Steps Completed: ☐ Yes ☐ No *If No, Explain:* \_\_\_\_\_

**Send a copy of this completed installation sheet to manufacturer to begin warranty.**

**Include the following:**

- 1 image of the control panel wired up
- 1 image of the full install
- 1 image from each end of the compressor

**Sales@industrialgold.com**

**Fax 972-352-6304**

**Or mail to**

**Industrial Gold**

**600 S. 2nd Ave Mansfield, TX, 76063**



**Industrial Gold**

600 S 2nd Ave  
Mansfield, TX, 76063

**1-800-531-9656**

Fax 972-352-6364

**Quality Air Compressor at a Great Price.**