


PRIOR TO INSTALL

Warning: Do not install pole without the SCL.

For optimal performance, install the lights within 6 months of receiving them. Ensure install location receives at least 2 to 3 hours of midday sun for best performance. Install footing and pole as per specifications. Please handle fixture with care as scratches will affect appearance and powder coat durability.

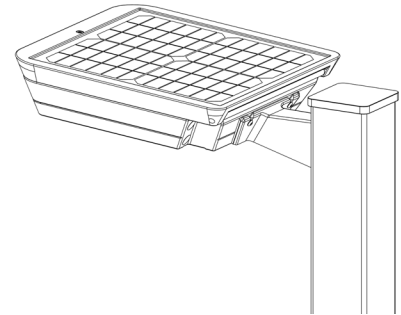


TOOLS REQUIRED

- 1/8 inch hex key
- 5/32 inch hex key with torque wrench


1. UNPACK MOUNTING ARM

Remove mounting arm from box and remove packing material.

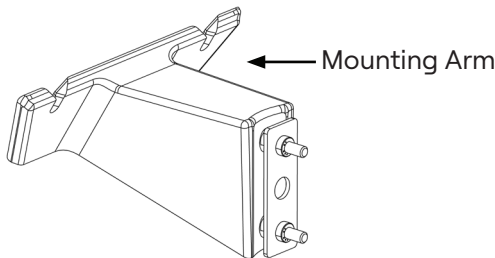


2. REMOVE MOUNTING BOLTS

Remove mounting bolts from mounting arm using 5/32" hex key.

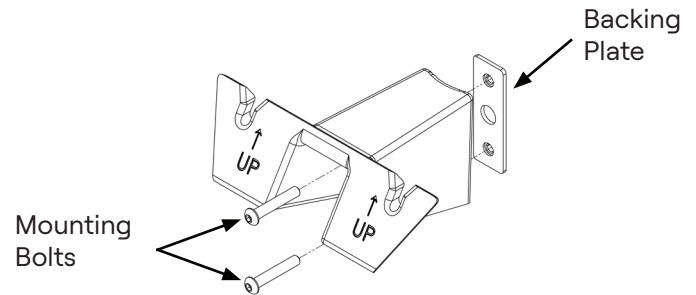


3. DRILL HOLES IN POLE

If pole is not pre-drilled, drill holes in pole as shown. Note: The 0.50 inch hole is for a ground wire and is optional

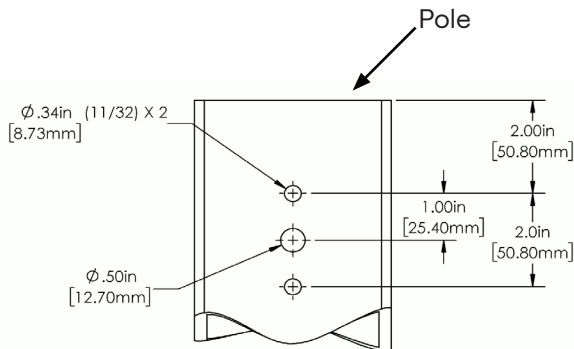


4. ATTACH MOUNT TO POLE

Insert backing plate into pole and thread bolts fully into backing plate through the mounting arm. Ensure flat side is placed against the inner surface of the pole. Torque bolts to 70 in-lbs.

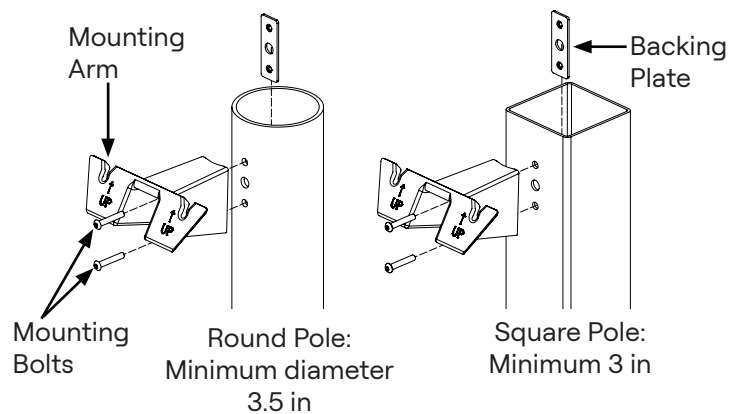

5. INSTALL LIGHT ON MOUNTING ARM

Remove light from box and install on the mounting arm. Tighten chassis bolts with 5/32" hex to 70 in-lbs.

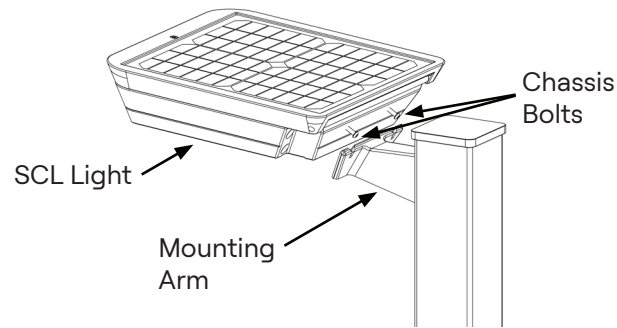

6. INSTALLATION COMPLETE

Once the solar panel receives light for the first time, the light will flash briefly then return to its normal operating profile. If this does not happen, please call us at 1 (844) 279-8754 for assistance.