



INSTRUCTIONS

Gondola Shelving (G-Series Lite)

G-Series Lite – Assembly Instructions

- 1.0 Insert the upright post into the leg as shown. Then, secure it with two (2) bolts through the holes at the bottom. Do the same for the center upright.
- 2.0 Insert casters or leveling feet into the ends of the legs.
- 3.0 Position the end upright post, center upright post and bottom rail as shown. Have one person hold the two post upright, while another person install the bottom rail.
- 4.0 Place the bottom rail into the bottom slotting of the upright and secure it with thumb screws on both posts.

STEP 1

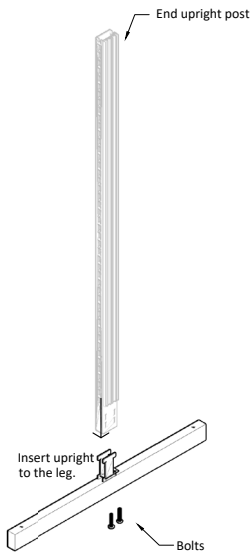


FIGURE 1.0

STEP 2

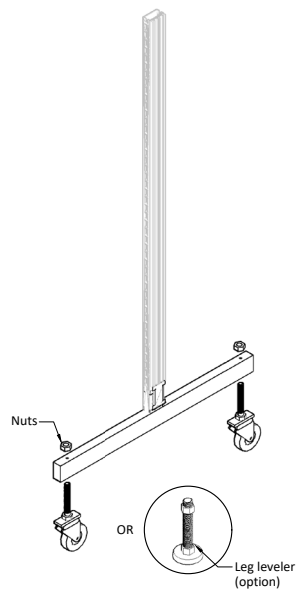


FIGURE 2.0

STEP 3

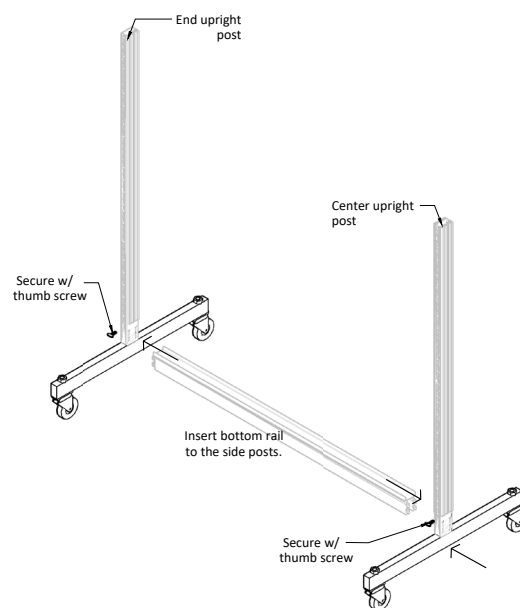


FIGURE 3.0

STEP 4


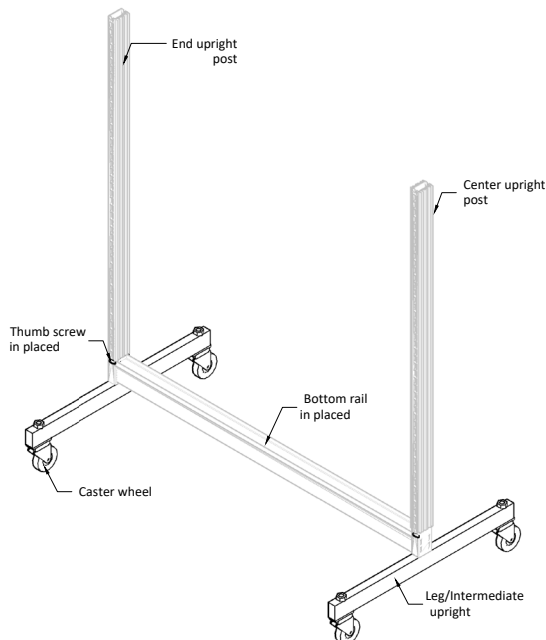



FIGURE 4.0

PARTS ASSEMBLY INCLUDED

- 1 - End upright post w/ T-leg
- 1 - Bottom rail w/ 2 thumb screws
- 1 - Center upright post w T-leg
- 1 - Top rail1 - End frame display w/ 2 screws & 1 hex key
- 4 - Leg leveler (standard)
- 4 - 2x swivel casters w/ lock, (optional)
- 2x swivel casters w/ no lock (optional)
- Pegboard for G-Series Lite shelving and pegboard for end display (optional)

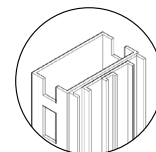

End upright post

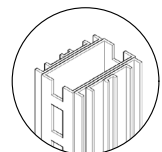

Center upright post

G-Series Lite – 4 Way Display


- 1.0 Position the panels on base as shown, align the holes from the top left and bottom side of the panel. The holes must be aligned to the perpendicular panel. Insert casters or leveling feet into the ends of the legs.
- 2.0 Position the panels to form 2 "T" shapes and secure it with bolts through the holes at the top and bottom as shown.
- 3.0 Next place the 2 "T" shape panels and connect as shown in figure 3.0 to create square form in the center. Align the holes and secure with top and bottom bolts.

PARTS ASSEMBLY INCLUDED


- 2 pairs – 4 grid panels
- 1 – top cap
- 8 – bolts w/1 hex key
- 4 – 2x swivel caster w/lock
- 2x swivel caster w/ no lock

Shelf and accessories (optional)

STEP 1

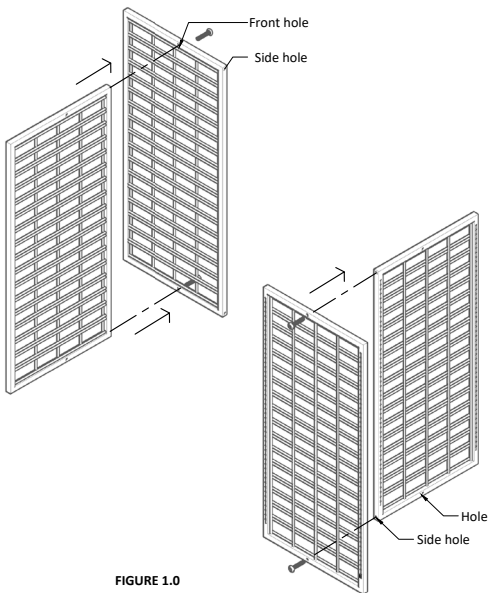

STEP 2

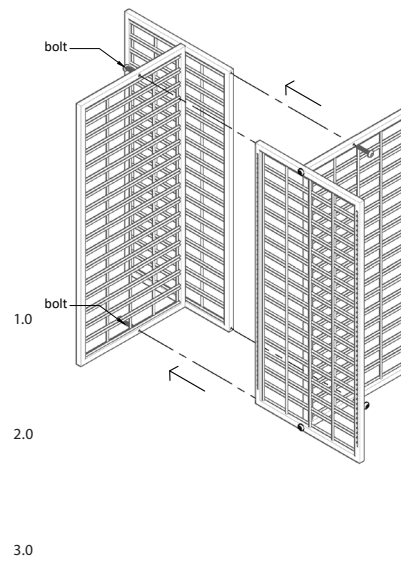

STEP 3

