
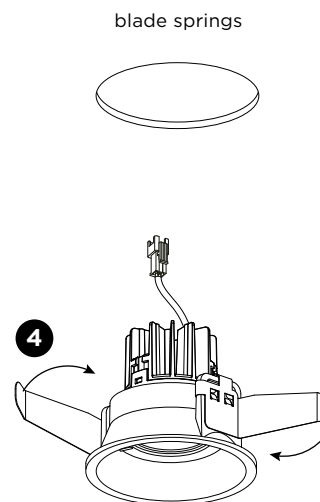
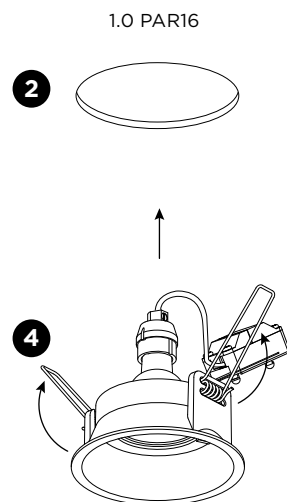
 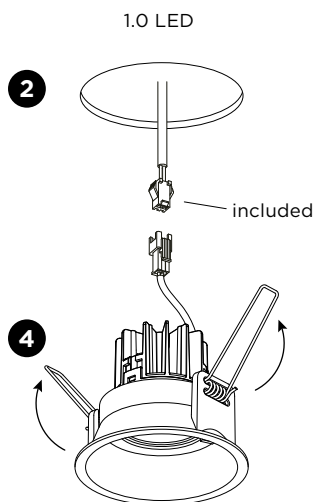



Driver must be powered off before connecting the cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



DIMENSIONS

 
1.0 LED wire springs




1.0 PAR16 wire springs



 1.0 LED blade springs



 1.0 PAR16 blade springs



MOUNTING INSTRUCTION

 
- Put the LED module in the mounting set by locking the lamp ring in the housing by turning it a quarter clockwise.
- Make a hole in the ceiling according to the prescribed dimensions.

3 POWER CONNECTION

LED Always use a driver according to the specifications of the LED module.


Single connection

220-240V



Multiple connection

 220-240V



PAR16

 
Single connection

100-240V



Multiple connection

100-240V



- For wire springs:
Push the springs upwards and insert the fixture in the ceiling hole.

 

For blade springs:
Push the springs towards the fixture when inserting the fixture in the ceiling hole.



DISMOUNTING INSTRUCTION

Light source

- 1 Remove the fixture from the ceiling and disconnect the wires.
- 2 Hold and turn the front ring a quarter counterclockwise to remove the LED module.
- 3 Push at the three points to loosen the cover with lens.
- 4 Unscrew the holder or light source to remove the light source.

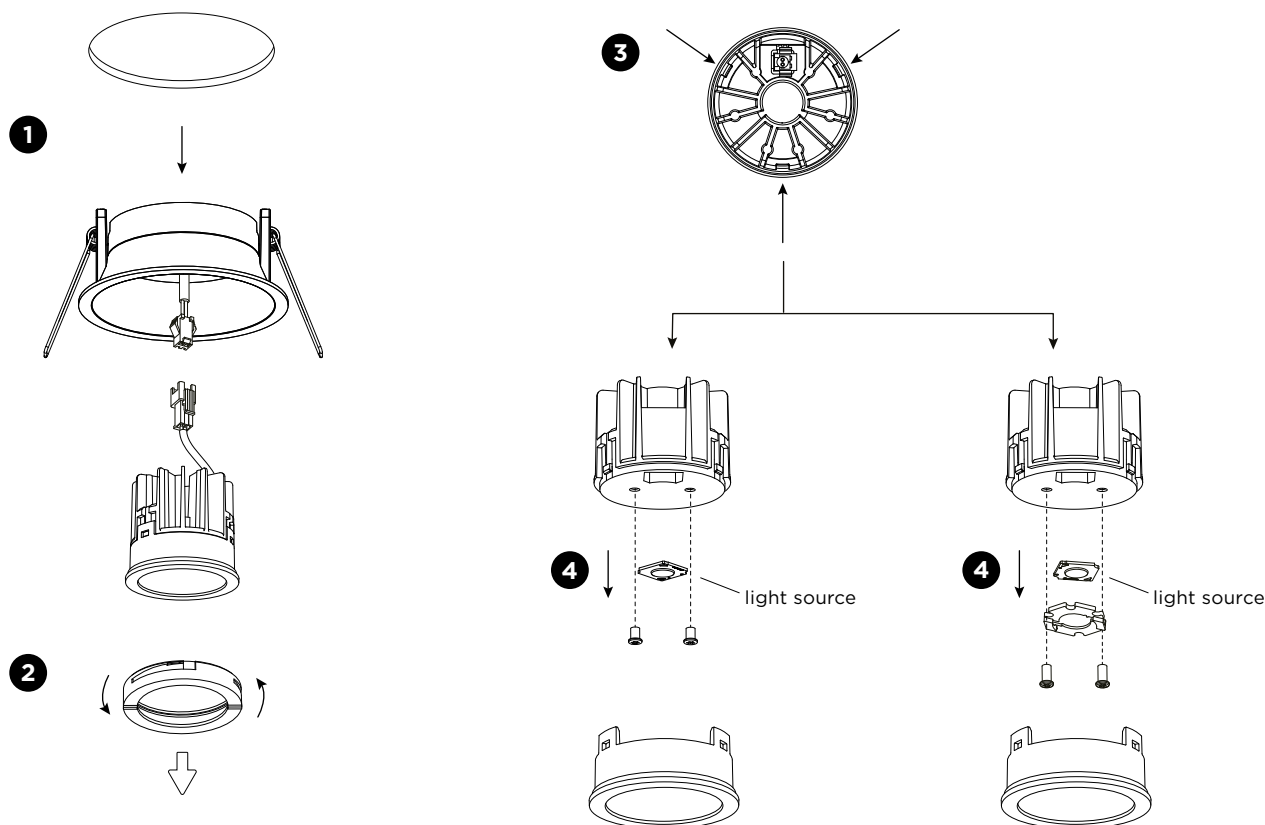

The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



Use green electricity to light up your luminaire.