

HEXO CEILING



INSTALLATION INSTRUCTIONS | JANUARY 2026

2.0 LED


Double LED module.

2.0 PAR16

Two bases are connected together by means of a spacer bracket.

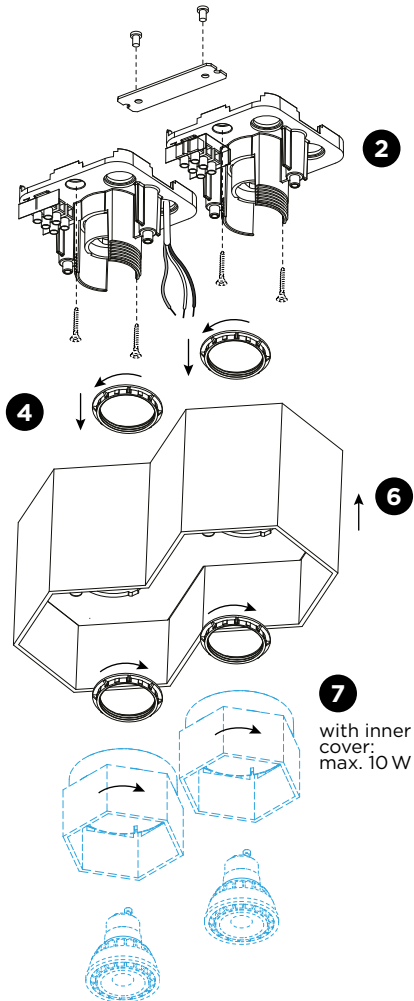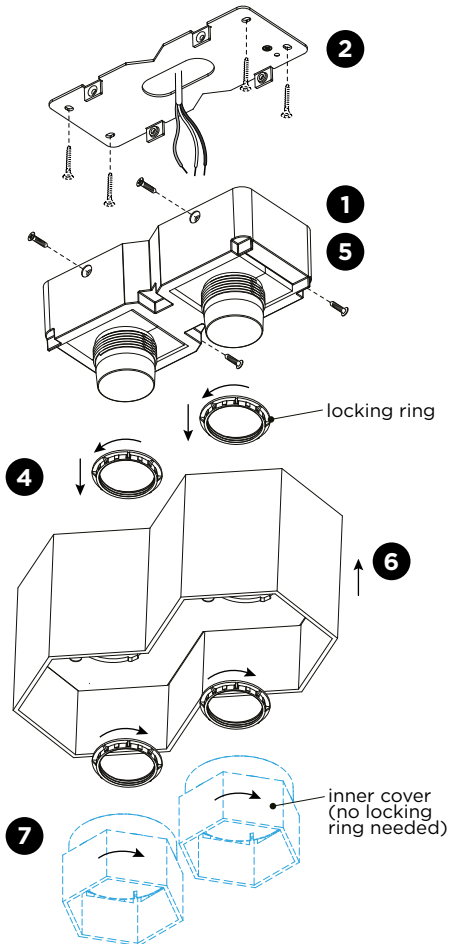

DIMENSIONS

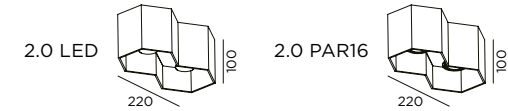


MOUNTING INSTRUCTION

- For LED: remove the mounting bases from the LED modules by loosening the socket screws.
For PAR16: attach both bases to each other by using the bracket and screws (supplied with the cover).


- Mount the bases on the ceiling with screws (screws are not included).

- POWER CONNECTION**
Connect to 220-240V.

LED

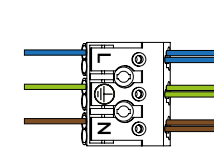


PAR16

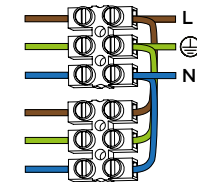


- Unscrew the locking rings.
- For LED: fix the LED modules on the bases with the socket screws.
- Attach the covers by screwing the locking rings.
- OPTIONAL inner cover**
Put the inner covers in the outer covers by screwing.

Mounting base:

2.0 LED


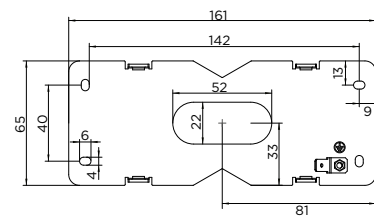


2.0 PAR16

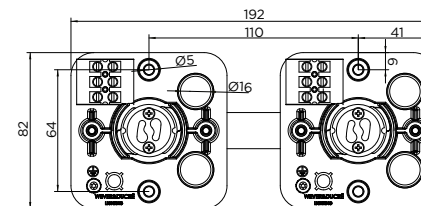

HEXO CEILING

INSTALLATION INSTRUCTIONS | JANUARY 2026

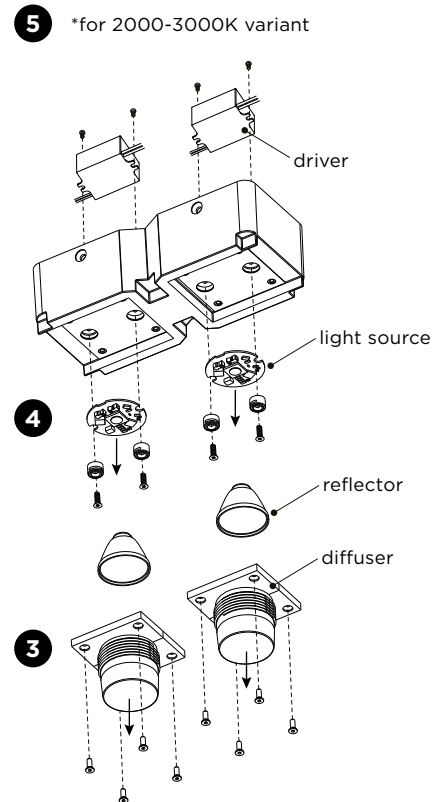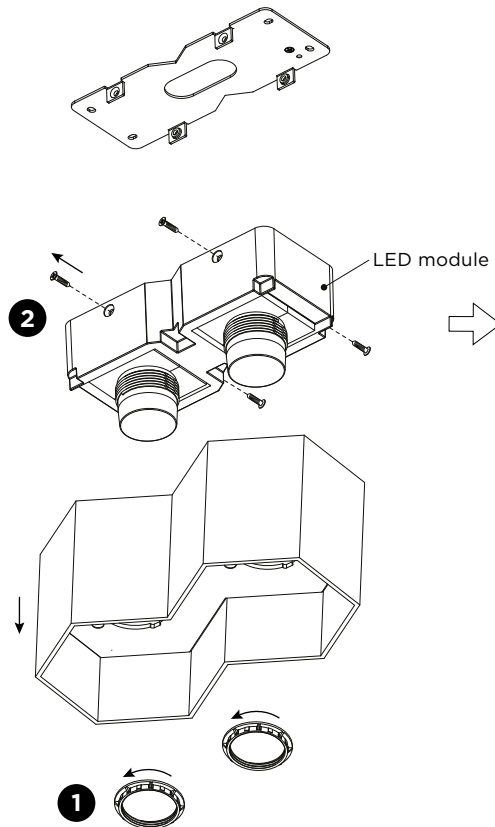


DISMOUNTING INSTRUCTION

Light source & driver

- 1 Unscrew the locking ring or inner cover and remove the cover.
- 2 Remove the four socket screws and disconnect the wires to dismantle the LED module from the base.
- 3 Loosen the screws and remove the diffuser(s) and reflector(s).
- 4 Disconnect the wires, loosen the screws and remove the light source(s).
- 5 *For 2000-3000K variant:
Loosen the wires and unscrew the driver(s) to remove it/them.



 The driver can be replaced by the end user.*




The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.

This luminaire contains a light source with the corresponding energy class:

colour temperature	Energy class
2700K/3000K	A ↑ G D
2000-3000K	A ↑ G F

*only applicable on the 2000-3000K variant

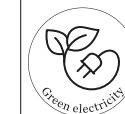

Use green electricity to light up your luminaire.