





CAUTION - Only trained and certified technicians should service this unit. ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES.

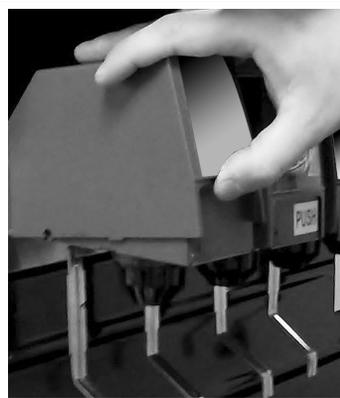

1. Remove Cover

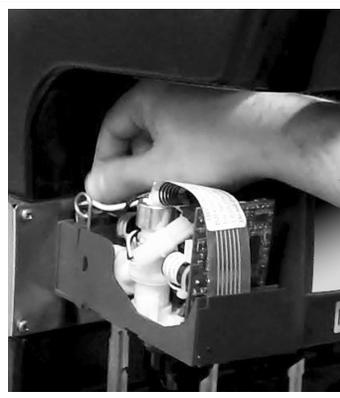


2. Close Backblock



3. Dispense to release pressure




4. Unplug Power Connector

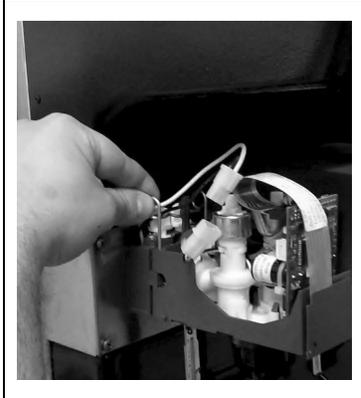


5. Remove Retaining Spring




6. Remove Valve

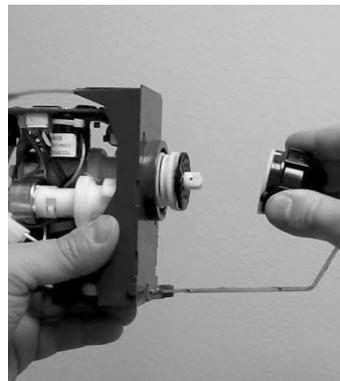


7. Remove Nozzle/Diffuser

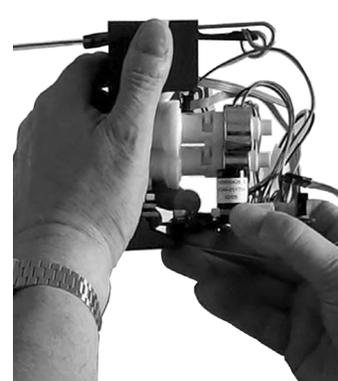

8. Unplug Keypad & Remove PCB

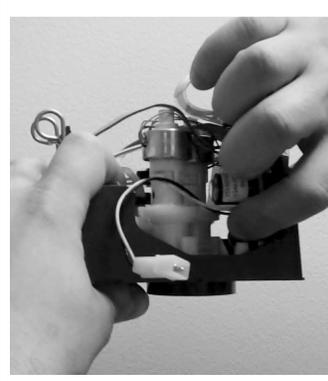


9. Remove Assembly by Pressing Tabs & pulling the assembly out of the base.

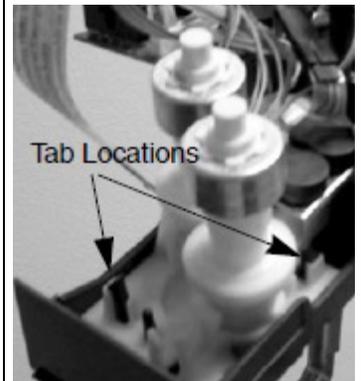

10. Tab Locations



11. Remove the Syrup Module

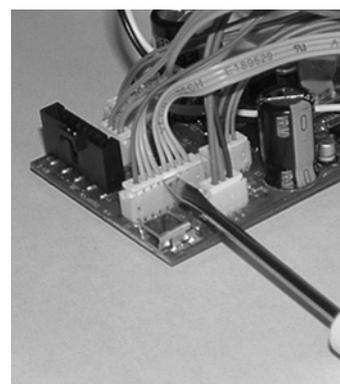

12. Using a small screwdriver, remove the syrup connectors from the PCB




13. Prepare the replacement kit




14. Replace the quad ring




15. Insert conn. in proper locations See next two figures for scheme

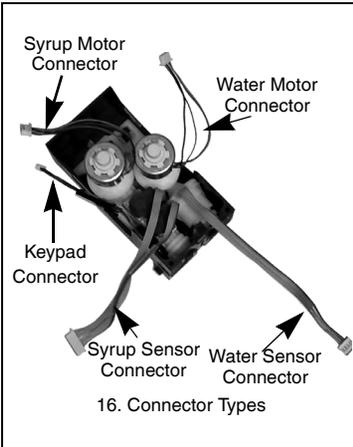

16. Connector Types

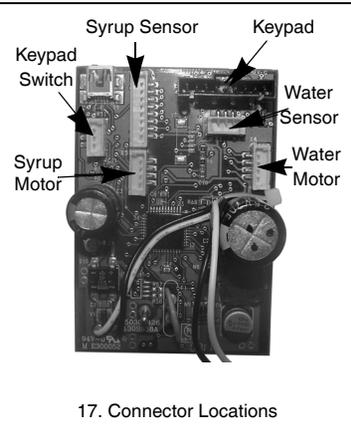


17. Connector Locations

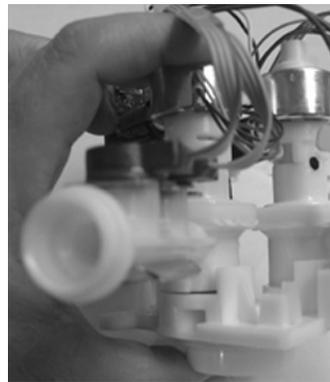


18. Place new syrup module into body & rotate to engage




19. Align PCB w/ slots and push down into base

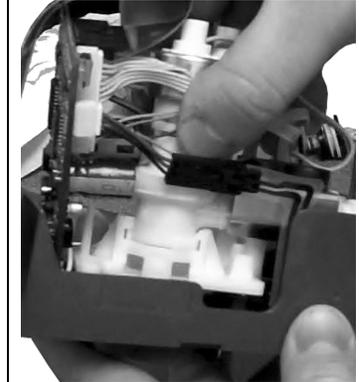

20. Snap assembly back into base

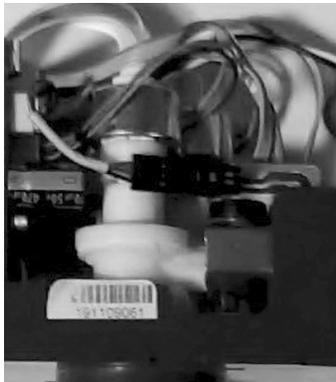

21. Position Connector below motor shell.

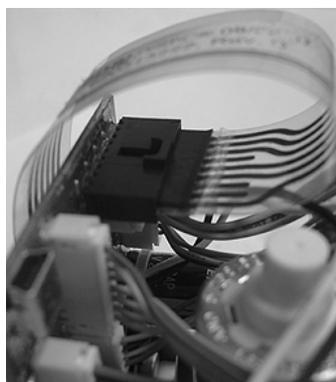


22. Reconnect keypad connector to PCB




23. Replace diffuser and nozzle



24. Replace valve onto the unit

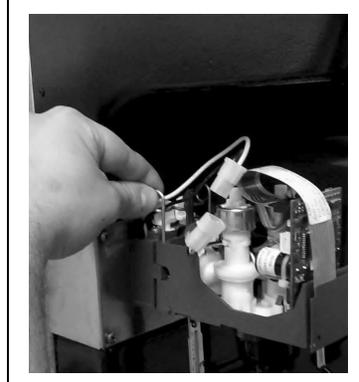

25. Press down the retaining spring.

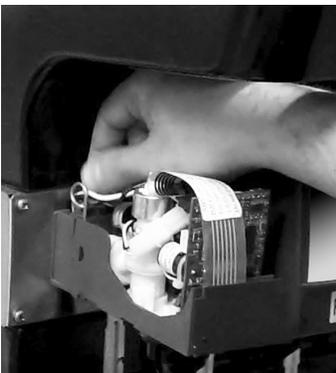

26. Open the Backblocks.



27. Reconnect Power Connector

28. Setup the valve using the Tomcat setup device. Refer to the Tomcat manual for details. (Part No. 620920851INS)

29. For Portion Control Valves:

Check and verify that portion sizes are correct. If not, perform the manual portion procedure. (Refer to TomCat manual for details.)

For Lever or Pushbutton Valves:
Dispense product for 4 to 5 seconds.

If problems are encountered, contact Cornelius Technical Support at 1-800-238-3600.