
UP 3-leg Installation Instructions





Step 1: INSTALL FEET AND MOUNTING BRACKETS TO LIFTING COLUMNS


- Use the provided machine screws.
- Fasten the machine screws by hand and tighten using an allen wrench.

NOTE: Both sides of the mounting brackets do not have the same size holes. The side with larger holes mounts to the lifting columns using the machine screws. The side with smaller holes mounts to the UP- table using wood screws. The machine screws do not fit through the smaller holes.

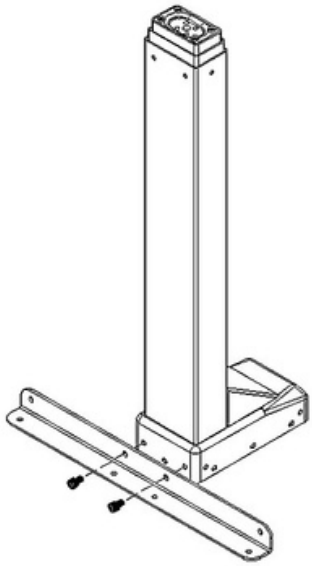

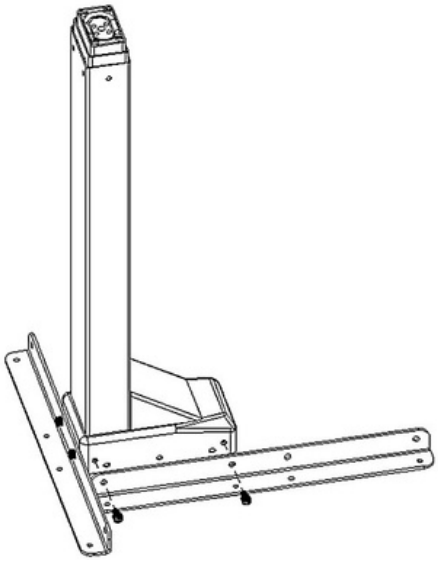

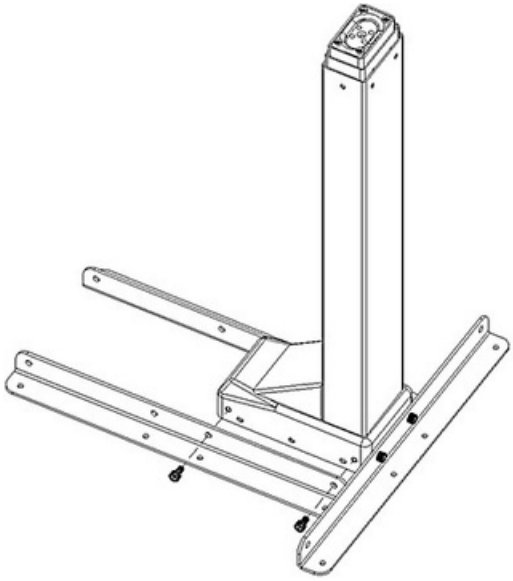

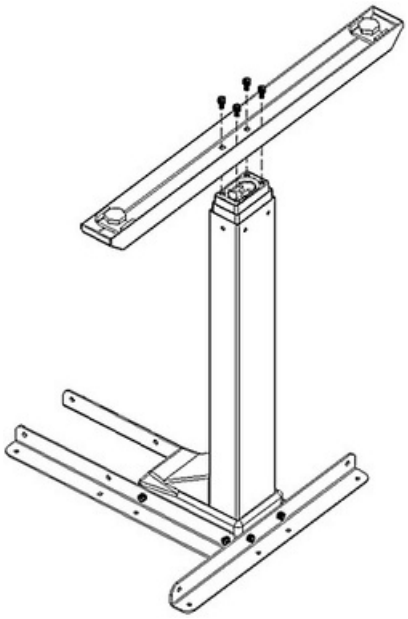

Step 2: MOUNT UP-BASES TO THE TABLE


- Use the provided wood screws.
- The UP-bases should never be mounted farther apart than 60” from the middle UP-base.
- For 2-piece tables – install UP flat plates on the seam of the larger side.


Step 3: MOUNT CONTROL BOX AND HANDSET TO THE UP-TABLE


- Use the provided wood screws.
- The Control Box can be mounted anywhere on the underside of the UP-table. Mounting the control box tucked behind an UP-base is most ideal.
- The handset can be mounted anywhere on the underside of the UP-table’s front edge.


Step 4: CONNECT CABLES


- Connect the UP-bases and Handset to the Control Box using the provided cables as per the following diagrams. Adhesive backed cable clips can be used to secure the cables and prevent sagging. Once clips are positioned, then secure with wood screws.
- For 2-piece tables – don’t connect any cables on the smaller side return until it is upright.

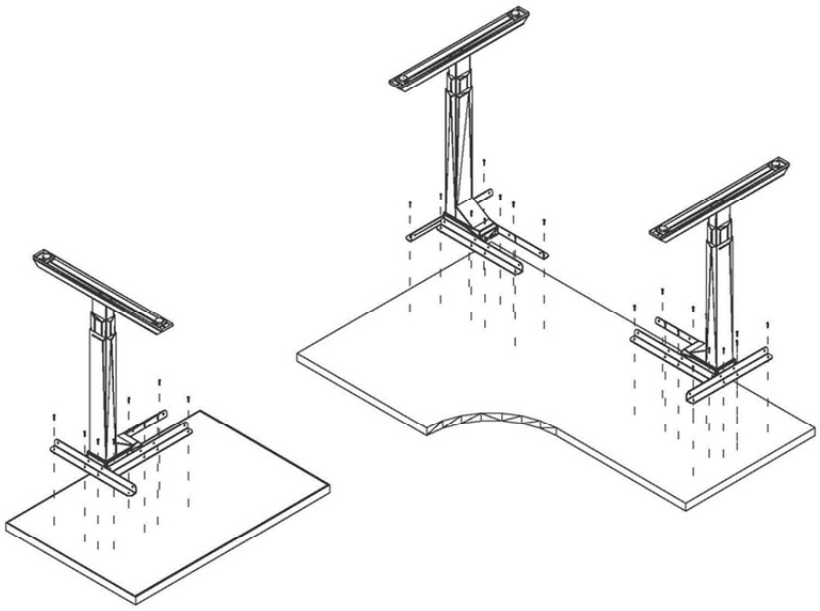


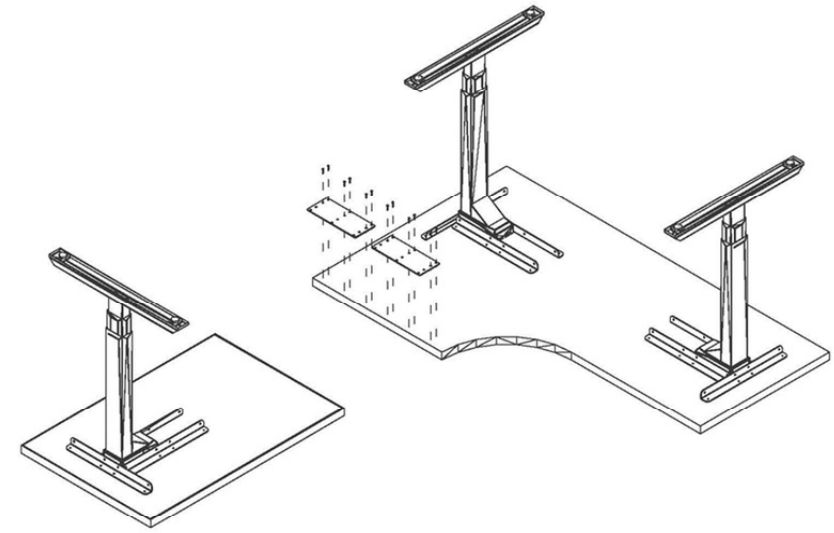


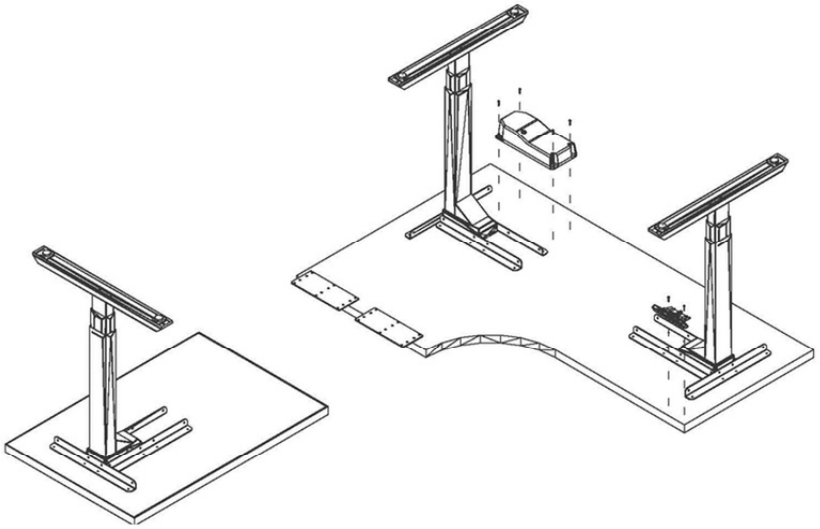

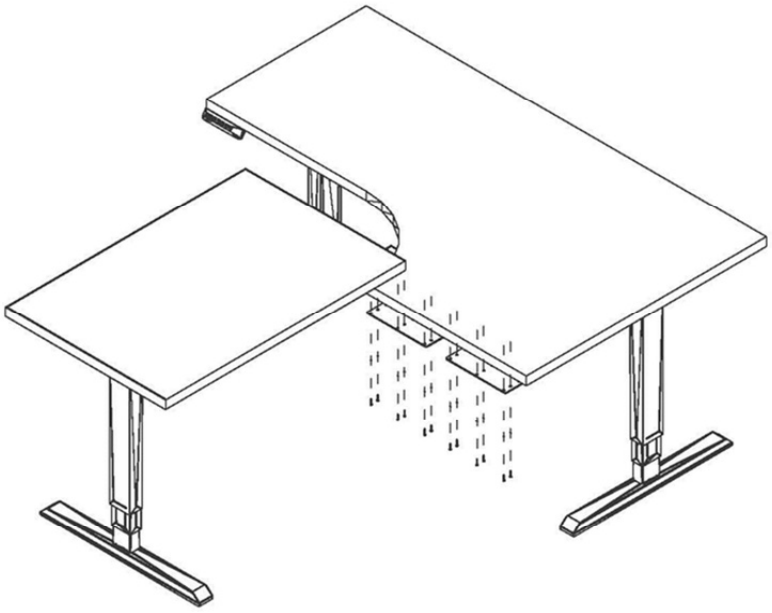

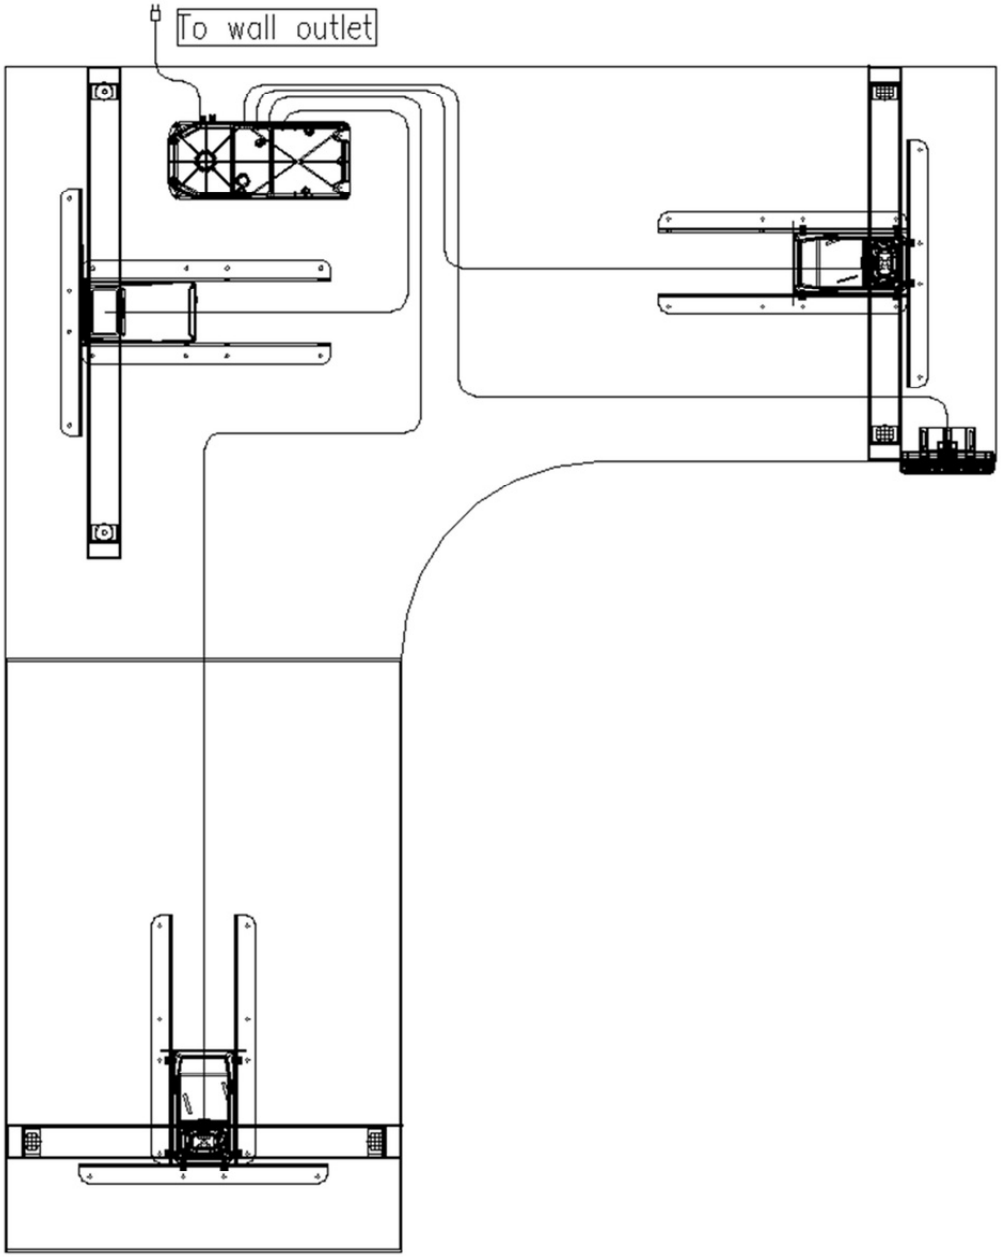
To wall outlet

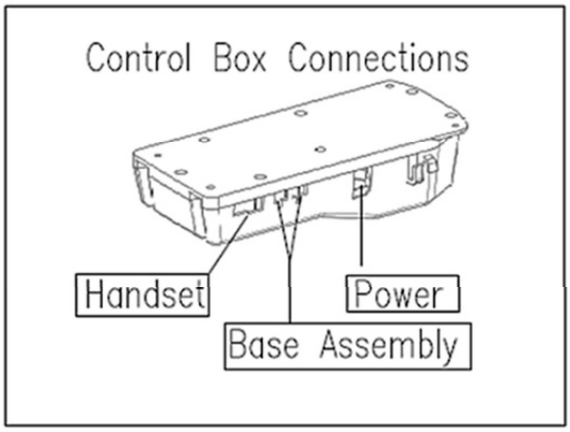
Control Box Connections
Handset
Power
Base Assembly

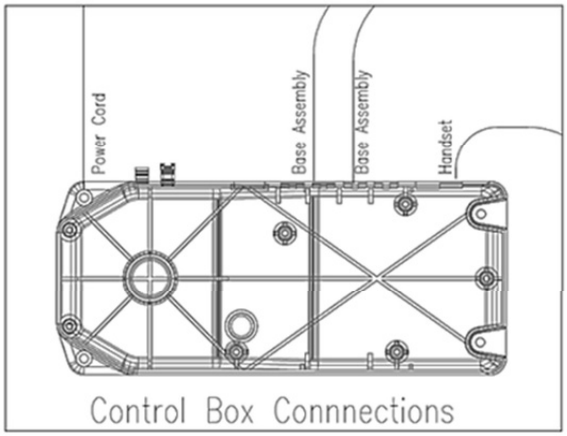
Power Cord
Base Assembly
Base Assembly
Handset
Control Box Connnections

Step 5: TURN THE UP-TABLE UPRIGHT

- Use two people and proper lifting techniques to prevent injury.
- For 2-piece tables – Mount the smaller side return to the UP flat plates using wood screws. This should be done after the UP-table is upright.
- Adjust the leveling glides on the feet as needed to ensure the UP-table is level.
- For 2-piece tables now finish connecting the cables and secure them as needed to maintain clean lines and prevent sagging.
- Plug the power cord into a 110V outlet.
- Make sure obstacles are not in the UP-table's path.
- Make sure cords have enough slack to accommodate the change of height.

Step 6: INITIALIZE UP-TABLE – RESET PRIOR TO USE

- Push and hold the DOWN button on the handset until the UP-table reaches it's lowest height. Release the DOWN button.
- Push and hold the DOWN button for approximately 5 seconds. Release the DOWN button. Continue doing this until the UP-table slightly rises and stops. When the UP-table slightly rises and stops the RESET procedure is complete.
- To program the presets – use the UP/DOWN buttons to reach your desired height, then press M followed by the preset you want to save (1 – 4).

TECHNICAL SPECIFICATIONS

- Height Range: 24.4 –49.6"
- Speed: 1.5"/second
- Weight Limit: 525 lbs.
- Duty Cycle: 10%maximum;2-minutesON/18-minutes OFF

TROUBLESHOOTING

- If the UP-table is not functioning properly it may need to be RESET. Follow the RESET procedure outlined in Step 6.
- If the handset displays an error code check that all connections are secure and perform the above RESET procedure.
- If the handset displays HOT, let the UP-table cool down for 20 minutes.
- If the UP-table is not level adjust the leveling glides on the feet.

NOTE: The UP- table might need RESET if ever unplugged or if any connections are disconnected.



SAFETY AND WARNINGS

- Inappropriate use of this product may cause property or bodily injury.
- Not intended for use by children or persons who require supervision.
- Make sure obstacles are not in the UP-table's path and all cords are of appropriate length.
- Do not open any of the UP-table's components – Risk of electric shock.
- Risk of Pinch Point – the UP-table should have a minimum of a 1" gap around all sides.
- Do not sit, stand, or crawl on or under the UP-table.
- Keep all electrical components away from liquids.

LIABILITY: The manufacturer does not accept warranty/liability claims for damages caused by improper use.