

Jupiter 550 vertical with angular door


weight: 92 kg

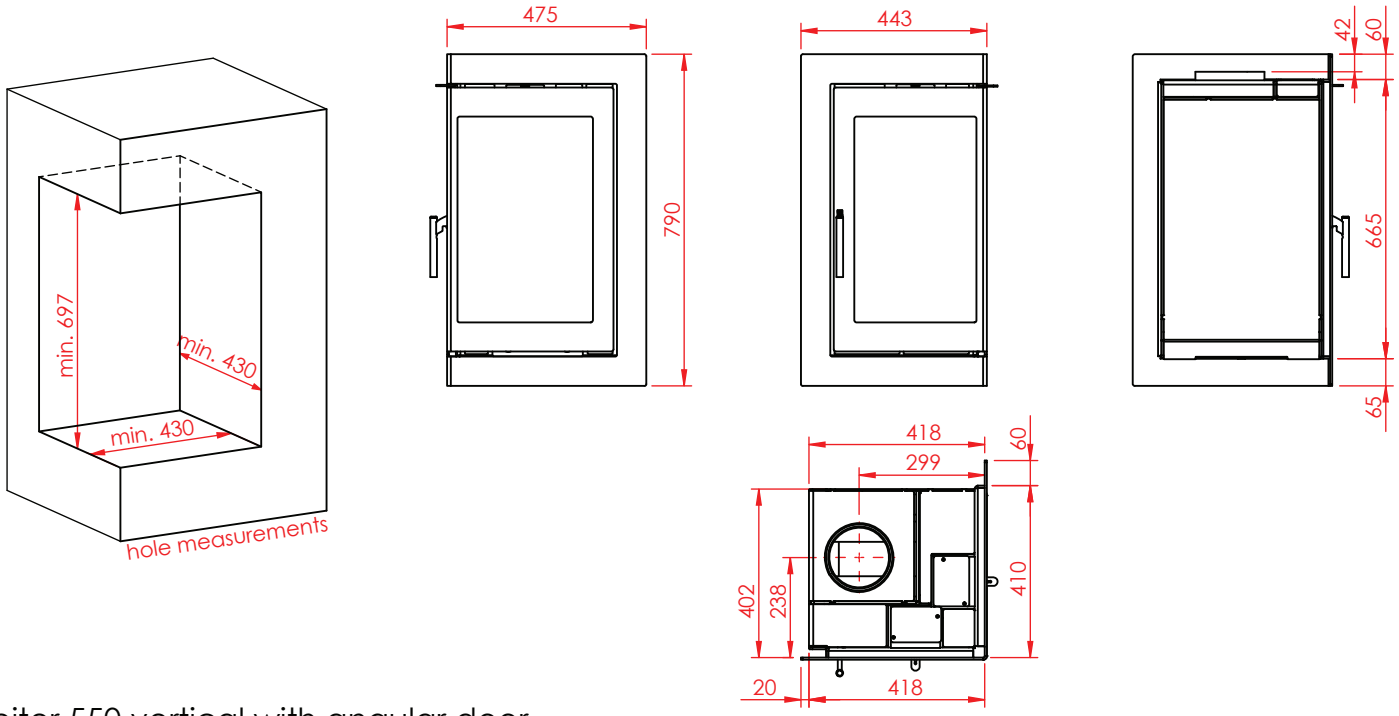

Jupiter 550 vertical with angular door

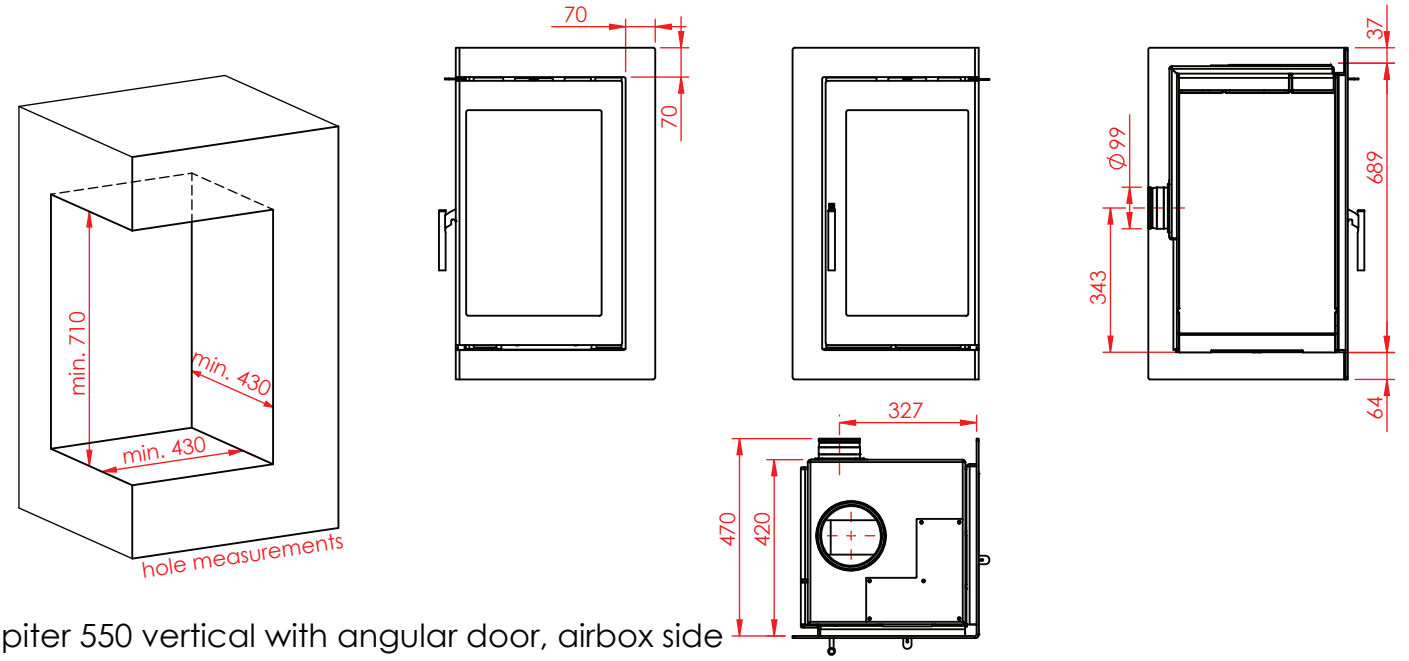


Jupiter 550 vertical with angular door, airbox side

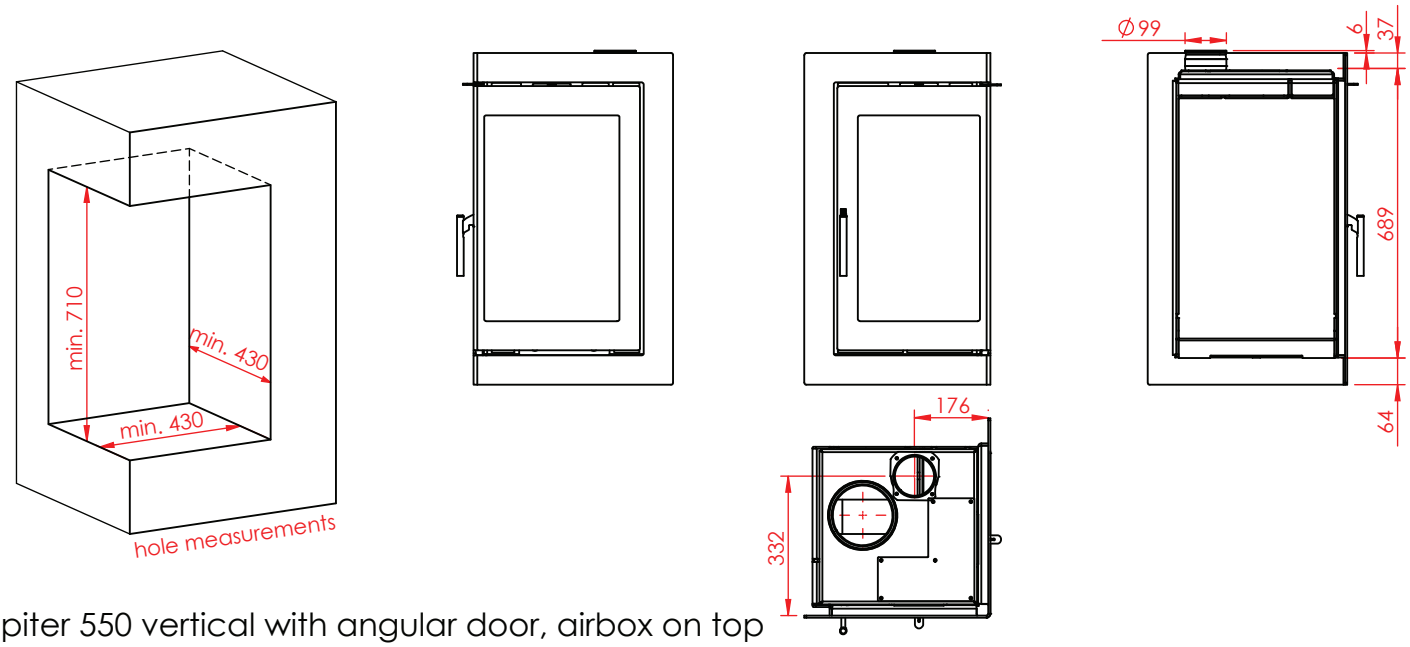



Jupiter 550 vertical with angular door, airbox on top

Clearance to combustible materials

Jupiter fireplace inserts with angular door	dS	dF note 2	dB note 2	dP	dP 5 note 5	dL note 3	dC note 4	dR	K note K
Jupiter 470 vertical	400	0/650	300	1100	850	700	400	0	150
Jupiter 550 vertical Small	400	0/650	300	1100	850	700	400	0	150
Jupiter 550 vertical	400	0/650	300	1100	850	700	400	0	150
Jupiter 470	400	0/650	300	1200	850	700	400	0	150
Jupiter 550	400	0/650	300	1200	850	700	400	0	150

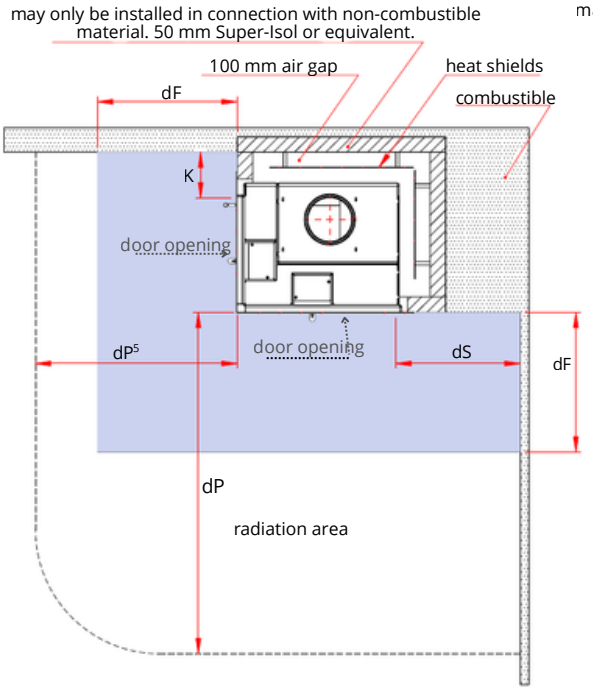

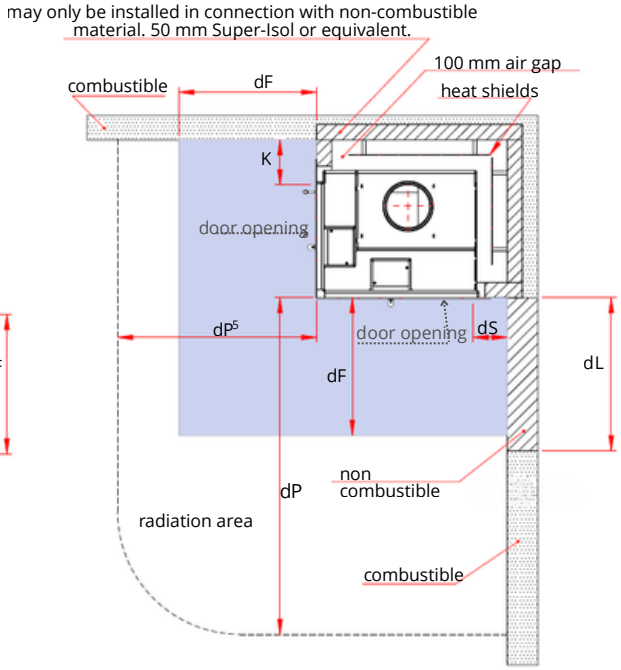

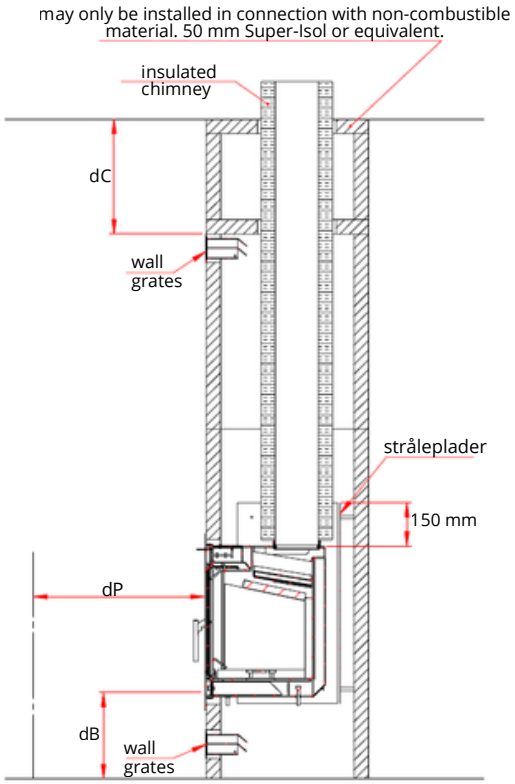

Note 2: safety distance to combustible floor
- measured from the floor to the underside of the door edge:
dB ≥ *300 mm* = ***dF****: 0 mm*
dB < *300 mm* = ***dF:*** *650 mm*

Note 3: measured from the front edge of the door when ***dS*** < 400 mm

Note 4: measured from the top edge of the wall grates

Note 5: side glass furniture clearance


Note K: measured from the door edge

Heat shields: on two sides, positioned from the bottom of the stove up to 150 mm above the top of the stove.

To ensure correct air circulation within the fireplace cavity, at least 470 cm² of ventilation must be provided below and 630 cm² above the insert. The ventilation openings must be positioned as high as possible, but at least 400 mm from the ceiling.

Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

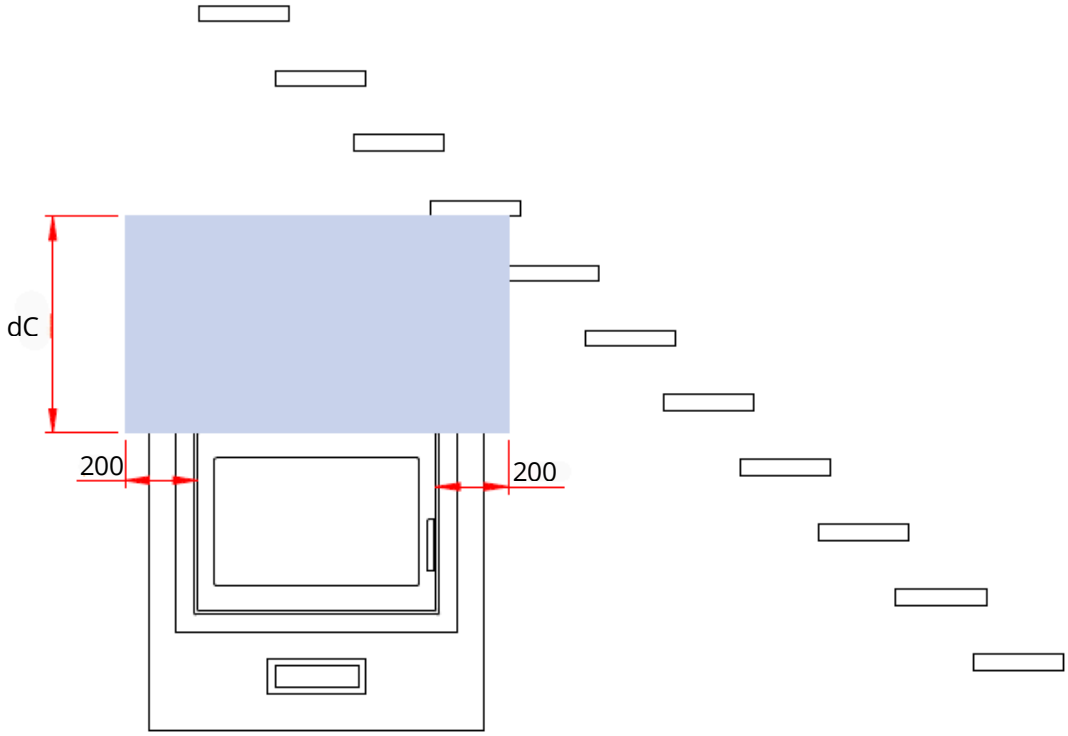

front view example at staircase