



# Jupiter 550 XL see through

weight: 188 kg

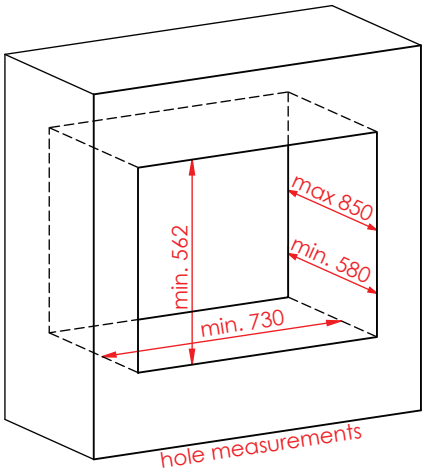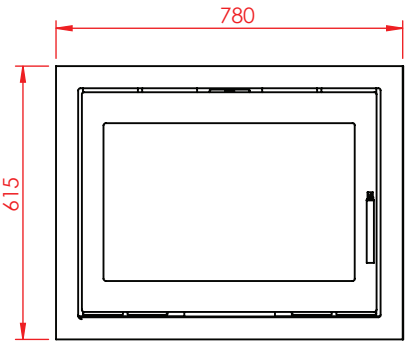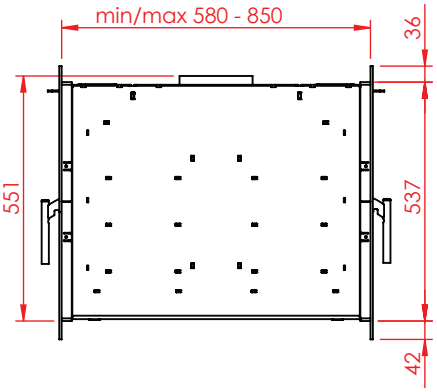


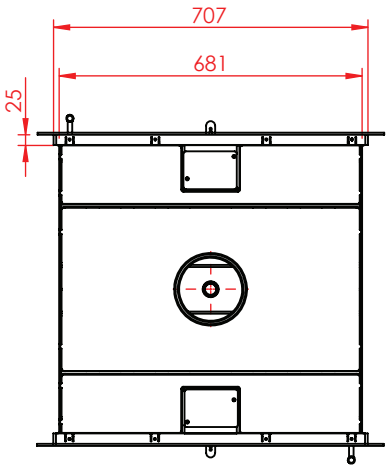



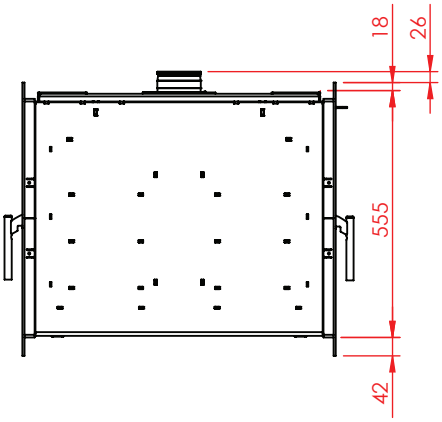



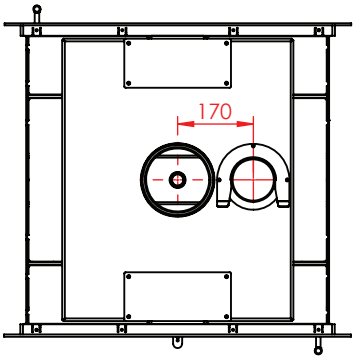


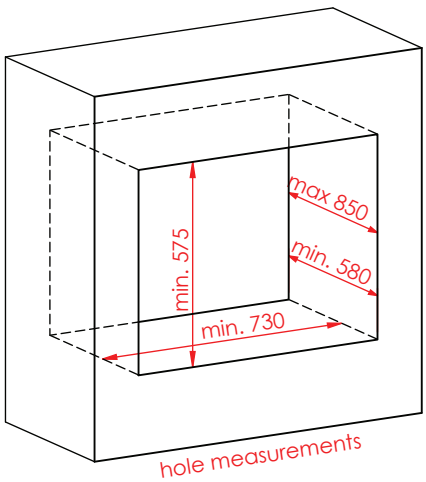

Jupiter 550 XL see through

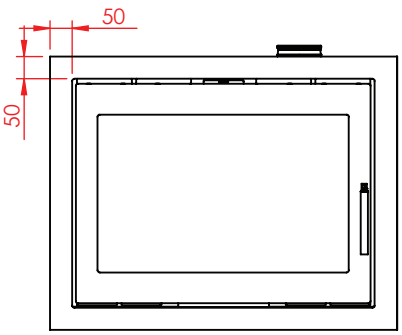





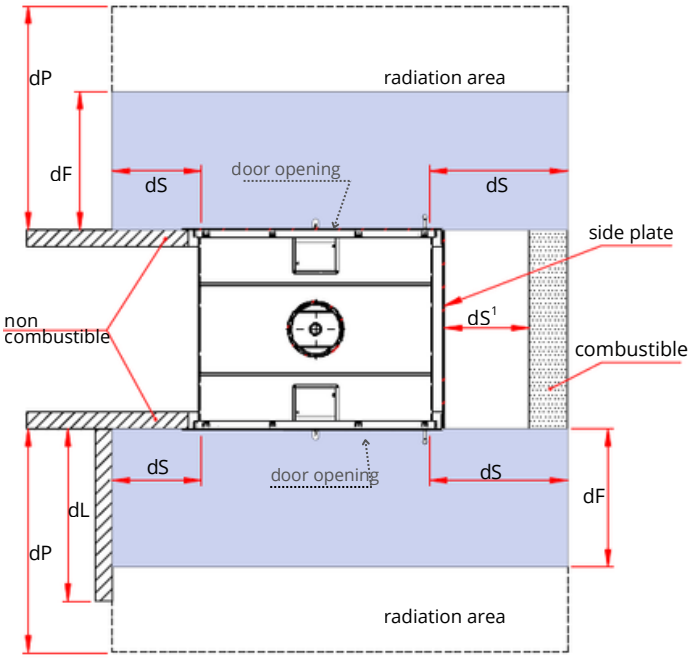



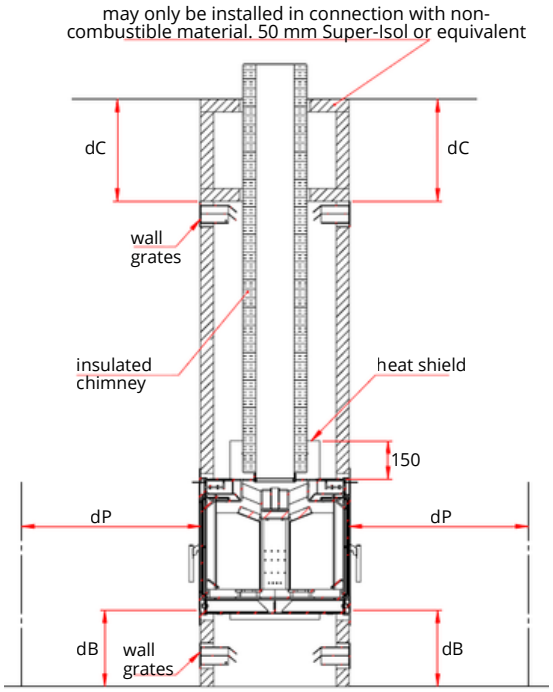

Jupiter 550 XL see through, airbox on top

# Clearance to combustible materials

| **Jupiter fireplace inserts see through** | dS | dS[1] note 1 | dF note 2 | dB note 2 | dP | dL note 3 | dC note 4 |
|---|---|---|---|---|---|---|---|
| Jupiter 470 XL | 350 | 250 | 0/650 | 300 | 1200 | 700 | 400 |
| Jupiter 550 XL | 350 | 250 | 0/650 | 300 | 1200 | 700 | 400 |
| Jupiter 470-850 | 350 | 250 | 0/650 | 300 | 1200 | 700 | 400 |
| Jupiter 500-850 | 350 | 250 | 0/650 | 300 | 1200 | 700 | 400 |
| Jupiter 550-850 | 350 | 250 | 0/650 | 300 | 1200 | 700 | 400 |

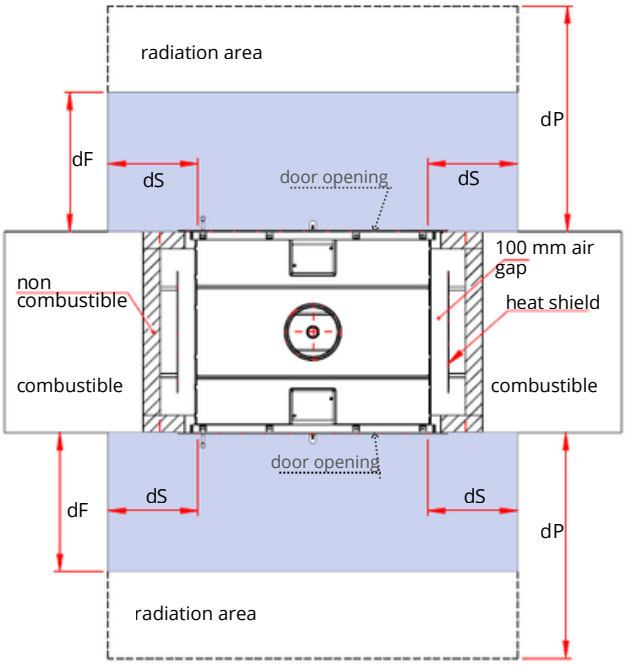


Note 1: dimension measured at a closed side plate
- measured from the edge of the door

*Be aware that the **dS** clearances in front of the insert must still be respected.*

Note 2: safety distance to combustible floor
- measured from the floor to the underside of the door edge:

***dB** ≥ 300 mm = **dF**: 0 mm*
***dB** < 300 mm = **dF:** 650 mm*

Note 3: measured from the front edge of the door when ***dS*** < 350 mm


Note 4: measured from the top edge of the wall grates

Heat shields: on all three sides, positioned from the bottom of the stove up to 150 mm above the top of the stove

To ensure correct air circulation within the fireplace cavity, at least 470 cm² of ventilation must be provided below and 630 cm² above the insert. The ventilation openings must be positioned as high as possible, but at least 400 mm from the ceiling.

# Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

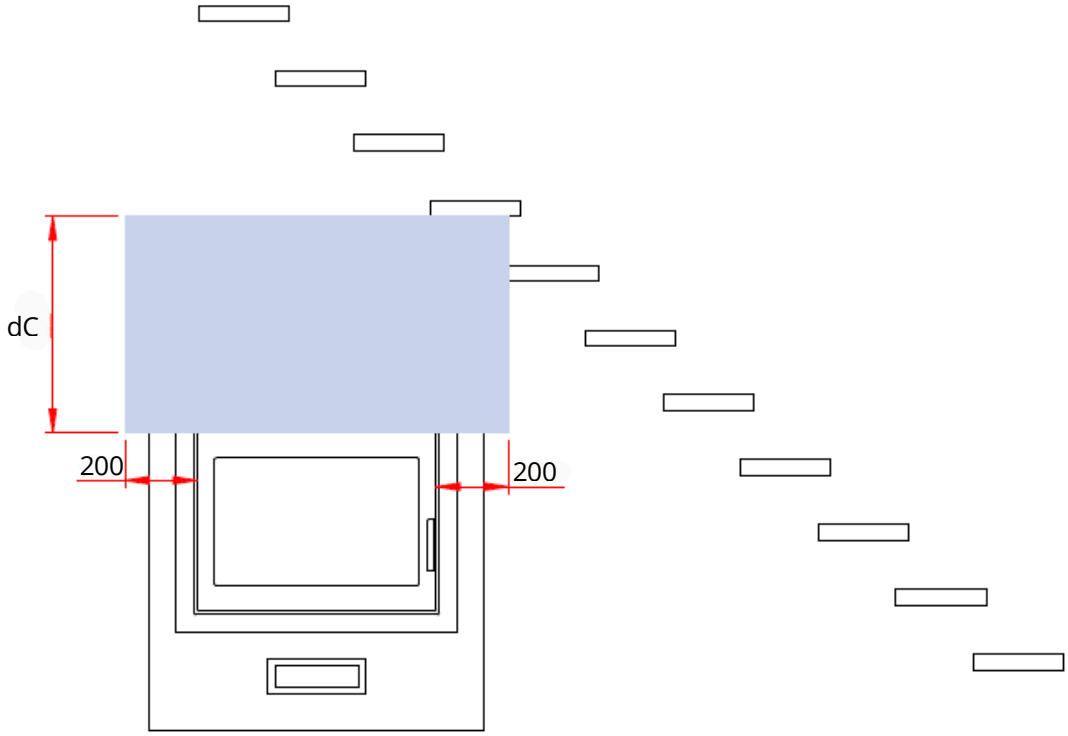


front view example at staircase