

Download User Manual at:
www.super-b.com

Version 1.4

# QUICK START GUIDE


**NOMIA SERIES**
12V100Ah | 12V160Ah | 12V210Ah
12V340Ah

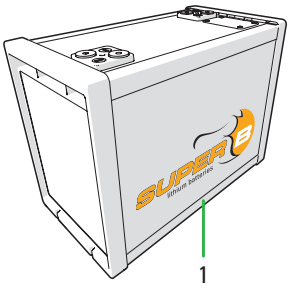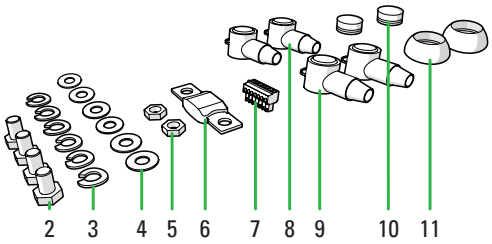




## A — CONNECTING A NORMAL RELAY

**1**




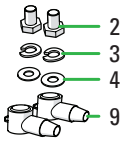


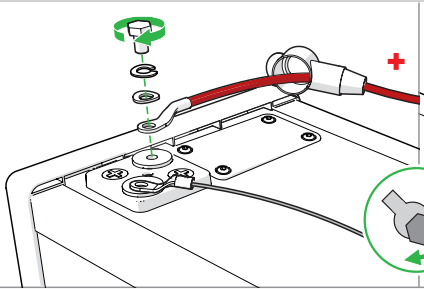
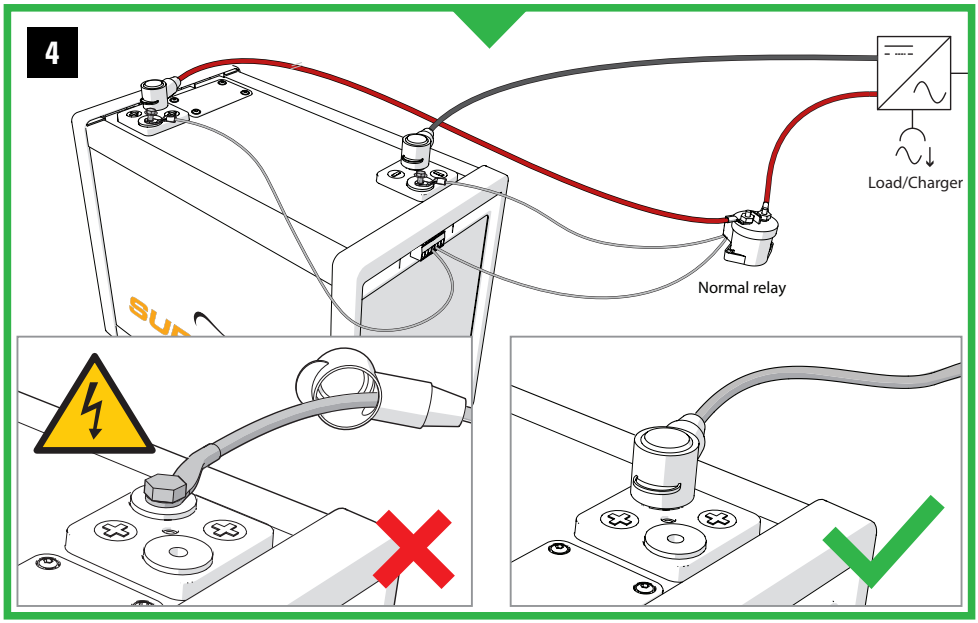

**2**

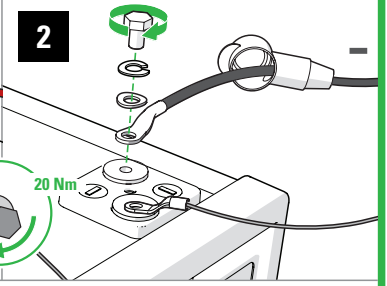




**3**

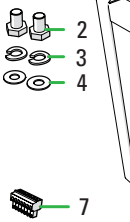


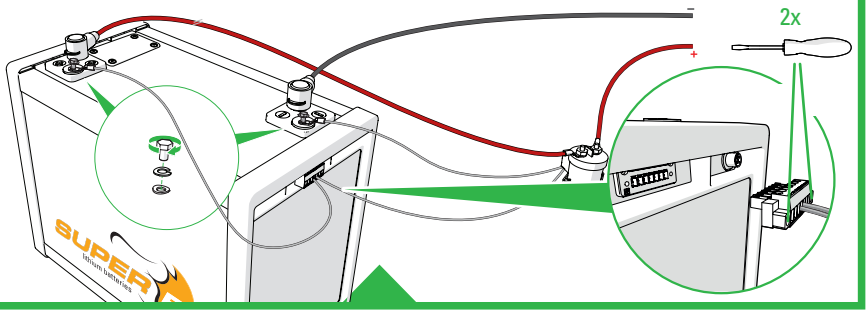



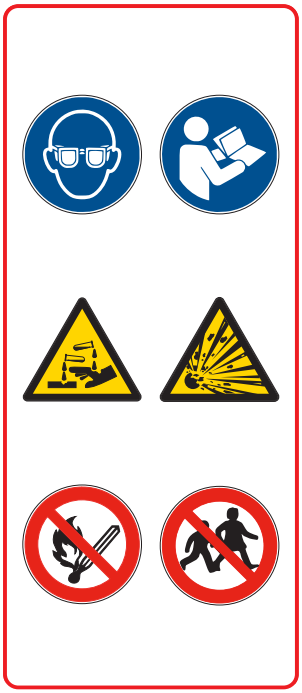

4
Load/Charger
Normal relay

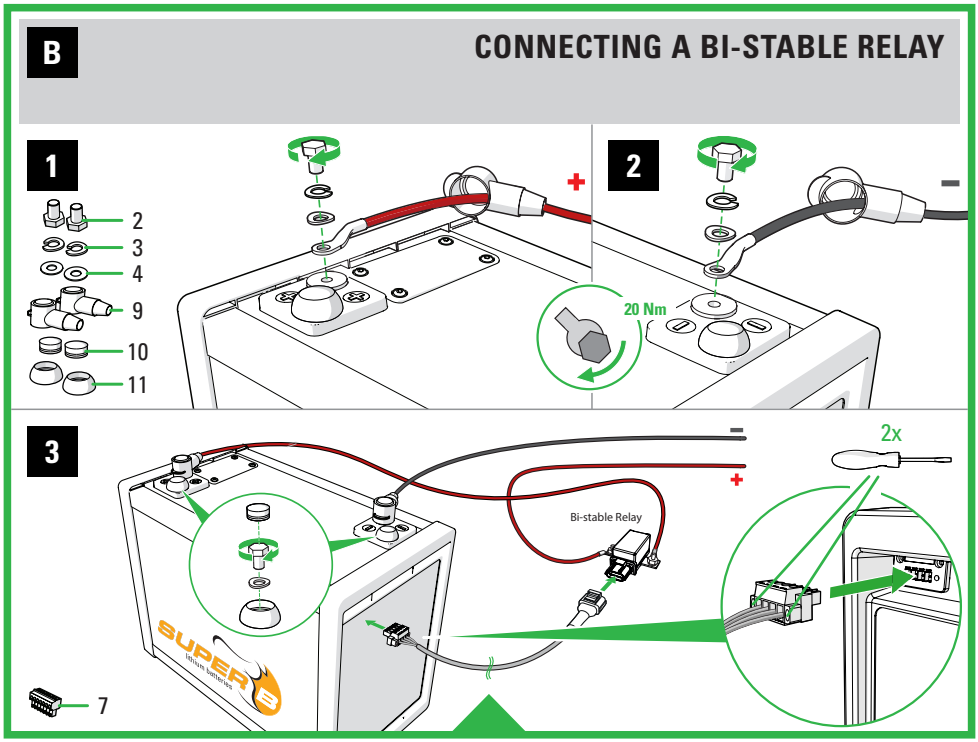

B
CONNECTING A BI-STABLE RELAY
1
2
3
4
9
10
11
+
20 Nm
2
3
–
+
Bi-stable Relay
2x
7

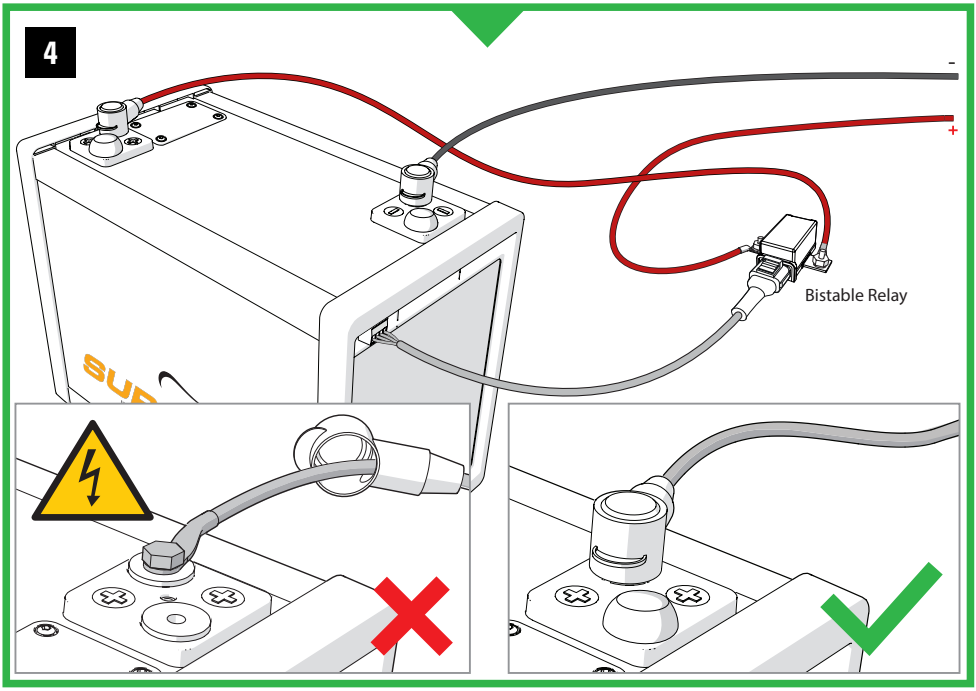

4
-
+
Bistable Relay

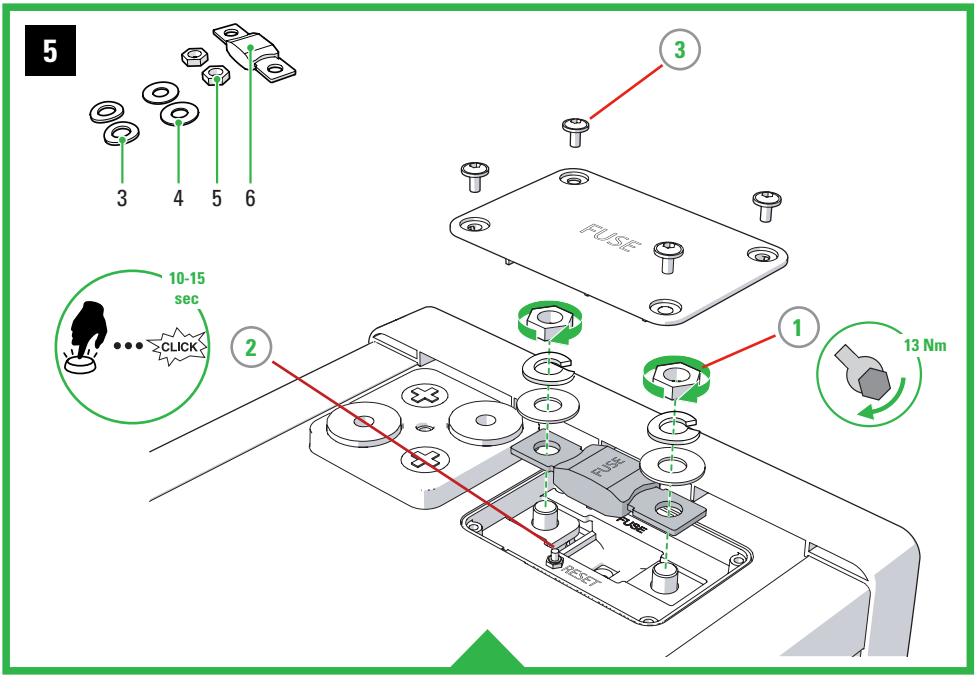
5
3
4
5
6
3
FUSE
10-15
sec
CLICK
2
1
13 Nm
FUSE
RESET

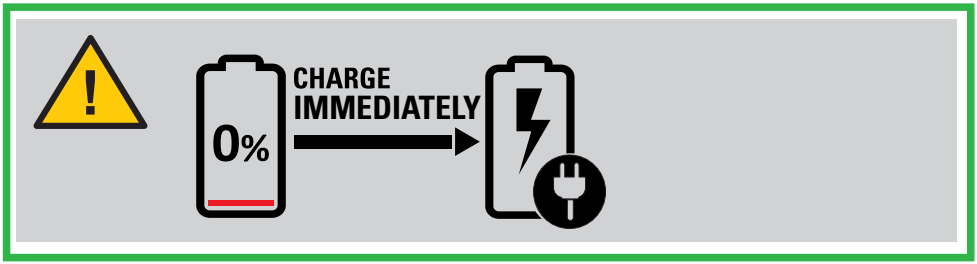

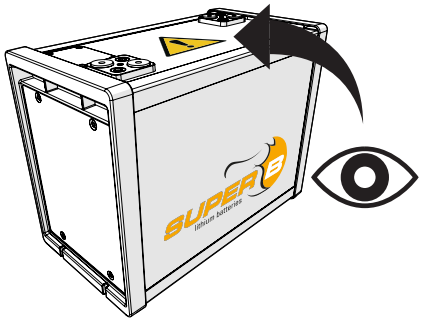


Download User Manual at:
www.super-b.com

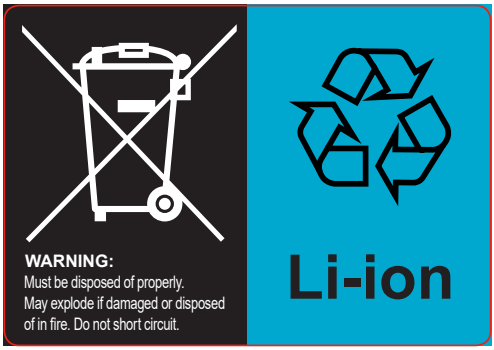Version 1.4

SUPER B lithium batteries

Europalaan 202
7559 SC Hengelo(Ov)
The Netherlands
T+31(0)88 00 76 000

Contact us:
info@super-b.com

Visit our website
www.super-b.com