
KHIND®
Experience More

USER MANUAL

FRONT LOAD WASHING MACHINE

WM1248

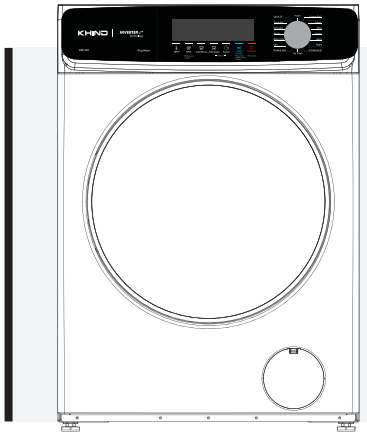

KHIND CARE Mobile App

Download to register for E-Warranty & enjoy hassle-free after-sales services.

0378392090 (Hotline) | 0182233389 (WhatsApp only)

khind.com.my

IMPORTANT

Please read this manual carefully before operating this product.
Keep this manual handy for further reference.

P/N: 40-52093-00

⚠ Safety Precaution Information

Safety & Warning Information

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
   Children should be supervised to ensure that they do not play with the appliance.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. Do not obstruct the ventilation openings in the base of the appliance with carpets, newspapers, tablecloths, curtains, etc.
4. This appliance is intended for **INDOOR HOUSEHOLD USE ONLY** and not intended for commercial, industrial or outdoor use.
5. This appliance is not to be used if industrial chemicals have been used for cleaning.
6. The lint trap has to be cleaned frequently. Lint must not to be allowed to accumulate around the drum.
7. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
8. Items garments that have been soiled or contaminated with substances such as vegetable oil, cooking oil, hair care products, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being washed in the washer.
9. Do not use chemical cleaner to clean the body cabinet.
10. Fabric softeners or similar products, should be used as specified by the fabric softener instructions.
11. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be washed in the washer.
12. Remove all objects from pockets such as lighters and matches.
13. **WARNING:** The appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
14. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
15. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the drum; in such a way that a full opening of the door is restricted.
16. Do not dismantle the unit. Installation and maintenance can only be done by a qualified technician. Refer "Installation" on page 6-9 for guideline.
17. Do not overload the appliance.
18. For maximum mass of laundry cloth and pressure of water tap, please see page 5.
19. Do not open the detergent compartment and door when the appliane is running.

To avoid injury of users or others or damage to properties, please observe the following safety precautions.

⚠ WARNING	
Electric Shock Hazards. 1. Please use a special power outlet with good grounding. 2. Please hold the power plug to insert pull out the power cord. Do not use a damaged power cord. When there are stains on the male tab of the power cord, please wipe them away with a dry cloth immediately. 3. Do not plug or unplug the power plug with wet hands. 4. After using and during maintenance & please unplug the power plug.	**Potential Fire/Electric Leakage Hazards.** 1. Do not place the machine near a fire or put lighted cigarettes, candles and volatile materials on the machine. 2. Do not spray water on the control panel of the machine. 3. Do not put the machine in moist or damp places. 4. Before using, please fix the drain hose and make sure the sewer outlet is not blocked.
Potential Burning Hazards at High Temperature. 1. The door glass will be heated during at a high temperature. Please do not touch it, especially by children. 2. When it is necessary to open the door during washing at high temperature, please open the door after the temperature has gone down to a safety level and the door is unlocked automatically.	**Potential Injury Hazards.** 1. Please dispose of the packaging materials after disassembly. Keep them out of the reach of children. 2. Children are not allowed to operate or play with the machine. 3. It the machine is not in use, please close the door tightly to prevent children from entering the washing / spin drum.
Potential Hazards of Damage to Machine. 1. Do not climb or put heavy objects on the machine. 2. Move/handle the machine only by two persons. 3. Non-professional persons are not allowed to repair or modify the machine automatically.	**Potential Hazards of Damage to Clothes.** 1. Do not wash waterproof clothes, such as raincoats, sleeping bags etc. 2. Only wash machine-washable clothes. For any questions, please observe the washing guidelines printed on the care labels of clothes.
Potential Explosive Hazard. 1. Do not wash or spin clothes with flammable materials such as kerosene, gasoline and diluting agents. 2. Do not operate the machine when there is a gas leak.	**When the power plug is unplugged, the door can be opened even if the water level in the drum is high. Thus, in any case, please check the water level in the drum before opening the door. If the water level is higher, please do not open the door to avoid unnecessary damage caused by water outflow.**

Disposal

If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.

This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Care & Maintenance

1. After using for a long time, please service the machine immediately. Good servicing practices may extend the service life of the machine.
2. Before servicing, please unplug the power plug to avoid dangers from happening.

Body

Please wipe the body with a soft and clean cloth every time after the machine is used. When there are serious stains, please wipe the body with a cloth dipped in appropriate detergents or soapy water.


(a) Do not spray water on the body directly.
(b) Do not wipe the body with chemicals such as putty-powder, diluting agents, gasoline and alcohol.

Door Seal

Please wipe stains and foreign matters such as thread chips away with a towel every time after using. If there are foreign matters such as pins in the groove of the door seal, please take them out.

Cleaning the Detergent Compartment


To prevent detergents becoming moldy on the wall of the detergent compartment, please clean the detergent compartment regularly.
Press the specified position and pull out the detergent compartment, wash it with water and put it back.



Self-cleaning of Drum (once a month is recommended)
After using for a long time, there may be stains in the drum. The self-cleaning program can be used to clean the exterior and the interior of the drum.
Note: During self-cleaning, do not add clothes or detergent.


Cleaning the Universal Coupling (Once every six months is recommended)

1. Remove the water supply hose from the universal coupling.
2. Screw off the fastener by following the arrow.
3. Rinse the interior of the fastener with water.
4. Install the clean fastener and the water supply hose.

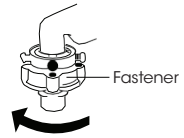

Cleaning the Inlet Valve (Once every six months is recommended)

1. Remove the water supply hose from the machine.
2. Take out the filter screen from the inlet valve.
3. Clean the filter screen thoroughly with a toothbrush or similar tools. Install it to the inlet valve.
4. Connect the water supply hose again.

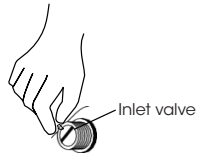


Cleaning the Filter of the Drainage Pump (Once a month is recommended)

1. After drainage, disconnect the power plug, press the clip above the decorative cover for the drainage pump at the right corner in the front of the body, and open the filter cover. (**Note:** If there is hot water in the machine, please take the above actions only after cooling).
2. Pull out the emergency drain hose, and remove the plug at one end. After the water drains away, insert the plug and push back the emergency drain hose.
3. Screw off the filter anti-clockwise.
4. Rinse the filter thoroughly with water.
5. Insert the filter, screw it clockwise and close the decorative cover for the drainage pump.

Note:


a. The filter must be tightly screwed to prevent water from leaking.
b. Do not clean the filter when a program is running.

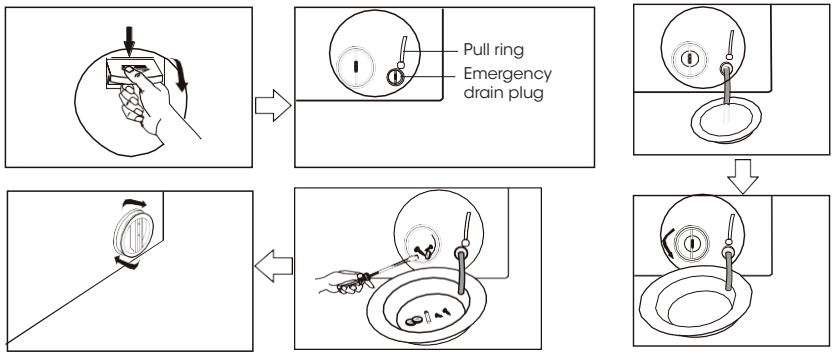

DETERGENT
We recommend you to use front-load compatible detergent with low suds/foam.

Parts Identification

1. Detergent Compartment
2. Inlet Valve
3. Control Panel
4. Power Plug With Cord
5. Body
6. Adjustable Feet
7. Washing/Spin Drum
8. Door Assembly

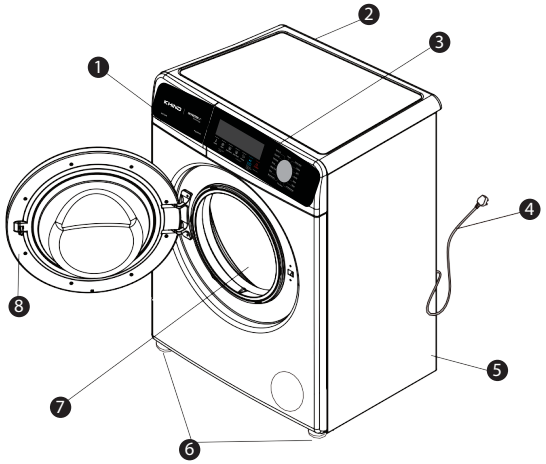

Accessories:

	Water Supply Hose
	Shipping Bolt Hole Covers (4)
	Rat Guard

Note:

1. When clothes for the first time, some water may flow from the machine.
2. This is what is left during the performance test at the factory. This phenomenon is normal.
3. After using, please pull out the power plug, turn off the faucet to prevent unexpected flood & fire.

* Pictures are for illustration purpose only.

Specifications

Model	WM1248
Voltage	220-240V ~ 50Hz
Washing Power	2000W
Wash/Spin Capacity	9kg
Water Tap Pressure	0.05-0.85MPa
Spin Speed	1200rpm
Net Weight	63kg
Gross Weight	67kg
Inner Drum Dimension (DxH)	φ505 x 375mm
Product Dimension (LxWxH)	598 x 608 x 845mm
Box Dimension (LxWxH)	660 x 705 x 880mm

* Specifications are subject to change without prior notice.

Installation

1. The environmental temperature of places to install or place the machine shall not be below 0 °C. Do not install or place the machine outdoors.
2. Follow management practices and regulations to correctly place the machine.
3. When the machine is installed on a floor with a carpet, do not block the ventilation orifice of the base.
4. There are many insects in the countryside. Please keep the surroundings of the machine clean. The warranty does not cover any damage caused by cockroaches or other insects.

Shipping Bolts

The shipping bolts are used to prevent internal damage of the machine during transport. Disassembling the shipping bolts and the bottom panel.

1. Open the package, remove the packaging base and move the machine to the installation place.
2. Disassemble the 4 shipping bolts, rubber pads and plastic rods (figure 1). If the shipping bolts are not dissembled, they may cause intense vibrations, noise and faults. The shipping bolts shall be installed every time before the machine is transported.
3. Use the supplied plastic plugs to cover the four holes. (figure 2).
4. Fix the bottom panel below the machine. (figure 3).


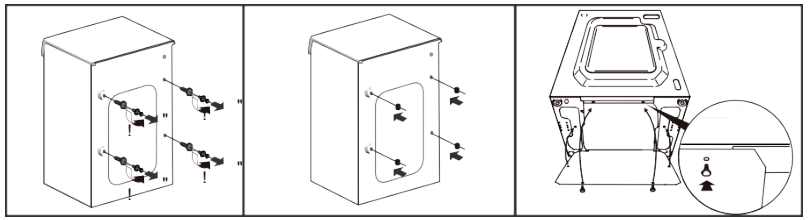


Figure 1 Figure 2 Figure 3

Requirements for Installation Location

Horizontal adjustment:
The tilt angle shall not exceed 1 degree.

Power outlet:
Do not connect to a power point already occupied by a number of power plugs.

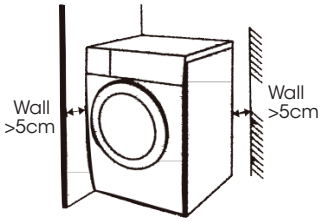

Installation Location

- Allow sufficient safety distance between the machine and the wall. (Distance between the back/left/right of the machine and a wall >5cm).
- Install the washing machine at a hard and flat floor with a drain. Do not install it on soft carpeted or wooden floors.
- Do not put clothes to be washed or other objects at the worktop of the machine because they will affect the running of programs.




Connecting the Power Supply.

1. Do not use a power strip or power strip bar.
2. If the power cord is damaged, please contact professional persons to repair it to avoid injuries.
3. After using, please unplug the power plug and turn off the faucet.
4. Connect the power cord of the machine to a grounded power outlet and follow the wiring rules.
5. The machine shall be installed at a place where it can connect to the power outlet easily.
   - The machine shall be repaired by professional persons. Non-professional persons may damage the machine seriously or cause serious faults during repair, please contact the local repair center.
   - Do not place the machine at a place whose surrounding temperature may be below 0 °C because water pipes will be frozen and broken and the program controller will be damaged at the temperature below 0 °C.
   - If the machine is handled in winter at the temperature below 0 °C, please place it at room temperature several hours before using.
   - The machine must have a grounding device. The grounding device can reduce the danger of electric shocks in case of a failure. This device has a grounding line (a conductor with a grounding plug). The grounding plug must be inserted into an appropriate power outlet.
   - Please contact professional persons to test whether or not the machine is grounded correctly. If the power outlet and the power plug do not match, please do not change the power plug.
   - If the machine smokes or emits a peculiar smell, please cut off the power supply and contact professional persons.
   - To ensure quality, the machine is filled with water for testing at the factory, water may remain in the interior of the drum, the door seal and the door glass, and this is a normal condition.

Connecting the Water Supply Hose

1. The water supply pressure shall be from 50kPa to 850kPa.
2. During connection of the water supply hose and the inlet valve, do not screw them tightly to avoid slipping.
   - There are 2 seal rings in connectors at both ends of the water supply hose to prevent water from leaking.
   - Turn on the faucet to check the connectors for any water leakage.
   - Check the water supply hose regularly and replace it if necessary.
   - Make sure that the water supply hose is not warped or damaged.


Using a standard faucet
Standard faucet
Extended faucet
Square faucet

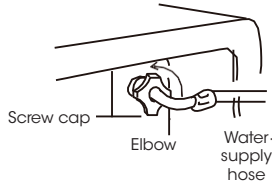



Note: The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Installation & Connection of the Inlet Hose

1. Unscrewing the part "a" from the water faucet. (Figure 1).
2. Attach the water inlet hose to the water faucet. (Figure 2).
   Note: Do not overtighten. Damage to the valve can result.
3. Run water through faucet and inlet hose into a bucket or laundry tub, to get rid of particles in the water line that might clog the inlet valve screen.

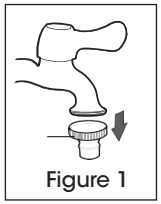

Figure 1

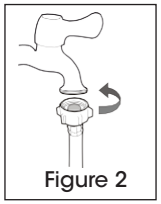
Figure 2

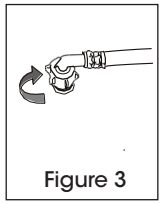
Figure 3

4. Attach the hose connected with the water faucet to the water inlet valve. (Figure 3) make sure a washer is at the inlet hose seat, or leakage will occur.
   Note: Do not overtighten. Damage to the valve can result.
5. Check for leak.
   1. Swing the water inlet hose gently to confirm if it's suitable.
   2. Turn on the water faucet and check for leak. A small amount of water might enter the machine. You will drain this later.


Note:
If a special faucet shown in the figure below is used, please take the following steps to assemble the parts:

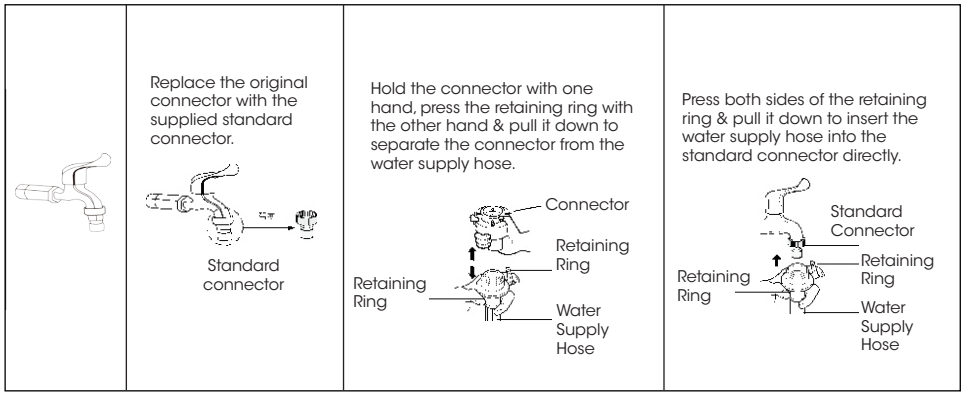

1. The machine is designed for home use only. Do not use it on ships, travel trucks or airplanes.
2. If the machine will be not used for a long time (such as vacations), please turn off the faucet.
3. When the machine is not in use, please unplug the power plug, cancel the lock function to prevent children being trapped inside the machine through misuse.
4. Packaging materials (such as films and foams) can be dangerous to children, and may cause suffocation!.
   Notes: Keep all packaging material out of the reach of children.


Installing the Drain Hose

1. To ensure normal operations of the machine, the inner diameter or width of the end of the drain hose to be inserted into the sewer shall be no less than 4cm.
2. The height of the outlet of the drain hose shall be within a certain range. For specific data, please refer to the figure below.

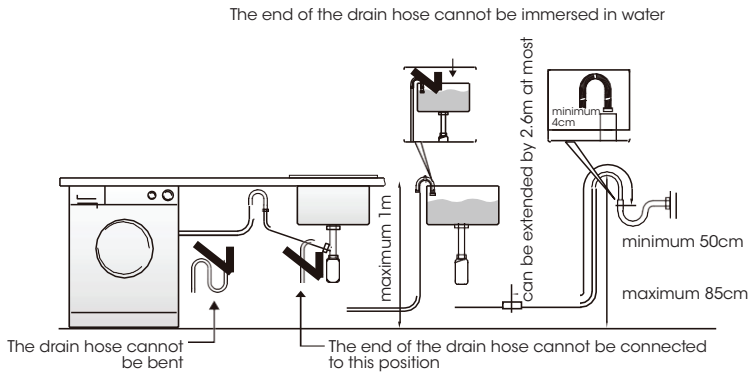

Horizontal Adjustment

1. Adjust the level of the machine to avoid additional noise and vibrations. Install the machine on a hard and horizontal floor (The corner of a room is preferred).
2. If the floor is not flat, please adjust the adjustable feet. (Do not insert objects such as wood chips under the adjustable feet). Make sure that the four adjustable feet are in contact with the floor firmly and check that the machine is horizontal. (Using a spirit level is recommended).
3. Adjust the adjustable feet so that the machine is flat and stable on the floor. After position adjustment, screw the locknuts tightly to keep the washing machine stable. Do not place the machine on a table on the floor to prevent it from falling accidentally.
4. When pressing any position on the diagonals of the worktop of the washing machine, the washing machine cannot shake. (Check on both diagonals. If the washing machine still shakes, please adjust the adjustable feet again).

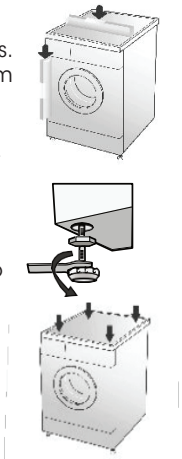

Control Panel



1. Program Knob
   Select an appropriate program by types if clothes and degree of stains.
2. Power "ON / OFF" button.
   - Press this button to power on and off.
3. "START / PAUSE" button.
   - Press this button to start working.
   - During operations, press this button to stop a program temporarily, and press it again to restore this program.
   - Press and hold this key for 2 seconds to open the door temporarily for adding clothes during operation.
   Note: During operations, when the temperature is very high or the water level is above the drum opening, the function to add clothes is not available.
4. "Preset/Delay" button
   - Preset/Delay time shall be customized after a program is selected and before the "START/PAUSE" button is pressed.
5. "Add Wash" button
   - Extend or shorten washing time as needed.
6. "Add Rinse" button
   - Increase or decrease rinse times as needed.
7. "Child Lock" key.
   - To avoid misuse by children, this button is used to set the lock function.
   - After the lock function is set, all buttons are not available except the "Power" button.
   - After a program runs, press and hold the "PROGRAM" and "DELAY" button for more than 3 seconds to enable or disable the lock function.
8. "RPM" key.
   - Select the spin speed by weight and kinds of clothes.
   - The range of spin speed varies with programs.
   - The spin speed is not required for the self-cleaning program.
9. "TEMP" button.
   - Select the water temperature by the kinds of clothes and degree of staining.
   - The range of water temperature varies with programs.
   - The water temperature is not required for some programs.

Description of Functional Programs

Washing Usage of Clothes

1. Prepare for washing.
   - Open the door, add clothes to the drum, and close the door.
   - Withdraw the detergent compartment, add detergent and fabric softener, and close the detergent compartment.
   - Connect the water supply hose, and make sure that the faucet is turned on.
2. Press the "ON/OFF" button to power on.
3. Select desire program.
4. Press the "START/PAUSE" button to start washing.
5. After washing is ended:
   - The display shows "End"and the washing machine gives a buzzing sound.
   - Open the door to take out the clothes.
   - Unplug the power plug and turn off the faucet.

Usage of Customized Programs

When it is necessary to set water temperature, preset/delay time, washing time, rinse times and RPM/spinning speed, please customize the programs.

1. Prepare for washing.
   - Open the door, add clothes to the drum, and close the door.
   - Withdraw the detergent compartment, add detergent and fabric softener, and close the detergent compartment.
   - Connect the water supply hose, and make sure that the faucet is turned on.
2. Press the "ON/OFF" button to power on.
3. Select a program as needed.
4. Press "TEMP" / "RPM" / "Add wash" / "Add Rinse / "PRESET" button to set water temperature, spin speed, washing time, rinse times and delay time.
5. Press the "START/PAUSE" button to start washing.
6. After operation is ended, the buzzer sounds.
   - The display shows "End" and the machine gives a buzzing sound.
   - Open the door to take out the clothes.
   - Unplug the power plug and turn off the faucet.

Description of Washing Programs

Program	Water Temperature (˚C)	Rinse (Times)	Maximum Load Washing	Type of Clothes
Mixed	30/40/ Cold Water	2	Rated	Cotton/Synthetic fabrics
Cotton 60°C	/	2	Rated	Dirty Cotton/Synthetic fabrics
Cotton	30/40/60/85/ Cold Water	2	Rated	Cotton fabrics
20°C	/	2	≤ 3 kg	Lightly soiled cotton laundry
Gentle	30/40/Cold Water	2	≤ 4 kg	Cotton/ Synthetic fabrics

Program	Water Temperature (˚C)	Rinse (Times)	Maximum Load Washing	Type of Clothes
Wool	30/40/Cold water	2	≤ 3 kg	Machine washable wool fabrics
Night	30/40/60/ Cold water	2	≤ 4 kg	Cotton + linen /Synthetic fabrics
Antibacterial	85	2	≤ 4 kg	Cotton fabrics needing and mite killing and sterilization
Tub Clean	85	2	/	Cleaning and sterilization of washing machine
Rinse&Spin	/	1	Rated	Cotton/ Synthetics
Spin	/	/	Rated	Cotton/Synthetic
Baby Care	30/40/60/85 Cold water	3	/	Cotton fabrics needing removal
Shirts	30/40/ Cold water	2	Rated	Cotton/Synthetic fabrics
Delicates	30/40/60/ Cold water	2	Rated	Cotton/Synthetic fabrics
Quick 30'	30/40/ Cold water	2	≤ 3 kg	Not very dirty cloothes/frequently used towels
Quick 15'	30/40/ Cold water	1	≤ 3 kg	Not very dirty cloothes/frequently used towels

Note:

1. The first parameter of water temperature and spin speed is the default parameter at startup. You can select other parameters manually.
2. The remaining time of some programs shown on the control panel may vary with the cloth weight sensed, and this condition does not represent a fault.
3. The washing time required may vary with water pressure, drainage conditions, kinds of clothes and water temperature.
4. Because the weights of clothes and the type of detergents added are not constant all the time, the rinse effect may be poor if the spin speed is too low. Please increase the time of rinse.
5. When the washing machine starts up after a power failure, it runs from the time mode before the power failure.
6. Cold water is not displayed on the screen.

Door Locking & Unlocking Methods

Door Locking

After startup, the door will be locked automatically and cannot be opened. Then, the "Lock" light / icon on the control panel illuminates.

Door Unlocking

When the "Lock" light/icon on the control panel illuminates, press the "Start/Stop" key. After the washing/spin drum stops rotating, wait for 2 minutes until the door is unlocked automatically. Foams may rise from the drum during washing. Please catch them with a towel. During washing, the door cannot be opened at high temperature. During washing, the door cannot be opened with high water level.

⚠ **Notes:** During normal operations, do not use the pull ring to open the door. If it is necessary to use it, please stop operations and open the door after the water gets cool. Hot water may scald users. At the same time, please pay attention to the outflow of residual water in the drum.

Usage of Detergent Compartment

Synthetic Detergent Powder


- For stubborn detergents such as powdered soaps, please dissolve them fully and before pouring into the detergent compartment.

Liquid Detergents - Bleach

- Please use synthetic low-foam liquid detergents.
- If concentrated liquid detergents are used, please dilute them with water (2:1) and pour them into the detergent compartment.

Clean the Detergent Compartment In Advance

- If the clothes are very dirty, please add appropriate detergents after selecting the pre-wash function. (The quantity of detergents varies with models)

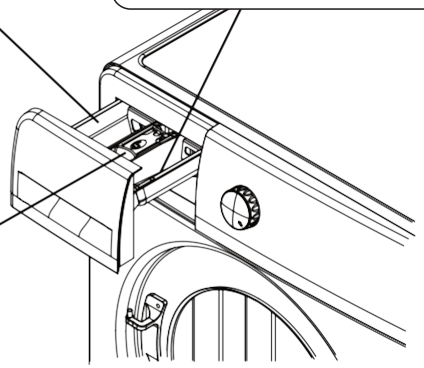

Fabric Softener

- Add softeners before washing. The washing machine will automatically inject softeners into the drum during the final rinse.
- If concentrated softeners are used, please dilute them with water appropriately and evenly and pour them into the detergent compartment.

- Use detergents made specially for drum washing machines.
- Do not use too much detergent, or too much foams may affect the rinse effect or cause functional faults.
- Please follow the instructions of the manufacturer to use detergents by the kinds and colors of clothes, water temperature, degree of staining, etc.
- Using appropriate detergents has good washing effect and is beneficial for environmental protection.

Safety Precautions Before Washing

1. Care label.
   Read the care labels of clothes. The kind, materials and washing method of a cloth are printed on a care label.
2. Wash by type of clothes.
   - To obtain the best washing effect, only wash one type of clothes in a washing period. Water temperature, spin speed and programs vary with clothes.
   - Dark clothes should be washed separately from light and white clothes.
   - Dyed clothes and cotton velvet clothes should be washed separately, or the white clothes may be stained.
   - If possible, do not wash very dirty clothes with moderately dirty clothes.

■ Degree of stains (severe, moderate, minor). ■ Color (white, light, dark). Cotton velvet (clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets).	■ Wash by kinds of clothes and degree of staining. ■ White clothes shall be washed separately from colored clothes. ■ Clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets.

 Check if the clothes are machine-washable.	 Clothes that are easily damaged by buttons or decorations should be turned inside out before washing.	 Remove dust and dirt from clothes before washing.
 Take out objects such as keys, hairpins, pins and coins from pockets.	 Put delicates items into a laundry bag before washing.	 Clothes with oil stains or those prone should be washed to fade separately.

Troubleshooting

Symptoms	Cause of Issue	Solution
The machine cannot start	▪ Is the "ON/OFF" button or "START/PAUSE" button pressed? ▪ Is the plug of the power cord pulled out? ▪ Is there a power failure? ▪ Is the leakage protector broken?	▪ Press the "Power" button or "START/PAUSE" button. ▪ Insert the plug of the power cord. ▪ Please wait. ▪ Turn on the leakage protector.
Abnormal spin	▪ Are the shipping bolts disassembled? ▪ Is the washing machine assembled firmly? ▪ Are there single small clothes in the drum? ▪ Are the locknuts for the adjustable feet screwed tightly?	▪ Disassemble the shipping bolts. ▪ Put the machine on a flat and even floor. ▪ Add several similar clothes. ▪ Screw locknuts tightly.
Water inlet fault "E01"	▪ Is the faucet turned off? ▪ Is there a water outage or is water pressure lower? ▪ Is the water supply hose frozen? ▪ Is the water supply hose or the inlet valve blocked?	▪ Turn on the faucet. ▪ Please wait. ▪ Unfreeze the water supply hose with hot water. ▪ Take the filter screens out from the water supply hose and the inlet valve and thoroughly clean them.
Drainage fault "E03"	▪ Is the height of the drain hose too high? ▪ Is the drain hose frozen? ▪ Is the drain hose blocked by foreign matters? ▪ Is the floor drain blocked by foreign matters?	▪ Please put the drain hose well and make sure that the height is below 1M. ▪ Unfreeze the drain hose with hot water. ▪ Take the foreign matters out and empty the drain hose. ▪ Remove foreign matters from the floor drain.
Door fault "E02"	▪ Make sure whether or not the washing machine starts when the door is not closed tightly?	▪ Close the door tightly.
No heating fault "E06"	▪ Turn off the faucet and disconnect the power plug. Then, contact professional service persons.	
Continuous water inflow fault "E04"	▪ Turn off the faucet and disconnect the power plug. Then, contact professional service persons.	
Too many foam	▪ Are low-foam detergents special for drum machines used?	▪ Close the door tightly.
For any other faults, please contact professional service persons.		

Note: The following conditions do not represent faults.

Situation	Explanation
The door cannot be opened	▪ A program is running.
Peculiar smell	▪ Because rubber parts are used in the machine, there can be a rubber smell at the beginning.
Low water quantity during washing and rinsing	▪ Drum machines wash clothes with a liter of water.
Water inflow during running of programs	▪ If the water level decreases, the washing machine automatically replenishes water.
Drainage during washing	▪ Are too many or high-foam detergents added?
Variation of remaining time	▪ During spinning, if the clothes are off center, the spin time will increase appropriately to correct this phenomenon. ▪ If the water pressure is too low, the inflow time will increase appropriately.
Abnormal sound during spinning	▪ Is the power cord contact with the body? ▪ Are the shipping bolts disassembled? ▪ Are there foreign matters such as hairpins and coins in the drum?

Maklumat Keselamatan & Amaran

1. Perkakas ini bukan untuk digunakan oleh orang kurang upaya (termasuk kanak-kanak) fizikal, deria atau kemampuan mental, atau kurang pengalaman dan pengetahuan, melainkan mereka dikawalselia atau mendapat tunjuk ajar yang sewajarnya berkaitan penggunaan perkakas ini oleh orang yang bertanggungjawab terhadap keselamatan mereka.
   Kanak-kanak perlu dikawalselia bagi memastikan mereka tidak bermain dengan perkakas ini.
2. Jika talikod telah rosak, ia mesti diganti oleh pengilang, wakil servis atau orang yang berkelayakan untuk mengelakkan sebarang bahaya.
3. Jangan menghalang bukaan pengudaraan di pangkalan perkakas dengan permaidani, surat khabar, alas meja, langsir, dan lain-lain.
4. Perkakas ini bertujuan untuk **KEGUNAAN DI DALAM RUMAH SAHAJA** dan bukan bertujuan untuk komersial, penggunaan perindustrian atau luaran.
5. Perkakas ini tidak boleh digunakan jika bahan kimia industri telah digunakan untuk pembersihan.
6. Penapis perangkap perlu dibersihkan dengan kerap. Bulu-bulu kain tidak dibernarkan berkumpul di sekitar mesin.
7. Pengudaraan yang mencukupi perlu disediakan untuk mengelakkan aliran balik gas ke dalam bilik daripada perkakas yang membakar bahan api lain, termasuk api terbuka.
8. Barangan/pakaian yang telah dicemari atau tercemar dengan bahan seperti minyak sayuran, minyak masak, produk penjagaan rambut, aseton, alkohol, petrol, minyak tanah, penghapus spot, turpentin, lilin dan penghapus lilin hendaklah dibasuh dalam air panas dengan jumlah tambahan bahan pencuci sebelum dibasuhkan di dalam mesin.
9. Jangan gunakan pembersih kimia untuk membersihkan kabinet badan.
10. Pelembut pakaian atau produk yang serupa, hendaklah digunakan seperti yang ditentukan oleh arahan pelembut pakaian.
11. Barangan seperti getah buih (busa latex), topi mandi, tekstil kalis air, barang-barang yang disokong getah dan pakaian atau bantal yang dilengkapi dengan pad getah buih tidak boleh dibasuhkan didalam mesin.
12. Keluarkan semua objek dari poket seperti pemetik api dan mancis.
13. **AMARAN:** Perkakas tidak boleh dibekalkan melalui peranti pensuisan luaran seperti pemasa, atau disambungkan ke litar yang sentiasa dihidupkan dan dimatikan oleh utiliti.
14. Udara ekzos tidak boleh dilepaskan ke dalam serombong asap yang digunakan untuk mengeluarkan asap dari peralatan membakar gas atau bahan api lain.
15. Perkakas tidak boleh dipasang di belakang pintu yang boleh dikunci, pintu gelangsar atau pintu dengan engsel di bahagian bertentangan dengan mesin; sedemikian rupa sehingga pembukaan penuh pintu mesin adalah terhad.
16. Jangan bongkar unit. Pemasangan dan penyelenggaraan hanya boleh dilakukan oleh juruteknik yang berkelayakan. Rujuk "Pemasangan" di muka surat 22-25 untuk garis panduan.
17. Jangan letak bebanan secara berlebihan.
18. Sila rujuk muka surat 5, untuk maklumat mengenai muatan maksimum.
19. Jangan buka petak pencuci atau pintu, semasa perkakas sedang beroperasi.

Untuk mengelakkan kecederaan pengguna atau orang lain atau kerosakan pada harta benda, sila patuhi langkah berjaga-jaga keselamatan berikut.

⚠ AMARAN	
Bahaya Kejutan Elektrik. 1. Sila gunakan salur kuasa khas dengan pembumian yang baik. 2. Sila pegang palam kuasa untuk memasukkan dan tarik keluar talikod kuasa. Jangan gunakan talikod kuasa yang rosak. Jika terdapat kotoran pada talikod kuasa, sila lap dengan kain kering dengan segera. 3. Jangan pasang atau cabut palam kuasa dengan tangan basah. 4. Selepas menggunakan dan semasa penyelenggaraan dan mencuci, sila cabut palam kuasa.	**Bahaya Kebakaran / Kebocoran Elektrik Yang Berpotensi.** 1. Jangan letakkan mesin berhampiran api atau letakkan rokok, lilin dan bahan yang tidak menentu pada mesin. 2. Jangan sembur air pada panel kawalan mesin. 3. Jangan letakkan mesin ditempat yang lembap. 4. Sebelum menggunakan, sila betulkan hos longkang dan pastikan saluran keluar pembetung tidak tersumbat.
Bahaya Pembakaran Pada Suhu Tinggi Yang Berpontesi. 1. Suhu pintu kaca akan panas semasa mencuci pada air suhu yang tinggi. Tolong jangan sentuh, terutamanya oleh kanak-kanak. 2. Apabila perlu membuka pintu semasa mencuci pada suhu tinggi, sila buka pintu selepas suhu telah turun ke tahap keselamatan dan pintu dibuka secara automatik.	**Potensi Bahaya Kecederaan.** 1. Sila buang bahan pembungkusan selepas pembongkaran. Jauhkan mereka daripada capaian kanak-kanak. 2. Kanak-kanak tidak dibenarkan beroperasi atau bermain dengan mesin. 3. Jika mesin tidak digunakan, sila tutup pintu dengan ketat untuk mengelakkan kanak-kanak daripada memasuki drum basuh / putaran.
Bahaya Kerosakan Pada Mesin Yang Berpontesi. 1. Jangan panjat atau meletakkan objek berat pada mesin. 2. Hanya gerakkan atau kendalikan mesin dengan dua orang. 3. Orang bukan profesional tidak dibenar kan membaiki atau mengubah suai mesin basuh secara automatik.	**Bahaya Kerosakan Pada Pakaian Yang Berpontesi.** 1. Jangan basuh pakaian kalis air, seperti baju hujan, beg tidur dan lain-lain. 2. Hanya basuh pakaian yang boleh dibasuh oleh mesin. Untuk sebarang pertanyaan, sila patuhi garis panduan basuh yang dicetak pada label penjagaan pakaian.
Potensi Bahaya Letupan. 1. Jangan basuh atau putar pakaian dengan bahan mudah terbakar seperti minyak tanah, petrol dan agent pencairan. 2. Jangan mengendalikan mesin apabila terdapat kebocoran gas.	Apabila palam kuasa dicabut, pintu boleh dibuka walaupun paras air dalam dram tinggi. Oleh itu, dalam apa jua keadaan, sila semak paras air di dalam dram sebelum membuka pintu. Jika paras air lebih tinggi, jangan buka pintu mesin untuk mengelakkan kerosakan yang tidak perlu disebabkan oleh aliran air keluar.

Pelupusan
Sekiranya anda ingin membuang perkakas, sila cabut palam keluar dari soket, potong kabel sambungan (berhampiran dengan perkakas yang anda boleh) dan keluarkan pintu untuk mengelakkan kanak-kanak yang bermain mengalami renjatan elektrik atau untuk menutup diri sendiri ke dalamnya.

Simbol ini pada produk atau pada pembungkusannya menunjukkan bahawa produk ini tidak boleh dianggap sebagai sisa isi rumah. Sebaliknya, ia harus dibawa ke tempat pengumpulan yang sesuai untuk kitar semula peralatan elektrik dan elektronik. Dengan memastikan produk ini dilupuskan dengan betul, anda akan membantu mencegah kemungkinan akibat negatif terhadap alam sekitar dan kesihatan manusia, yang sebaliknya boleh disebabkan oleh pengendalian sisa produk yang tidak sesuai. Untuk maklumat lebih terperinci mengenai kitar semula produk ini, sila hubungi majlis tempatan anda, perkhidmatan pelupusan sisa isi rumah anda atau kedai tempat anda membeli produk tersebut.


Pembersihan & Penyelenggaraan

1. Selepas menggunakan untuk masa yang lama, sila servis mesin dengan segera. Amalan servis yang baik boleh memanjangkan hayat perkhidmatan mesin basuh.
2. Sebelum servis, sila cabut palam kuasa untuk mengelakkan bahaya berlaku.

Badan
Sila lap badan dengan kain lembut dan bersih setiap kali selepas mesin digunakan. Bila terdapat kesan yang susah dilap, sila lap badan dengan kain yang dicelup dalam detergen atau air sabun yang sesuai.
a) Jangan sembur air pada badan secara langsung.
b) Jangan lap badan dengan bahan kimia seperti serbuk dempul, agen pencairan, petrol dan alkohol.


Kedap Pintu
Sila lap kotoran dan bendasing seperti serpihan benang dengan tuala setiap kali selepas menggunakan. Jika terdapat benda seperti pin di alur kedap pintu, sila keluarkan.

Membersihkan Petak Bahan Pencuci
Untuk mengelakkan bahan pencuci menjadi berkulat pada dinding petak bahan pencuci, sila bersihkan petak bahan pencuci dengan kerap.
Tekan kedudukan yang ditentukan dan tarik keluar petak bahan pencuci, basuh dengan air dan letakkannya kembali.




Dram Mencuci-Sendiri (Dicadang berulang sebulan sekali).
Selepas digunakan untuk jangka masa yang lama, mungkin terdapat kesan pada dram membasuh. Program mencuci-sendiri boleh digunakan untuk membersihkan bahagian luar dan dalam dram.
Nota: Semasa mencuci-sendiri, jangan tambah pakaian atau bahan pencuci.

Membersihkan Sambungan Universal (Dicadang berulang setiap enam bulan sekali).

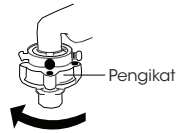

1. Tanggalkan hos bekalan air dari gandingan universal.
2. Skru dari pengikat dengan mengikuti anak panah.
3. Bilas bahagian dalam pengikat dengan air.
4. Pasangkan semula dengan pengikat bersih dan hos bekalan air.

Membersihkan Injap Masuk (Dicadang berulang setiap enam bulan sekali).

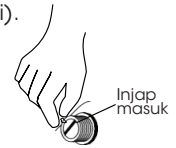


1. Tanggalkan hos bekalan air dari mesin.
2. Keluarkan skrin penapis dari injap masuk.
3. Bersihkan skrin penapis dengan teliti menggunakan berus gigi atau alatan yang serupa. Pasangkannya semula ke injap masuk.
4. Sambungkan semula hos bekalan air.

Membersihkan Penapis Pam Saliran (Dicadang berulang sebulan sekali).

1. Selepas penyaliran, cabutkan palam kuasa, tekan klip di atas penutup hiasan untuk pam saliran disudut kanan di bahagian depan badan, dan buka penutup penapis. (**Nota:** Jika terdapat air panas dalam mesin, sila ambil tindakan di atas hanya selepas penyejukan.)
2. Tarik keluar hos saliran kecemasan, dan tanggalkan palam pada satu hujung. Selepas air mengalir, masukkan palam dan tolak kembali hos saliran kecemasan.
3. Tanggalkan penapis secara arah lawan jam.
4. Bilas penapis dengan air.
5. Masukkan penapis, skru mengikut arah jam dan tutup penutup hiasan untuk pam saliran.

Nota:
a. Penapis mesti diskru ketat untuk mengelakkan air daripada bocor.
b. Jangan bersihkan penapis semasa program sedang berjalan.

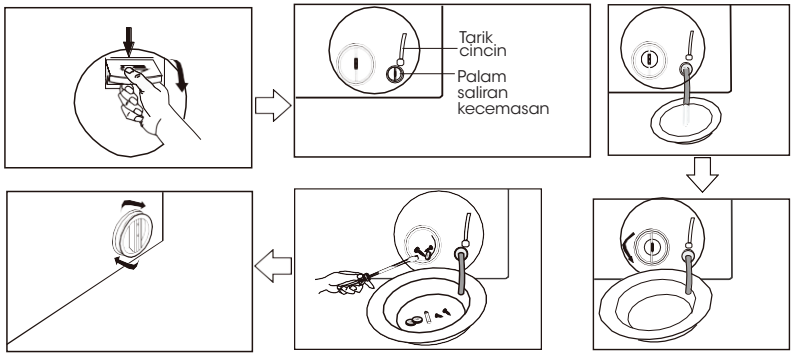




SABUN PENCUCI
Kami mengesyorkan anda menggunakan sabun pencuci kurang buih yang sesuai untuk mesin beban-hadapan.

Pengenalan Komponen

1. Petak Pencuci
2. Injap Masuk
3. Panel Kawalan
4. Talikod Kuasa
5. Badan
6. Kaki Pengimbang
7. Dram Membasuh/Memutar
8. Pemasangan Pintu

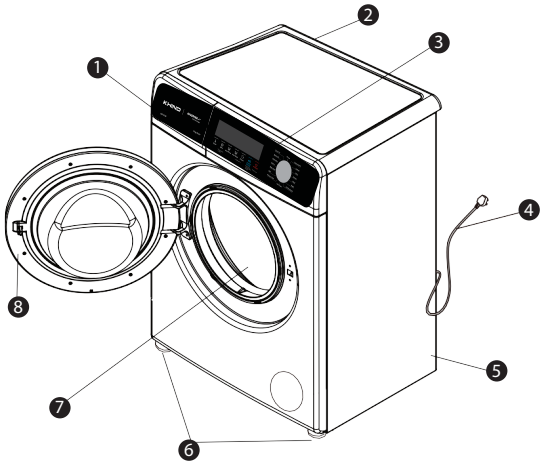

Aksesori:

	Hos Bekalan Air
	Penutup Lubang Bolt Penghantaran (4)
	Penutup Tikus

Nota:
1. Semasa membasuh pakaian buat kali pertama, sedikit air mungkin mengalir dari mesin.
2. Inilah yang tertinggal semasa ujian prestasi di kilang. Fenomena ini adalah perkara biasa.
3. Selepas menggunakan, sila cabut palam kuasa, matikan paip untuk mengelakkan banjir & kebakaran yang tidak dijangka.

* Gambar adalah untuk tujuan ilustrasi sahaja.

Spesifikasi

Model	WM1248
Voltan	220-240V ~ 50Hz
Kuasa Basuhan	2000W
Kapasiti Basuh/Cucian	9kg
Tekanan Paip Air	0.05-0.85MPa
Kelajuan Putaran	1200rpm
Berat Bersih	63kg
Berat Kasar	67kg
Dimensi Dalaman Dram (KxT)	φ505 x 375mm
Dimensi Produk (PxLxT)	598 x 608 x 845mm
Dimensi Kotak (PxLxT)	660 x 705 x 880mm


*Spesifikasi adalah tertakluk kepada perubahan tanpa notis terlebih dahulu.

Pemasangan

1. Suhu persekitaran tempat untuk memasang atau meletakkan mesin tidak boleh berada di bawah 0 °C. Jangan pasang atau letakkan mesin di luar rumah.
2. Ikuti amalan dan peraturan pengurusan untuk meletakkan mesin dengan betul.
3. Apabila mesin dipasang di atas lantai dengan permaidani, jangan menghalang pengudaraan atau lubang asas.
4. Terdapat banyak serangga di kawasan luar bandar. Sila pastikan persekitaran mesin bersih. Jaminan ini tidak melindungi sebarang kerosakan yang disebabkan oleh lipas atau serangga lain.

Bolt Penghantaran
Bolt penghantaran digunakan untuk mengelakkan kerosakan dalaman mesin semasa pengangkutan.


Membongkar Bolt Penghantaran & Panel Bawah
1. Buka bungkusan, keluarkan asas pembungkusan dan gerakkan mesin ke tempat pemasangan.
2. Tanggalkan 4 bolt penghantaran, pad getah dan batang plastik (rajah 1). Jika bolt penghantaran tidak disebarkan, ia boleh menyebabkan getaran sengit, bunyi dan kerosakan. Bolt penghantaran hendaklah dipasang setiap kali sebelum mesin diangkut.
3. Gunakan palam plastik yang dibekalkan untuk menutup empat lubang. (rajah 2).
4. Betulkan panel bawah di bawah mesin. (rajah 3).

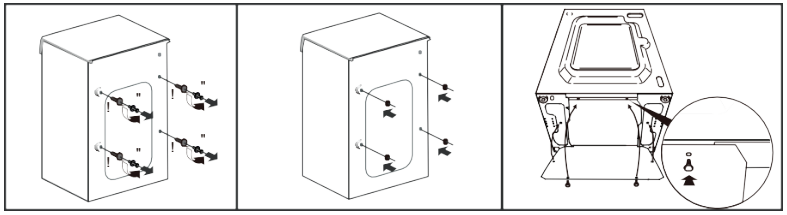

Rajah 1 Rajah 2 Rajah 3

Keperluan Untuk Tempat Pemasangan
Pelarasan mendatar:
Sudut kecondongan tidak boleh melebihi 1 darjah.

Saluran kuasa:
Jangan sambung ke titik kuasa yang sudah diduduki oleh beberapa palam kuasa.

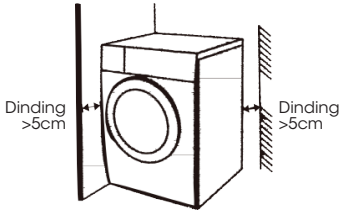

Tempat Pemasangan

- Benarkan jarak keselamatan yang mencukupi antara mesin dan dinding. (Jarak antara belakang / kiri / kanan mesin basuh dan dinding >5cm).
- Pasang mesin di lantai yang keras dan rata dengan longkang. Jangan pasang di lantai berkarpet atau lantai kayu.
- Jangan letakkan pakaian kotor atau objek lain di permukaan mesin kerana ia akan menjejaskan perjalanan program.




Menyambungkan Bekalan Kuasa

1. Jangan gunakan soket palam sambungan.
2. Jika talikod kuasa rosak, sila hubungi pihak profesional untuk membaikinya untuk mengelakkan kecederaan.
3. Selepas menggunakan, sila cabut palam kuasa dan tutupkan kepala paip.
4. Sambungkan talikod kuasa mesin ke soket kuasa yang dibumikan dan ikut peraturan pendawaian.
5. Mesin hendaklah dipasang di tempat yang boleh disambungkan ke saluran kuasa dengan mudah.
   - Mesin hendaklah dibaiki oleh pihak profesional. Pihak bukan profesional boleh merosakkan mesin atau menyebabkan kerosakan teruk semasa pembaikan, sila hubungi pusat pembaikan tempatan.
   - Jangan letak mesin di tempat yang suhu sekelilingnya mungkin di bawah 0 °C kerana paip air akan dibekukan dan pecah dan pengawal program akan rosak pada suhu di bawah 0 °C.
   - Jika mesin dikendalikan pada musim sejuk pada suhu di bawah 0 °C, sila letakkan pada suhu bilik beberapa jam sebelum menggunakannya.
   - Mesin mesti mempunyai alat pembumian. Peranti pembumian boleh mengurangkan bahaya kejutan elektrik sekiranya berlaku kegagalan. Peranti ini mempunyai garis pembumian (Konduktor dengan palam pembumian). Palam pembumian mesti dimasukkan ke dalam soket kuasa yang sesuai.
   - Sila hubungi pihak profesional untuk menguji sama ada mesin dibumikan dengan betul atau tidak. Sekiranya soket kuasa dan palam kuasa tidak sepadan, sila jangan tukar palam kuasa.
   - Jika mesin berasap atau mengeluarkan bau yang pelik, sila potong bekalan kuasa dan hubungi orang profesional.
   - Untuk memastikan kualiti, ujian telah dilakukan di kilang, mesin diisi dengan air, air mungkin kekal di dalam bahagian dalam dram, kedap pintu dan kaca pintu, dan keadaan ini adalah normal.

Menyambungkan Hos Bekalan Air

1. Tekanan bekalan air adalah dari 50kPa hingga 850kPa.
2. Semasa penyambungan hos bekalan air dan injap masuk, jangan skru dengan ketat untuk mengelakkan tergelincir.
   - Terdapat 2 gelang pengedap dalam penyambung di kedua-dua hujung hos bekalan air untuk mengelakkan air daripada bocor;
   - Bukakan kepala paip untuk memeriksa penyambung untuk sebarang kebocoran air.
   - Periksa hos bekalan air dengan kerap dan gantikan jika perlu.
   - Pastikan hos bekalan air tidak melengkung atau rosak.


Menggunakan paip standard
Kepala paip standard 
Kepala paip yang dipanjangkan 
Kepala paip persegi 

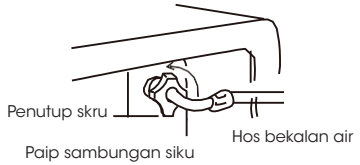



Nota: Gunakan hos bekalan air baru yang disediakan bersama mesin. Pemasangan hos lama tidak boleh diguna semula.

Pemasangan & Penyambungan Hos Masuk

1. Melepaskan skru bahagian "a" dari paip air. (Rajah 1).
2. Pasangkan hos masuk air ke paip air. (Rajah 2).
   Nota: Jangan terlalu ketat. Kerosakan pada injap boleh berlaku.
3. Alirkan air melalui hos keran masuk ke dalam baldi atau tab dobi, untuk menyingkirkan zarah dalam saluran air yang mungkin menyumbat skrin injap masuk.

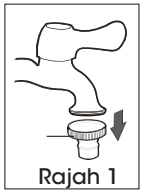

Rajah 1

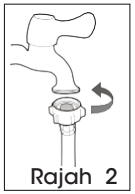
Rajah 2

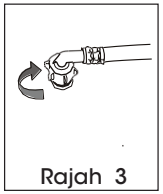

Rajah 3

4. Pasangkan hos yang disambungkan dengan paip air pada injap masuk air. (Rajah 3) pastikan mesin berada di tempat kedudukan hos masuk, atau kebocoran akan berlaku.
   Nota: Jangan terlalu ketat. Kerosakan pada injap boleh berlaku.
5. Periksa kebocoran.
   1. Ayunkan hos masuk air dengan perlahan-lahan untuk memastikan sama ada ia sesuai.
   2. Bukakan paip air dan periksa kebocoran. Sebilangan kecil air mungkin masuk ke dalam mesin. Anda boleh keringkan kemudian.


Nota: Jika paip khas yang ditunjukkan dalam rajah di bawah digunakan, sila ambil langkah berikut untuk memasang bahagian:




Gantikan penyambung asal dengan penyambung standard yang dibekalkan.



Pegang penyambung dengan satu tangan, tekan gelang penahan dengan tangan sebelah lagi dan tariknya ke bawah untuk memisahkan penyambung daripada hos bekalan air.

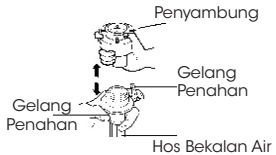


Tekan kedua-dua belah gelang penahan & tariknya ke bawah untuk memasukkan hos bekalan air ke dalam penyambung secara terus.

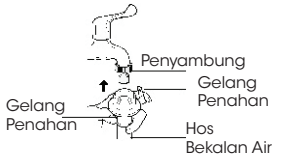

1. Mesin direka untuk kegunaan rumah sahaja. Jangan gunakannya di atas kapal, trak perjalanan atau kapal terbang.
2. Jika mesin tidak akan digunakan untuk masa yang lama (seperti bercuti), sila tutup paip.
3. Apabila mesin tidak digunakan, sila cabut plag kuasa, batalkan fungsi kunci untuk mengelakkan kanak-kanak terperangkap di dalam mesin basuh melalui penyalahgunaan.
4. Bahan pembungkusan (seperti filem dan pembungkus gelembung) boleh berbahaya kepada kanak-kanak, dan boleh menyebabkan lemas!.
   Nota: Simpan semua bahan pembungkusan jauh dari capaian kanak-kanak.

Memasang Hos Saliran


1. Untuk memastikan mesin beroperasi dengan normal, diameter dalaman atau lebar hujung hos yang akan dimasukkan ke dalam pembetung hendaklah tidak boleh kurang daripada 4cm.
2. Ketinggian saluran keluar hos saliran hendaklah dalam julat tertentu. Untuk data tertentu, sila rujuk rajah di bawah.

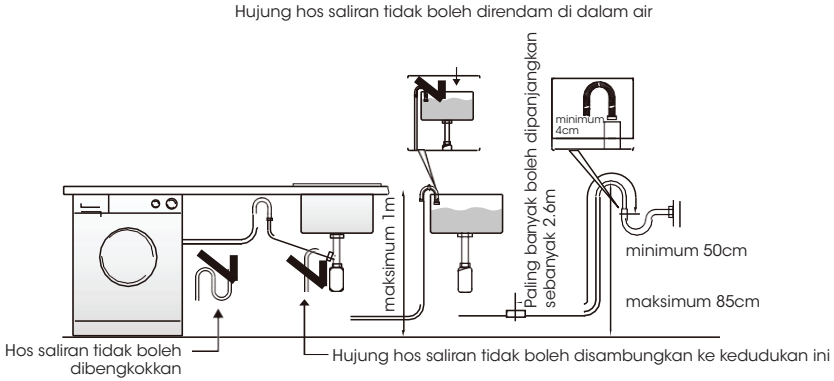


Pelarasan Mendatar

1. Laraskan paras mesin untuk mengelakkan bunyi dan getaran tambahan. Pasang mesin di atas lantai yang keras dan mendatar (Sudut bilik adalah diutamakan).
2. Jika lantai tidak rata, sila laraskan kaki pengimbang. (Jangan masukkan objek seperti kayu di bawah kaki pengimbang). Pastikan empat kaki pengimbang bersentuhan dengan lantai dan pastikan keadaan mesin mendatar. (Menggunakan timbang air adalah disyorkan).
3. Laraskan kaki pengimbang supaya mesin rata dan stabil pada lantai. Selepas melaraskan kedudukan, skru "locknuts" dengan ketat untuk memastikan mesin dalam keadaan yang stabil. Jangan letak mesin di atas meja untuk mengelakkannya daripada jatuh secara tidak sengaja.
4. Apabila menekan sebarang butang pada panel mesin, mesin tidak boleh bergegar. (Semak pada kedua-dua penjuru. Jika mesin masih bergegar, sila laraskan kaki pengimbang).





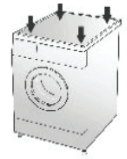

Panel Kawalan



1. Butang program
   - Pilih program yang sesuai mengikuti jenis pakaian dan tahap kotoran.
2. Butang kuasa "ON / OFF" button.
   - Tekan butang ini untuk menghidupkan dan mematikan kuasa.
3. Butang "START/PAUSE".
   - Tekan butang ini untuk mula berfungsi.
   - Semasa operasi, tekan butang ini untuk menghentikan program buat sementara waktu, dan tekan sekali lagi untuk memulihkan program ini.
   - Tekan dan tahan butang ini selama 2 saat untuk membuka pintu buat sementara waktu untuk menambah pakaian semasa operasi.
   Nota: Semasa operasi, apabila suhu sangat tinggi atau paras air melebihi pembukaan dram, fungsi untuk menambah pakaian tidak tersedia.
4. Butang "PRESET"
   - Digunakan untuk melambatkan mencuci. Tekan butang "TEMP" + butang "RPM" untuk melambatkan masa membasuh.
   - Masa pratetap hendaklah disesuaikan selepas program dipilih dan sebelum butang "START/PAUSE" ditekan.
5. Butang "Add Wash"
   - Melanjutkan atau memendekkan masa mencuci mengikut keperluan.
6. Butang "Add Rinse".
   - Tambah atau kurangkan masa bilas mengikut keperluan.
7. Butang "Child Lock"
   - Untuk mengelakkan penyalahgunaan oleh kanak-kanak, kunci ini digunakan untuk menetapkan fungsi kunci.
   - Selepas fungsi kunci ditetapkan, semua butang tidak tersedia kecuali butang "Kuasa".
   - Selepas program berjalan, tekan dan tahan butang "PROGRAM" + butang "DELAY" selama lebih dari 3 saat untuk membolehkan/membatalkan fungsi kunci.

8. Butang "RPM"
   - RPM / Putaran kelajuan boleh ditetapkan selepas program dipilih sebelum butang "START/PAUSE" ditekan.
9. Butang "TEMP"
   - Pilih suhu air mengikuti jenis pakaian dan tahap pewarna.
   - Pelbagai suhu air berbeza mengikut program.

Penerangan Fungsi Program

Penggunaan mencuci pakaian

1. Bersedia untuk mencuci.
   - Buka pintu, tambah pakaian ke dram, dan tutup pintu.
   - Tarik balik petak pencuci, tambah pencuci dan pelembut fabrik, dan tutup petak pencuci.
   - Sambungkan hos bekalan air, dan pastikan paip dibukakan.
2. Tekan butang "ON/OFF" untuk menjalankan.
3. Pilih program yang diingini.
4. Tekan butang "START/PAUSE untuk mula mencuci.
5. Selepas mencuci tamat:
   - Paparan menunjukkan "END" dan mesin basuh mengeluarkan bunyi berdengung.
   - Buka pintu untuk mengeluarkan pakaian.
   - Cabut palam kuasa dan tutupkan paip.

Penggunaan Kesesuaian Program

Apabila perlu untuk menetapkan suhu air, masa pratetap/tunda, masa mencuci, masa bilas dan RPM kelajuan putaran, sila menyesuaikan program.

1. Bersedia untuk mencuci.
   - Buka pintu, tambah pakaian ke dram, dan tutup pintu.
   - Tarik balik petak pencuci, tambah pencuci dan pelembut fabrik, dan tutup petak pencuci.
   - Sambungkan hos bekalan air, dan pastikan paip dibuka.
2. Tekan butang "ON/OFF" untuk menjalankan.
3. Pilih program seperti yang diperlukan:
4. Tekan butang "Temp"/ "RPM" / "Add Wash"/ "Add Rinse/Preset" untuk menetapkan suhu air, kelajuan putaran, masa basuh, masa bilas dan masa tunda.
5. Tekan butang "START/PAUSE" untuk mula mencuci.
6. Selepas mencuci tamat:
   - Paparan menunjukkan "END" dan mesin basuh mengeluarkan bunyi berdengung.
   - Buka pintu untuk mengeluarkan pakaian.
   - Cabut palam kuasa dan tutupkan paip.

Penerangan Program Basuh

Program	Suhu Air (˚C)	Bilas (Masa)	Bebanan Maksima Basuhan	Jenis Pakaian
Mixed	30/40/ Air Sejuk	2	Kadar	Kain kapas/sintetik
Cotton 60°C	/	2	Kadar	Kain Kapas/sintetik yang kotor
Cotton	30/40/60/ 85/ Air Sejuk	2	Kadar	Kain kapas biasa
20°C	/	2	≤ 3 kg	Kain kapas yang kotor ringan
Gentle	30/40/ Air Sejuk	2	≤ 4 kg	Kain kapas/sintetik

Program	Suhu Air (˚C)	Bilas (Masa)	Bebanan Maksima Basuhan	Jenis Pakaian
Wool	30/40/ Air Sejuk	2	≤ 3 kg	Fabrik bulu yang boleh dibasuh mesin
Night	30/40/60/ Air Sejuk	2	≤ 4 kg	Kapas + linen /fabrik sintetik
Antibacterial	85	2	≤ 4 kg	Kain kapas yang memerlukan & pembunuhan & pensterilan hama
Tub Clean	85	2	/	Pembersihan & pensterilan mesin basuh
Rinse&Spin	/	1	Kadar	Kapas/sintetik
Spin	/	/	Kadar	Kain kapas/sintetik
Baby Care	30/40/60/ 85/ Air Sejuk	3	/	Kain kapas yang memerlukan penyingkiran
Shirts	30/40/ Air Sejuk	2	Kadar	Kain kapas/sintetik
Delicates	30/40/60/ Air Sejuk	2	Kadar	Kain kapas/sintetik
Quick 30'	30/40/ Air Sejuk	2	≤ 3 kg	Pakaian tidak begitu kotor / tuala yang sering digunakan
Super 15'	30/40/ Air Sejuk	1	≤ 3 kg	Pakaian tidak begitu kotor / tuala yang sering digunakan

Nota:

1. Parameter pertama suhu air dan kelajuan putaran adalah parameter lalai semasa permulaan. Anda boleh memilih parameter lain secara manual.
2. Baki masa beberapa program yang ditunjukkan pada panel kawalan mungkin berbeza-beza dengan berat kain yang dirasakan, dan keadaan ini tidak mewakili kesalahan.
3. Masa mencuci yang diperlukan mungkin berbeza-beza dengan tekanan air, keadaan saliran, jenis pakaian dan suhu air.
4. Kerana berat pakaian dan jenis pencuci yang ditambah tidak berterusan sepanjang masa, kesan bilas mungkin lemah jika kelajuan putaran terlalu rendah. Sila tambahkan masa bilas.
5. Apabila mesin bermula selepas kegagalan kuasa, ia berjalan dari mod masa sebelum kegagalan kuasa.
6. Air sejuk tidak dipaparkan pada skrin.

Kaedah Mengunci & Membuka Kunci Pintu

Mengunci Pintu
Selepas memulakan, pintu akan dikunci secara automatik dan tidak boleh dibuka. Kemudian, lampu/icon "Kunci" pada panel kawalan akan menyala.

Membuka Pintu Kunci
Apabila pintu dikunci, tekan butang "START/PAUSE". Setelah dram basuhan/ putaran berhenti, tunggu selama 2 minit sehingga pintu terbuka secara automatik.
- Buih mungkin timbul dari dram semasa pencucian. Sila lap dengan tuala.
- Selepas pencucian, pintu tidak boleh dibuka apabila mesin berada dalam keadaan suhu tinggi dan apabila paras air terlalu tinggi.

⚠ **Nota:** Semasa operasi biasa, jangan gunakan gelang tarik untuk membuka pintu. Sekiranya perlu menggunakannya, sila hentikan operasi dan buka pintu selepas air menjadi sejuk. Air panas boleh melecurkan pengguna. Pada masa yang sama, sila beri perhatian kepada aliran keluar air sisa dalam dram.


Penggunaan Petak Pencuci

Serbuk Pencuci Sintetik
- Untuk pencuci degil seperti sabun serbuk, sila larutkan sepenuhnya sebelum tuangkan ke dalam petak pencuci.

Pencuci Cecair – Peluntur
- Sila gunakan bahan pencuci cecair yang berbuih rendah sintetik.
- Jika bahan pencuci cecair pekat digunakan, sila cairkan dengan air (2:1) dan tuangkan ke dalam petak pencuci.

Pelembut Fabrik
- Tambah pelembut fabrik sebelum mencuci. Mesin basuh akan menyuntik pelembut secara automatik ke dalam dram semasa bilas tamat.
- Jika pelembut fabrik pekat digunakan, sila cairkan dengan air dan tuangkannya ke dalam petak pencuci.

Bersihkan Petak Pencuci Terlebih Dahulu
- Jika pakaian sangat kotor, sila tambah pencuci yang sesuai selepas memilih fungsi pra-basuh. (Kuantiti pencuci berbeza mengikut model).

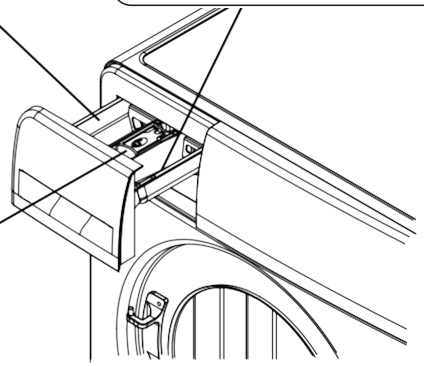

- Gunakan pencuci yang dibuat khas untuk mesin basuh dram.
- Jangan gunakan terlalu banyak pencuci, atau terlalu banyak buih boleh menjejaskan kesan bilas atau menyebabkan kerosakan fungsi.
- Sila ikut arahan pengilang untuk menggunakan pencuci dengan jenis dan warna pakaian, suhu air, tahap pewarnaan, dan lain-lain.
- Menggunakan pencuci yang sesuai dan mempunyai kesan pencucian yang baik dan bermanfaat untuk perlindungan alam sekitar.

Langkah Keselamatan Sebelum Mencuci

1. Label penjagaan.
   - Baca label penjagaan pakaian. Pakaian jenis, bahan dan kaedah membasuh kain dicetak pada label penjagaan.
2. Basuh mengikut jenis pakaian.
   - Untuk mendapatkan kesan pencucian yang terbaik, hanya basuh satu jenis pakaian dalam tempoh mencuci. Suhu air, kelajuan putaran dan program berbeza-beza mengikut jenis pakaian.
   - Pakaian gelap perlu dibasuh berasingan dengan pakaian bewarna terang dan putih.
   - Pakaian yang dicelup dan pakaian baldu kapas perlu dibasuh secara berasingan, jika tidak, pakaian putih mungkin berwarna.
   - Jika boleh, jangan basuh pakaian yang sangat kotor dengan pakaian yang sederhana kotor.

■ Tahap kotoran (teruk, sederhana, ringan). ■ Warna (putih, terang, gelap). ■ Kapas baldu (pakaian yang berkapas baldu mudah tertanggal dan pakaian mudah melekat pada baldu kapas).	■ Basuh mengikut jenis pakaian dan tahap pewarnaan. ■ Pakaian putih hendaklah dicuci berasingan daripada pakaian berwarna. ■ Pakaian yang berkain baldu kapas mudah tertanggal dan mudah melekat pada pakaian lain.

 Periksa sama ada pakaian boleh dibasuh oleh mesin atau tidak.	 Untuk pakaian yang berbutang /aksesorinya mudah rosak semasa basuh, sila terbalikkan baju & basuh.	 Keluarkan habuk dan lumpur dari pakaian sebelum mencuci.
 Keluarkan objek seperti kunci, penyepit rambut, pin dan syiling dari poket.	 Masukkan pakaian yang halus ke dalam beg dobi sebelum mencuci.	 Basuh pakaian dengan kesan minyak atau pakaian yang mudah luntur secara berasingan.

Penyelesaian Masalah

Tanda	Punca Masalah	Kaedah Penyelesaian
Mesin tidak berfungsi	▪ Adakah butang "ON / OFF" atau butang "START/PAUSE" ditekan? ▪ Adakah palam kord kuasa tercabut? ▪ Adakah terdapat kegagalan kuasa? ▪ Adakah pelindung kebocoran rosak?	▪ Tekan butang "ON/OFF" atau butang "START/PAUSE". ▪ Masukkan palam kord kuasa. ▪ Sila tunggu. ▪ Hidupkan pelindung kebocoran.
Putaran tidak normal	▪ Adakah bolt penghantaran dibongkar? ▪ Adakah mesin basuh dipasang dengan tegas? ▪ Adakah terdapat pakaian kecil di dalam dram? ▪ Adakah locknut untuk kaki laras diskrukan dengan ketat?	▪ Tanggalkan bolt penghantaran. ▪ Letakkan mesin basuh di atas lantai yang rata. ▪ Tambah beberapa pakaian yang sama. ▪ Skru "locknuts" dengan ketat.
Kesalahan masuk air "E01"	▪ Adakah paip ditutupkan? ▪ Adakah terdapat gangguan air atau tekanan air lebih rendah? ▪ Adakah hos bekalan air beku? ▪ Adakah hos bekalan air atau injap masuk tersekat?	▪ Bukakan paip. ▪ Sila tunggu. ▪ Mencairkan hos bekalan air dengan air panas. ▪ Keluarkan skrin penapis dari hos bekalan air dan injap masuk dan bersihkannya dengan teliti.
Kerosakan saliran "E03"	▪ Adakah ketinggian hos saliran terlalu tinggi? ▪ Adakah hos saliran beku? ▪ Adakah hos saliran tersumbat oleh benda asing? ▪ Adakah lantai saluran air tersumbat oleh benda asing?	▪ Sila letakkan hos saliran dengan baik dan pastikan ketinggiannya di bawah 1M. ▪ Mencairkan hos saliran dengan air panas. ▪ Keluarkan benda asing dan kosongkan hos saliran. ▪ Keluarkan benda asing dari lantai saluran air.
Kerosakan pintu "E02"	▪ Pastikan sama ada mesin basuh berfungsi atau tidak apabila pintu tidak ditutup rapat?	▪ Tutup pintu dengan rapat dan ketat.
Tiada pemanasan kesalahan "E06"	▪ Tutupkan paip dan cabut palam kuasa. Kemudian, hubungi kakitangan perkhidmatan profesional.	
Kesalahan aliran masuk air berterusan "E04"	▪ Tutupkan paip dan cabut palam kuasa. Kemudian, hubungi kakitangan perkhidmatan profesional.	
Terlalu banyak buih	▪ Adakah pencuci berbuih rendah khas untuk mesin basuh dram digunakan?	▪ Tutup pintu rapat-rapat.
Untuk sebarang kerosakan lain, sila hubungi kakitangan perkhidmatan profesional.		

Nota: Syarat berikut tidak mewakili kerosakan.

Situasi	Penerangan
Pintu tidak boleh dibuka	▪ Program sedang berjalan.
Bau yang pelik	▪ Menyebabkan bahagian getah digunakan dalam mesin, boleh ada bau getah pada mulanya.
Kuantiti air yang rendah semasa mencuci dan membilas	▪ Mesin dram mencuci pakaian dengan 1L air.
Aliran air masuk semasa menjalankan program	▪ Jika paras air terlalu rendah, mesin akan menambah air secara automatik.
Saliran semasa mencuci	▪ Adakah terlalu banyak atau pencuci berbuih tinggi ditambah?
Perubahan masa cucian	▪ Semasa berputar, jika pakaian tidak berada di tengah, masa putaran akan meningkat dengan sewajarnya untuk membetulkan fenomena ini. ▪ Jika tekanan air terlalu rendah, masa aliran masuk akan meningkat dengan sewajarnya.
Bunyi tidak normal semasa berputar	▪ Adakah kord kuasa bersentuhan dengan badan? ▪ Adakah bolt perkapalan dibuka? ▪ Adakah terdapat benda asing seperti pin rambut dan syiling dalam dram?