

KIENZLE

1822

ACTIVE SmartSlim

Kurz-Anleitung Modell-Nr. KI-SWC-92A



Die vollständige Bedienungsanleitung ist in der **MSmartfit App** verfügbar. Schulungsvideos zur Bedienung können Sie unter folgender Internetadresse https://www.kienzle1822.com/Videos/KI-SWC-92A_inst.mp4 oder unter folgendem QR-Code abrufen:




INBETRIEBNAHME

- Entfernen Sie die Schutzfolie vom Display.
- **Laden Sie die Smartwatch vor der ersten Verwendung vollständig auf:**
 - Verbinden Sie die Smartwatch mit dem USB-Ladekabel. Achten Sie darauf, dass der Metallstift des USB-Ladekabels genau auf dem Kontaktpunkt der Smartwatch liegt. Das USB-Ladekabel hält magnetisch.
 - Verbinden Sie das USB-Ladekabel mit einem USB-Ladegerät oder einem Strom führenden USB-Port Ihres Computers.

Symbolabbildungen



Kontaktpunkt

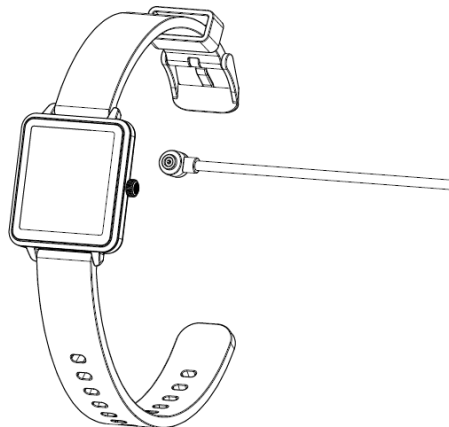

Smartwatch mit dem USB-Ladekabel verbinden

ACTIVE SMART SLIM

Um den Ladestand des Akkus während des Ladevorganges im Display aufzurufen, drücken Sie die Taste seitlich am Gehäuse der Smartwatch.

- Ist der Akku zu 100% geladen, ziehen Sie den USB-Stecker aus dem USB-Ladegerät bzw. dem USB-Port.
- Trennen Sie das USB-Ladekabel von der Smartwatch.
- Drücken Sie nach dem Aufladen die Taste seitlich am Gehäuse der Smartwatch, um die Smartwatch einzuschalten.
- Laden Sie nun die **MSmartfit App** kostenlos im App Store oder Play Store herunter:



- Aktivieren Sie Bluetooth und Standort auf Ihrem Smartphone.
- Verbinden Sie die Smartwatch mit der **MSmartfit App**. Führen Sie die Verbindung **NICHT** über die Bluetooth Einstellungen vom Smartphone durch!



Kompatible Bluetooth®-Geräte: Folgende Geräte, die über Bluetooth® 5.0 oder höher verfügen, sind mit der Smartwatch und der **MSmartfit App** kompatibel:

- Smartphones mit iOS 12.0 und neuere Versionen
- Smartphones mit Android™ 8.0 und neuere Versionen

Bei **Rückfragen** wenden Sie sich bitte an unseren Kundenservice:
E-Mail: service@kienzle1822.de

WASSERDICHTHEIT

Die Uhr ist in folgenden Situationen wasserdicht:

Regen, Spritzer, Händewaschen (Spritzwasser), Duschen, Baden, Schwimmen: JA
Wassersport (z.B. Tauchen): NEIN

Vermeiden Sie die Taste unter Wasser zu drücken.

GARANTIE

Für dieses Produkt leisten wir 24 Monate Garantie. Die Garantiezeit beginnt ab dem Verkaufsdatum (Kassabon, Kaufbeleg). Innerhalb dieser Zeit beheben wir sämtliche Mängel, die auf Material- oder Funktionsfehler zurückzuführen sind kostenlos, ausgenommen: Batterien, unsachgemäße Behandlung, Sturz, Stoß, udgl. E-Mail: service@kienzle1822.de

Sicherheitshinweise/Konformität/Entsorgung

Google Play™ und Android™ sind Marken von Google Inc. Apple, das Apple-Logo, iPad und iPhone sind in den USA und anderen Ländern eingetragene Marken von Apple Inc. App Store ist eine Dienstmarke von Apple Inc. Die Bluetooth®-Wortmarke und -Logos sind eingetragene Marken von Bluetooth SIG, Inc. und werden von Krippel-Electronics GmbH unter Lizenz verwendet. Weitere Marken und Markennamen sind Eigentum ihrer jeweiligen Inhaber.

Sicherheit

Bestimmungsgemäßer Gebrauch

Die Uhr ist ausschließlich zur Aufzeichnung Ihrer Aktivitäten und Schlafgewohnheiten und zum Datenaustausch mit Smartphones konzipiert. Sie dient dazu, Daten zu sammeln, die Sie mithilfe der MSmartfit App auswerten können. Die Uhr ist nur für den Privatgebrauch bestimmt und nicht für den gewerblichen, therapeutischen oder medizinischen Bereich geeignet. Sie ist kein Kinderspielzeug. Verwenden Sie die Uhr nur wie beschrieben. Jede andere Verwendung gilt als nicht bestimmungsgemäß und kann zu Sach- oder zu Personenschäden führen. Der Hersteller oder Händler übernimmt keine Haftung für Schäden, die durch nicht bestimmungsgemäßen oder falschen Gebrauch entstanden sind.

Sicherheitshinweise

WARNUNG! Verletzungsgefahr! Fehlerhafte Bedienung kann zu schweren Verletzungen führen. Wenn Sie einen Herzschrittmacher tragen, besprechen Sie sich mit Ihrem Arzt, bevor Sie die Uhr zum ersten Mal tragen.

WARNUNG! Explosionsgefahr! Akkus können explodieren, wenn sie stark erhitzt werden. Erhitzen Sie die Uhr nicht. Halten Sie die Uhr von heißen Oberflächen fern. Werfen Sie die Uhr nicht ins offene Feuer. Schützen Sie die Uhr vor direkter Sonneneinstrahlung. Laden Sie den Akku nicht in unmittelbarer Nähe von heißen Oberflächen oder Gegenständen auf.

WARNUNG! Gefahren für Kinder und Personen mit verringerten physischen, sensorischen oder mentalen Fähigkeiten (beispielsweise teilweise Behinderte, ältere Personen mit Einschränkungen ihrer physischen und mentalen Fähigkeiten) oder Mangel an Erfahrung und Wissen (beispielsweise ältere Kinder). Diese Uhr kann von Kindern ab acht Jahren und darüber sowie von Personen mit verringerten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung und Wissen benutzt werden, wenn sie beaufsichtigt werden oder bezüglich des sicheren Gebrauchs der Uhr unterwiesen wurden und die daraus resultierenden Gefahren verstanden haben.

WARNUNG! Verätzungsgefahr durch Batteriesäure! Ausgelaufene Batteriesäure kann zu Verätzungen führen. Vermeiden Sie den Kontakt von Batteriesäure mit Haut, Augen und Schleimhäuten. Spülen Sie bei Kontakt mit der Batteriesäure die betroffenen Stellen sofort mit reichlich klarem Wasser und suchen Sie einen Arzt auf.

VORSICHT! Verletzungsgefahr! Fehlerhafte Bedienung kann zu Verletzungen führen. Verwenden Sie die Uhr nicht, wenn sie sichtbare Schäden aufweist. Öffnen Sie das Gehäuse der Uhr nicht, und überlassen Sie eine Reparatur Fachkräften. Bei eigenständig durchgeführten Reparaturen oder falscher Verwendung sind Haftungs- und Garantieansprüche ausgeschlossen.

HINWEIS: Beschädigungsgefahr! Unsachgemäßer Umgang mit der Uhr kann zu Beschädigungen führen. Halten Sie scharfe Gegenstände von der Uhr fern. Bewahren Sie die Uhr so auf, dass sie nicht in eine Wanne oder in ein Waschbecken fallen kann. Nehmen Sie den Akku nicht aus der Uhr heraus, er ist fest integriert und nicht austauschbar. Laden Sie den leeren Akku nur über das mitgelieferte USB-Ladekabel mit einem USB-Ladegerät (5V DC max. 0.5A) oder einem Strom führenden USB-Port Ihres Computers auf. Benutzen Sie die Uhr bei einer Umgebungstemperatur zwischen -10 °C und +45 °C. Platzieren Sie keine Gegenstände auf der Uhr und üben Sie keinen Druck auf das Display aus. Meiden Sie sehr starke Magnetfelder (z. B. Mobiltelefone, TV-Geräte, Föhn, elektrische Rasierer, elektrische Schweißgeräte, Transformatoren), weil sonst Abweichungen in der Übertragung der gemessenen Daten auftreten können.

HINWEIS: Beschädigungsgefahr! Ein falsches Verbinden der Uhr mit dem USB-Ladekabel kann zur Erhitzung der Uhr bzw. des Kabels führen. Achten Sie darauf, dass der Metallstift des USB-Ladekabels genau auf dem Kontaktpunkt der Uhr liegt.

Technische Daten:

Uhr:	Frequenzbereich: 2402 - 2480 MHz	Maximale Sendeleistung: -3,18 dBm
Akku:	Typ: Lithium-Ionen Polymer Akku	Kapazität: 135 mAh
	Spannung: 3,8 V	Ladestrom: 0.5A

Uhr reinigen

HINWEIS: Beschädigungsgefahr! Unsachgemäße Reinigung kann zu Beschädigungen führen. Verwenden Sie keine aggressiven Reinigungsmittel, Bürsten mit Metall- oder Nylonborsten sowie keine scharfen oder metallischen Reinigungsgegenstände. Achten Sie darauf, dass der optische Sensor auf der Gehäuseunterseite frei von Ablagerungen ist. Damit gewährleisten Sie eine akkurate Pulsmessung.

Uhr aufbewahren

HINWEIS: Beschädigungsgefahr! Unsachgemäßer Umgang mit der Uhr kann zu Beschädigungen führen. Bewahren Sie die Uhr an einem sauberen und trockenen Ort zwischen -10 °C und +50 °C auf. Halten Sie die Uhr von direkter Sonneneinstrahlung fern.

Konformitätserklärung: Hiermit erklärt Krippel-Electronics GmbH, dass der Funkanlagentyp Smartwatch KI-SWC-92A der Richtlinie 2014/53/EU (RED) und der Richtlinie 2011/65/EU (RoHS) entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
<https://www.kienzle1822.de>



Krippel-Electronics GmbH, Maria-Theresia-Straße 41, 4600 Wels, AUSTRIA



Verpackung entsorgen: Entsorgen Sie die Verpackung sortenrein. Geben Sie Pappe und Karton zum Altpapier, Folien in die Wertstoff-Sammlung.



Uhr entsorgen: Altgeräte dürfen nicht in den Hausmüll!

Dieses Symbol weist darauf hin, dass dieses Produkt gemäß Richtlinie über Elektro- und Elektronik-Altgeräte (2012/19/EU) und nationalen Gesetzen nicht über den Hausmüll entsorgt werden darf. Dieses Produkt muss bei einer dafür vorgesehenen Sammelstelle abgegeben werden. Dies kann z. B. durch Rückgabe beim Kauf eines

ähnlichen Produkts oder durch Abgabe bei einer autorisierten Sammelstelle für die Wiederaufbereitung von Elektro- und Elektronik-Altgeräten geschehen. Wir weisen hiermit auf die unter bestimmten Voraussetzungen gegebene Pflicht der Vertreiber zur unentgeltlichen Rücknahme von Altgeräten hin. Der unsachgemäße Umgang mit Altgeräten kann aufgrund potentiell gefährlicher Stoffe, die häufig in Elektro- und Elektronik-Altgeräten enthalten sind, negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben. Durch die sachgemäße Entsorgung dieses Produkts tragen Sie außerdem zu einer effektiven Nutzung natürlicher Ressourcen bei. Informationen zu Sammelstellen für Altgeräte erhalten Sie bei Ihrer Stadtverwaltung, dem öffentlich-rechtlichen Entsorgungsträger, einer autorisierten Stelle für die Entsorgung von Elektro- und Elektronik-Altgeräten oder Ihrer Müllabfuhr. Wir weisen hiermit auf die Eigenverantwortung des Endnutzers im Hinblick auf das Löschen der personenbezogenen Daten auf dem zu entsorgenden Altgerät hin.

Batterien und Akkus dürfen nicht in den Hausmüll!

In Elektrogeräten enthaltene Akkus müssen nach Möglichkeit aus dem Gerät entnommen und getrennt entsorgt werden. Der Akku dieser Uhr ist jedoch fest integriert und nicht entnehmbar.



Als Verbraucher sind Sie gesetzlich verpflichtet, alle Batterien und Akkus, egal ob sie Schadstoffe* enthalten oder nicht, bei einer Sammelstelle in Ihrer Gemeinde/Ihrem Stadtteil oder im Handel abzugeben, damit sie einer umweltschonenden Entsorgung zugeführt werden können. Geben Sie die Batterie nur in entladendem Zustand an Ihrer Sammelstelle ab. *gekennzeichnet mit: Cd = Cadmium, Hg = Quecksilber, Pb = Blei

KIENZLE

1822

ACTIVE SmartSlim

Short instructions Model no. KI-SWC-92A



The complete operating instructions are available in the **MSmartfit app**. You can access training videos on how to use the device at the following internet address https://www.kienzle1822.com/Videos/KI-SWC-92A_inst.mp4 or using the following QR code:




COMMISSIONING

- Remove the protective film from the display.
- **Fully charge the smartwatch before using it for the first time:**
 - Connect the smartwatch to the USB charging cable. Make sure that the metal pin of the USB charging cable is exactly on the contact point of the smartwatch. The USB charging cable is held magnetically.
 - Connect the USB charging cable to a USB charger or a powered USB port on your computer.

symbol images



Contact points

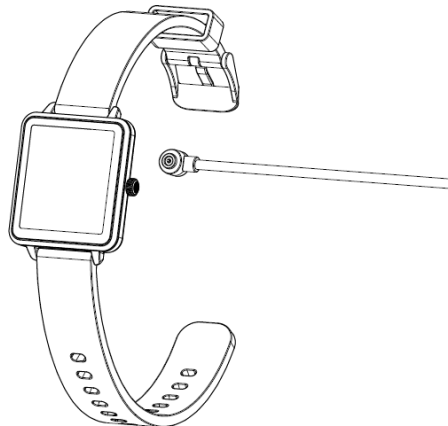

Connect the smartwatch to the USB charging cable

- To view the battery charge level on the display during charging, press the button on the side of the smartwatch case.
- When the battery is 100% charged, remove the USB plug from the USB charger or USB port.
- Disconnect the USB charging cable from the smartwatch.
- After charging, press the button on the side of the smartwatch case to turn the smartwatch on.
- Now download the **MSmartfit app** for free from the App Store or Play Store:



- Activate Bluetooth and location on your smartphone.
 - Connect the smartwatch to the **MSmartfit app**.
- DO NOT** connect via the Bluetooth settings on your smartphone!



Compatible Bluetooth® devices: The following devices that have Bluetooth® 5.0 or higher are compatible with the smartwatch and the **MSmartfit app**:

- Smartphones with iOS 12.0 and newer versions
- Smartphones with Android™ 8.0 and newer versions

If you have any **questions**, please contact our customer service:
E-mail: service@kienzle1822.de

WATERPROOFNESS

The watch is waterproof in the following situations:

Rain, splashes, washing hands (splashing water), showering, bathing, swimming: YES

Water sports (e.g. diving): NO

Avoid pressing the button underwater.

WARRANTY

We provide a 24-month guarantee for this product. The guarantee period begins on the date of sale (cash receipt, proof of purchase). During this period, we will repair any defects that are due to material or functional defects free of charge, with the exception of: batteries, improper handling, falls, impacts, etc.

E-mail: service@kienzle1822.de

Safety Instructions/Conformity/Disposal

Google Play™ and Android™ are trademarks of Google Inc. Apple, the Apple logo, iPad and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc. and are used by Krippel-Electronics GmbH under license. Other trademarks and brand names are the property of their respective owners.

Safety Intended use

The watch is designed exclusively to record your activities and sleeping habits and to exchange data with smartphones. It is designed to collect data that you can evaluate using the MSmartfit app. The watch is intended for private use only and is not suitable for commercial, therapeutic or medical use. It is not a children's toy. Only use the watch as described. Any other use is considered improper and can lead to property damage or personal injury. The manufacturer or dealer accepts no liability for damage caused by improper or incorrect use.

Safety instructions

WARNING! Risk of injury! Incorrect operation can lead to serious injuries. If you have a pacemaker, consult your doctor before wearing the watch for the first time.

WARNING! Risk of explosion! Batteries can explode if they are heated to a high temperature. Do not heat the watch. Keep the watch away from hot surfaces. Do not throw the watch into an open fire. Protect the watch from direct sunlight. Do not charge the battery in the immediate vicinity of hot surfaces or objects.

WARNING! Dangers for children and people with reduced physical, sensory or mental abilities (e.g. partially disabled people, elderly people with limitations in their physical and mental abilities) or lack of experience and knowledge (e.g. older children). This watch can be used by children aged eight years and above and by people with reduced physical, sensory or mental abilities or lack of experience and knowledge if they are supervised or have been instructed on how to use the watch safely and have understood the resulting risks.

WARNING! Risk of burns from battery acid! Leaking battery acid can cause burns. Avoid contact of battery acid with skin, eyes and mucous membranes. If you come into contact with battery acid, immediately rinse the affected areas with plenty of clean water and seek medical attention.

CAUTION! Risk of injury! Incorrect operation can cause injury. Do not use the watch if it is visibly damaged. Do not open the watch case and leave repairs to specialists. Liability and warranty claims are excluded if you carry out repairs yourself or if you use the watch incorrectly.

NOTE: Risk of damage!

Improper handling of the watch can cause damage. Keep sharp objects away from the watch. Store the watch so that it cannot fall into a tub or sink. Do not remove the battery from the watch; it is permanently integrated and cannot be replaced. Only charge the empty battery using the USB charging cable provided with a USB charger (5V DC max. 0.5A) or a powered USB port on your computer. Use the watch at an ambient temperature between -10 °C and +45 °C. Do not place any objects on the watch and do not apply pressure to the display. Avoid very strong magnetic fields (e.g. mobile phones, TV sets, hair dryers, electric shavers, electric welding equipment, transformers), as otherwise deviations in the transmission of the measured data may occur.

NOTE: Risk of damage! Connecting the watch to the USB charging cable incorrectly can cause the watch or the cable to heat up. Make sure that the metal pin of the USB charging cable is exactly aligned with the contact point on the watch.

Technical data:

Watch: Frequency range: 2402 - 2480 MHz Maximum transmission power: -3,18 dBm

Battery: Type: Lithium-ion polymer battery Capacity: 135 mAh
Voltage: 3.8 V Charging current: 0.5A

Cleaning the watch

NOTE: Risk of damage! Improper cleaning can lead to damage.

Do not use aggressive cleaning agents, brushes with metal or nylon bristles or sharp or metallic cleaning objects. Make sure that the optical sensor on the bottom of the case is free of deposits. This will ensure accurate pulse measurement.

Storing the watch

NOTE: Risk of damage! Improper handling of the watch can lead to damage. Store the watch in a clean and dry place between -10 °C and +50 °C. Keep the watch away from direct sunlight.

Declaration of conformity: Kripl-Electronics GmbH hereby declares that the radio equipment type Smartwatch KI-SWC-92A complies with Directive 2014/53/EU (RED) and Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address:
<https://www.kienzle1822.de>

Kripl-Electronics GmbH, Maria-Theresia-Straße 41, 4600 Wels, AUSTRIA



Dispose of packaging: Dispose of packaging separately. Put cardboard and cartons in the waste paper bin and foil in the recycling bin.

Dispose of your watch: Old devices must not be disposed of in household waste!



This symbol indicates that, according to the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national law, this product must not be disposed of with household waste. This product must be returned to a designated collection point. This can be done, for example, by returning it when purchasing a similar product or by handing it in to an authorized collection point for the recycling of waste electrical and electronic equipment. We hereby draw your attention to the obligation of distributors to take back old equipment free of charge under certain conditions. Incorrect handling of old equipment can have negative effects on the environment and human health due to potentially hazardous substances that are often contained in waste electrical and electronic equipment. By disposing of this product correctly, you will also contribute to the effective use of natural resources. Information about collection points for old equipment can be obtained from your local council, public waste disposal authority, an authorized body for the disposal of waste electrical and electronic equipment or your waste disposal service. We hereby point out that the end user is responsible for deleting personal data from the old device to be disposed of.

Batteries and rechargeable batteries must not be disposed of in household waste!

Batteries contained in electrical devices must, if possible, be removed from the device and disposed of separately. However, the battery in this watch is permanently integrated and cannot be removed.



As a consumer, you are legally obliged to hand in all batteries and rechargeable batteries, regardless of whether they contain harmful substances* or not, to a collection point in your community/district or to a retailer so that they can be disposed of in an environmentally friendly manner. Only hand in the battery to your collection point when it is discharged. *marked with: Cd = cadmium, Hg = mercury, Pb = lead

EU Declaration of conformity

DIGITAL SMARTWATCH

Model No. KI-SWC-92A, Type No. SW1411H

Trade mark: Kienzle 1822

Date code PO8160

This declaration of conformity is issued under the sole responsibility of the company responsible for placing on the market.

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation of the Directive 2014/53/EU (RED) and the Directive 2011/65/EU (RoHS).

The following standards have been used to demonstrate the conformity of the product:

Model No. KI-SWC-92A, Type No. SW1411H

- EN 50663:2017
- EN 62479:2010
- EN IEC 62368-1:2024 + A11:2024
- ETSI EN 301 489-1 V2.2.3 (2019-11)
- ETSI EN 301 489-17 V3.3.1 (2024-09)
- EN 55032:2015 + A1:2020
- EN IEC 61000-3-2:2019 + A2:2024
- EN 61000-3-3:20213 + A2:2021 + AC:2022-01
- EN 55035:2017 + A11:2020
- ETSI EN 300 328 V2.2.2 (2019-07)
- IEC 62321
- EN IEC 63000:2018

The product is intended to be used in the EU.

Company responsible for
placing on the market:

Kripl-Electronics GmbH

Address:

Maria-Theresia-Strasse 41, 4600 Wels

Point of contact:

Jochen Kripl

Tel.: +43(0)7242/600956

Fax: +43(0)7242/60095624

E-Mail: info@kripl-electronics.com



Signed for and on behalf of:

Wels, 29.06.2026

(Place, date of issue)

(Jochen Kripl, CEO)