BLUESKY MAST

support@bluskymast.com

Read Manual Before Use
Refer to detailed instructions in the 200H Lift Series Manual at all times

2024, Rev 1


200H Lift Series
Quick Reference Sheet – Primary Guying Only
DEPLOYMENT




Stand the tripod up with the base plates on the ground and release the Velcro Strap.




Unfold the tripod legs and make sure the cross bars are locked into position.

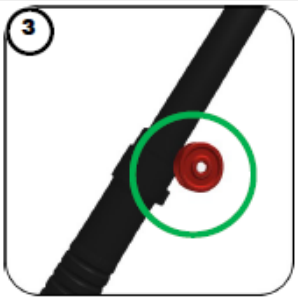

Loosen the turn knobs on each of the tripod legs and allow them to fully extend.

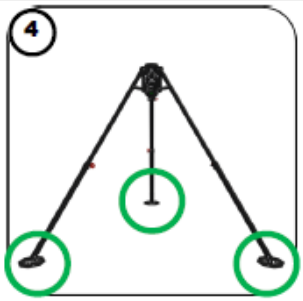


Make sure the base plates are flat on the ground and tighten the turn knobs.

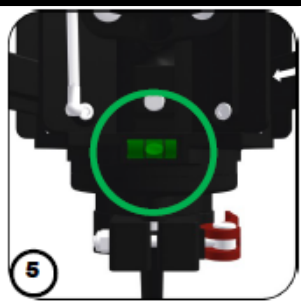


Level the tripod by using the three bubble levels and adjusting the tripod legs.




Secure the tripod by driving stakes through the two holes on each of the 3 tripod base plates.

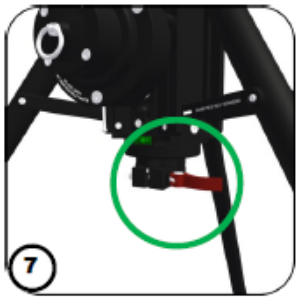

Release the cam lock on the bottom of the tripod.

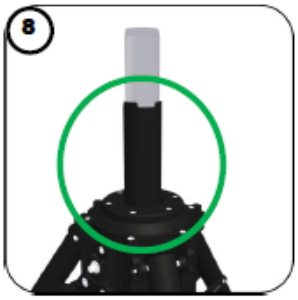

Insert first mast pole leaving at least 4 inches above the tripod and lock the cam lock.

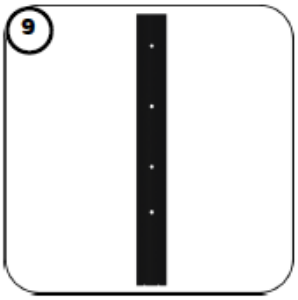


Add the mounting pole (1/2 the size of a mast pole) to the top of the mast pole.



Add the red primary guy ring and pin it to the bottom hole on the mounting pole.



Attach and secure your devices to the mast. Use Velcro straps to secure any cables.

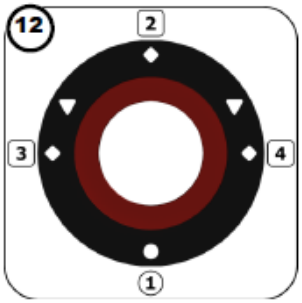

Deploy Primary Guying
Four Guy Configuration
TWO PEOPLE



Person #1 Locate the **GUY LEADER** with orange guy rope and clip it into the **Round Hole** on the primary guy ring. Walk away from the mast unwinding the guy leader rope until you reach the 10M mark.






NOTE: The Meter Markers on the Guy Leader may vary based on system height purchased.




Person #2 - Locate the four Large Guy Stakes and Hammer and follow behind person #1.



Guy Stake #1 - At the 10M mark drive a stake into the ground at a slight angle.

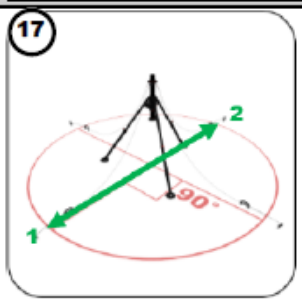

Guy Stake #2 - make sure it is staked directly opposite and inline with guy stake #1

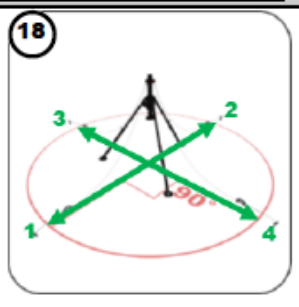

Repeat this process until all four primary guy stakes are deployed 90 degrees apart.



Remove the Guy Leader from the Primary Guy Ring.

Do Not Duplicate, Alter or Copy without the Express Written Consent
of BlueSky Mast, Inc. Copyright 2024 Allendale LLC All Rights Reserved


BLUESKY MAST

BLUESKY MAST


support@bluskymast.com

Read Manual Before Use
Refer to detailed instructions in the 200H Lift Series Manual at all times


200H Lift Series
Quick Reference Sheet – Primary Guying Only
DEPLOYMENT

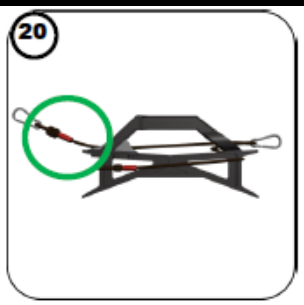


Locate the four Primary Guy Ropes with the red tab next to the guy clip.

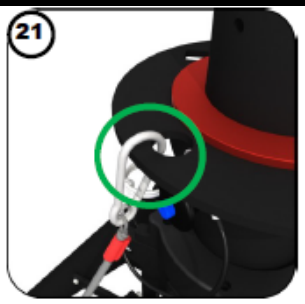


Clip the first Primary Guy Rope to the round hole on the guy ring.

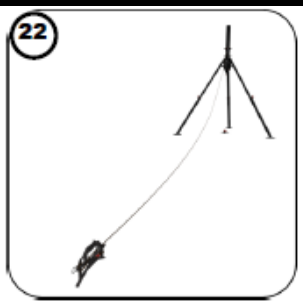

Walk away for the mast and unwind ALL of the guy rope off of the guy handle.

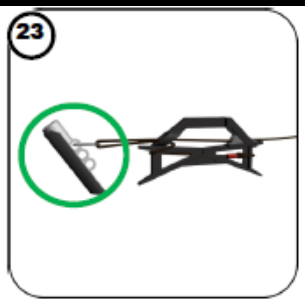

Clip the guy rope into the top hole of the guy stake.

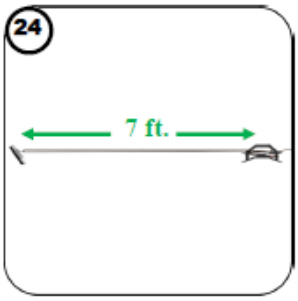

IMPORTANT: Slide the Guy Handle towards the mast approx. 7 ft.
Repeat this process on all four primary guy ropes.




Attach the winch handle to the winch by pulling the pin on the winch.



Pay out the cable by turning the winch handle counter clockwise. It should hang freely on



Locate the lift base plate and place it on the ground below the mast pole.

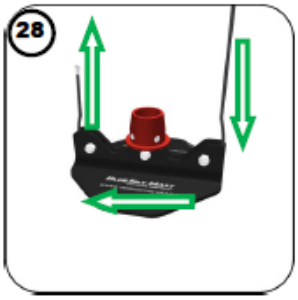

Pay out enough cable to go through the pulleys and back up to the ball stop holder.



Pull the pin on the ball stop holder opposite the winch. Insert the ball stop and release the pin to secure.




Crank the winch to raise the lift base plate until it nests in the bottom of the mast pole and the cable is taut.



Slowly release the cam lock and raise the mast pole until 4 inches are showing under the tripod.



Lock the cam lock and lower the lift base plate to the ground. Insert another mast pole.

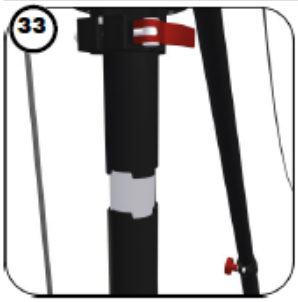

Raise the mast pole until the castle cuts on both mast poles nest together.




Slowly release the cam lock and raise the mast pole until 4 inches are showing under the tripod.



Lock the cam lock and lower the lift base plate to the ground. Insert another mast pole.



WARNING: If at any point the mast begins to slip while the cam lock is locked - **STOP**

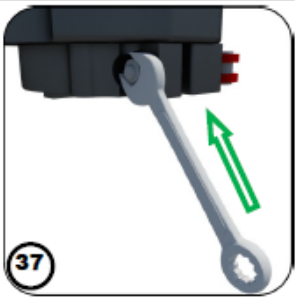


Use the 7/16 wrench provided with the system to make adjustments to the cam lock.

Do Not Duplicate, Alter or Copy without the Express Written Consent
of BlueSky Mast, Inc. Copyright 2024 Allendale LLC All Rights Reserved

BLUESKY MAST


200H Heavy Lift Series
Quick Reference Sheet – Primary Guying Only
DEPLOYMENT

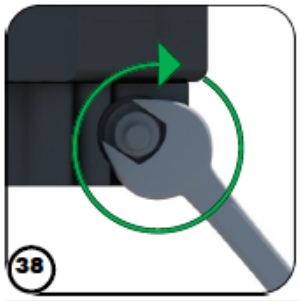

Tighten the nut on the cam lock a quarter turn until slipping no longer occurs.




Repeat steps 24 - 26 until you have reached the desired height of the mast.

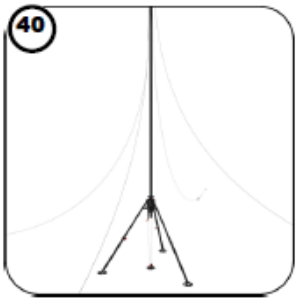

Incremental guying may be required.



Lower the last mast pole to the ground and lock the cam lock.

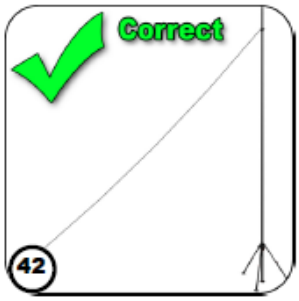

Adjust the 4 primary guy ropes and make sure the mast is straight and perpendicular.



Lock the PRIMARY guy ropes by holding the rope in front of the handle and sliding the handle towards the mast. Allow the rope to settle into the cleat which will lock the rope into position.



Drive two tripod stakes at an angle through the two holes in the lift base plate.





OPTIONAL: Secure the winch and winch cable by remove the ball stop from the ball stop holder. Wind the free cable onto the winch and secure the ball stop on the winch. Remove the handle and place it back into the wheeling carry bag or hard case.

Do Not Duplicate, Alter or Copy without the Express Written Consent
of BlueSky Mast, Inc. Copyright 2024 Allendale LLC All Rights Reserved