
Surface Wire Grounding Kit

Contents of Surface Wire Grounding Kit

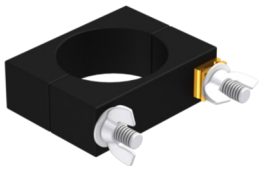

Grounding Bracket




Stainless Steel Cable w/Stakes



Grounding Bag

DEPLOYMENT INSTRUCTIONS

1. Locate grounding bracket and attach to the base pole of the mast.

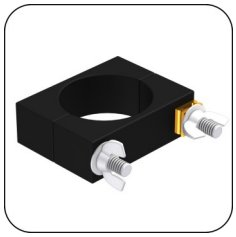

2. The grounding bracket should be attached to the middle of the base pole to provide the best grounding.




3. Locate the grounding cables and place them at the base of the mast.



Page 1 of 2

Surface Wire Grounding Kit

Contents of Surface Wire Grounding Kit

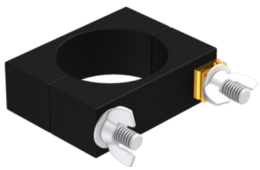

Grounding Bracket




Stainless Steel Cable w/Stakes



Grounding Bag

DEPLOYMENT INSTRUCTIONS

1. Locate grounding bracket and attach to the base pole of the mast.

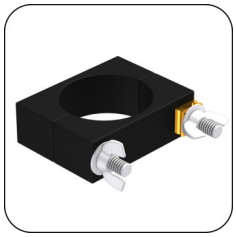

2. The grounding bracket should be attached to the middle of the base pole to provide the best grounding.




3. Locate the grounding cables and place them at the base of the mast.



DEPLOYMENT INSTRUCTIONS CONTINUED


4. Remove the wing nut from the post without the Bronze ECLE connector and attach the ends of the grounding cables.

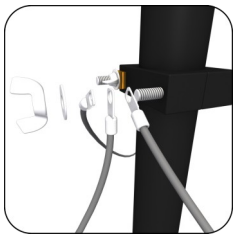


5. Connect one end of each of the grounding cables to the grounding bracket post and tighten back down the wing




6. If additional equipment grounds are required, attach them to the Bronze ECLE connector.

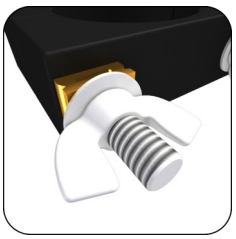

PLACEMENT OF GROUNDING CABLES AND STAKES

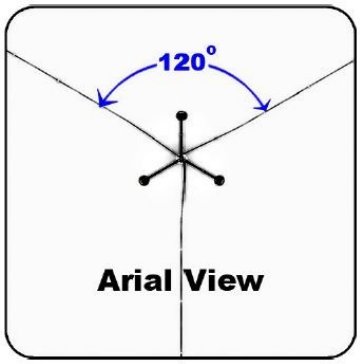


7. Extend the grounding cables away from the base pole at 120 degree angles from each other
8. Position the 1st stake of each cable at the free end furthest from the base of the base.
9. Evenly space the remaining stakes of each cable at an interval of 4.5 ft from each other.
10. Hammer the stakes into the ground making sure that the head of each stake contacts the ground.

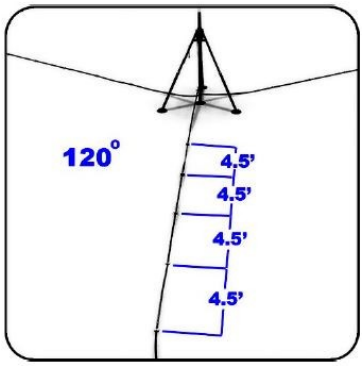

Page 2 of 2

DEPLOYMENT INSTRUCTIONS CONTINUED


4. Remove the wing nut from the post without the Bronze ECLE connector and attach the ends of the grounding cables.

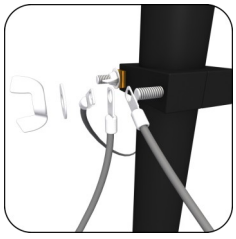


5. Connect one end of each of the grounding cables to the grounding bracket post and tighten back down the wing



6. If additional equipment grounds are required, attach them to the Bronze ECLE connector.

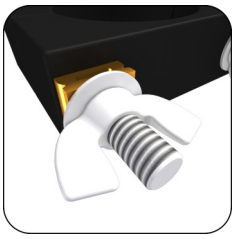

PLACEMENT OF GROUNDING CABLES AND STAKES

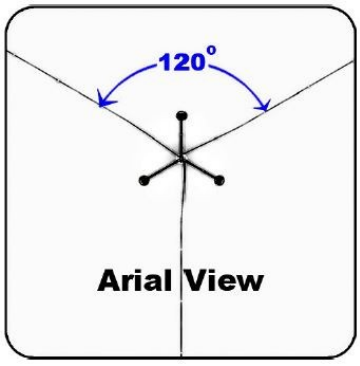

7. Extend the grounding cables away from the base pole at 120 degree angles from each other
8. Position the 1st stake of each cable at the free end furthest from the base of the base.
9. Evenly space the remaining stakes of each cable at an interval of 4.5 ft from each other.
10. Hammer the stakes into the ground making sure that the head of each stake contacts the ground.

