
Bulkhead Wire Guard Install Instructions


These instructions contain safety information, read and follow them carefully.
Dialight will not accept any responsibility for injury, damage or loss which may occur due to incorrect installation, operation or maintenance.

Note: Save these instructions for future use


ATTENTION
Dialight is not responsible for damage to the luminaire if mounted improperly.

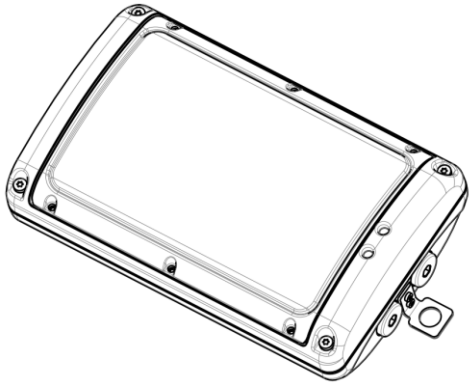


Place fixture on flat surface or retain lens in place

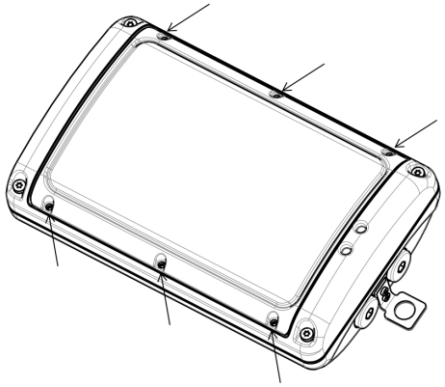

Remove and discard washers and existing screws
CAUTION: DO NOT REMOVE GASKET

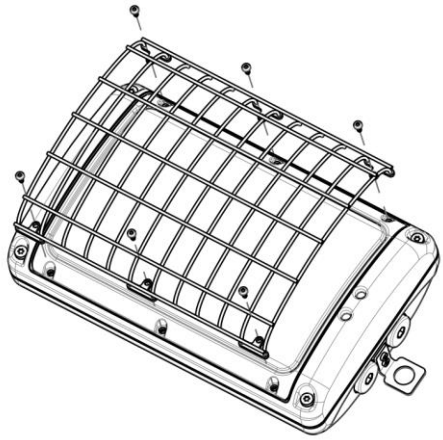

Install provided screws
(6 places)

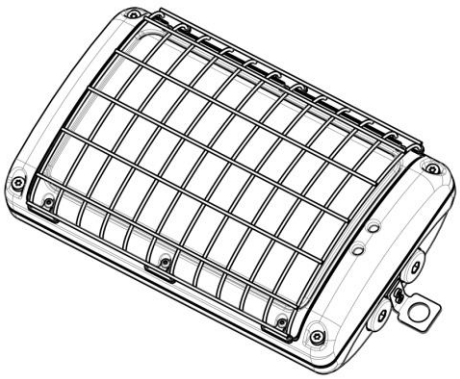

Torque = 2.3-2.5 N-m (20-22 in-lbs)

Official Statement

All statements, technical information, and recommendations contained herein are based on information and tests that Dialight believes to be reliable. The accuracy or completeness thereof is not guaranteed. In accordance with Dialight Terms and Conditions of Sale and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his or her intended use and assumes all risk and liability whatsoever in connection therewith.

Document # 9100BHD001400 Rv.B
Dialight, 1501 Route 34 South, Farmingdale, NJ 07727
Tel: 732.919.3119 Fax: 732.751.5778 www.dialight.com