

Ethernet LED Tower Light

QTR50(M)L/ QTR60(M)L/ QTR70(M)L-ETN



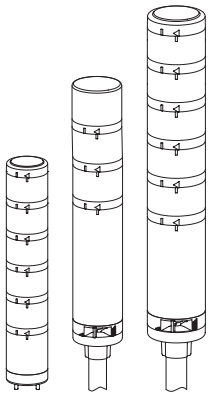

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

⚠ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

⚠ Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

1. Please remove any objects that can interrupt ventilation around the product.
2. Please turn off the power of the product immediately if it fails to operate properly.
3. Carefully wire the product according to each product's specification.
4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
5. Do not apply excessive force/impact to the product.
6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

• **QTR50(M)L-ETN**

QTR50L-ETN-BZ	-	**3**	-	**24**	-	**RAG**	-	**LW18**
[Model number]		[Layer]		[Voltage]		[Color]		[Mounting option]
• QTR50L-ETN-BZ • QTR50ML-ETN-BZ • QTRA50L-ETN-BZ • QTRA50ML-ETN-BZ		• Layer1-1 • Layer2-2 • Layer3-3 • Layer4-4 • Layer5-5		• 12-DC12V • 24-DC24V • 110-AC110V • 220-AC220V		R-Red A-Amber G-Green B-Blue W-White		• (None) - Standard type • Mounting type - LB18 - LW18 - QZ18 - SZ18 - QL18 - SL18 - SLB370

Please scan the QR code for more detailed product information.

www.qlight.com

Ordering Specifications

• **QTR60(M)L-ETN**

QTR60L-ETN-BZ	-	3	-	24	-	RAG	-	LW18
[Model number]		[Layer]		[Voltage]		[Color]		[Mounting option]
• QTR60L-ETN-BZ • QTR60ML-ETN-BZ • QTRA60L-ETN-BZ • QTRA60ML-ETN-BZ		• Layer1-1 • Layer2-2 • Layer3-3 • Layer4-4 • Layer5-5		• 12-DC12V • 24-DC24V • 110-AC110V • 220-AC220V		R-Red A-Amber G-Green B-Blue W-White		• (None) - Standard type • Mounting type - LB18 - LW18 - QZ18 - SZ18 - QL18 - SL18 - SLB370

• **QTR70(M)L-ETN**

QTR70L-ETN-BZ	-	3	-	24	-	RAG	-	LW24
[Model number]		[Layer]		[Voltage]		[Color]		[Mounting option]
• QTR70L-ETN-BZ • QTR70ML-ETN-BZ • QTRA70L-ETN-BZ • QTRA70ML-ETN-BZ		• Layer1-1 • Layer2-2 • Layer3-3 • Layer4-4 • Layer5-5		• 12-DC12V • 24-DC24V • 110-AC110V • 220-AC220V		R-Red A-Amber G-Green B-Blue W-White		• (None) - Standard type • Mounting type - LB24 - LW24 - QZ24 - SZ24 - QL24 - SL24

Product Specifications

• **QTR50(M)L-ETN**

Model number	Layer	Voltage	Certificate	Color
QTR50(M)L-ETN-BZ QTRA50(M)L-ETN-BZ (BZ: 5 Tone Buzzer)	1	DC12V DC24V AC110V AC220V	CE	R-Red
	2	DC12V DC24V AC110V AC220V		R-Red G-Green
	3	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green
	4	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue
	5	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue W-White

Light source/buzzer current(based on 1 layer)				
Voltage condition	DC12V	DC24V	AC110V	AC220V
Light source current (1 layer)	265mA	285mA	Max.70mA	Max.50mA
Buzzer current	215mA	245mA	Max.55mA	Max.35mA

• **QTR60(M)L-ETN**

Model number	Layer	Voltage	Certificate	Color
QTR60(M)L-ETN-BZ QTRA60(M)L-ETN-BZ (BZ: 5 Tone Buzzer)	1	DC12V DC24V AC110V AC220V	CE	R-Red
	2	DC12V DC24V AC110V AC220V		R-Red G-Green
	3	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green
	4	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue
	5	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue W-White

Light source/buzzer current(based on 1 layer)				
Voltage condition	DC12V	DC24V	AC110V	AC220V
Light source current (1 layer)	285mA	300mA	Max.75mA	Max.45mA
Buzzer current	215mA	245mA	Max.55mA	Max.35mA

• **QTR70(M)L-ETN**

Model number	Layer	Voltage	Certificate	Color
QTR70(M)L-ETN-BZ QTRA70(M)L-ETN-BZ (BZ: 5 Tone Buzzer)	1	DC12V DC24V AC110V AC220V	CE	R-Red
	2	DC12V DC24V AC110V AC220V		R-Red G-Green
	3	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green
	4	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue
	5	DC12V DC24V AC110V AC220V		R-Red A-Amber G-Green B-Blue W-White


Light source/buzzer current(based on 1 layer)				
Voltage condition	DC12V	DC24V	AC110V	AC220V
Light source current (1 layer)	285mA	300mA	Max.60mA	Max.45mA
Buzzer current	215mA	245mA	Max.85mA	Max.35mA

• LED Module Standard Operation : 2 layers will operate at the same time


Dimensions

(Units : mm)


QTR(A)50L-ETN-BZ

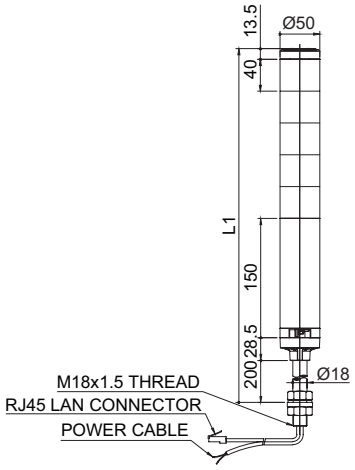


LAYER	L1	L2
1	432	204
2	472	244
3	512	284
4	552	324
5	592	364




QTR(A)50ML-ETN-BZ

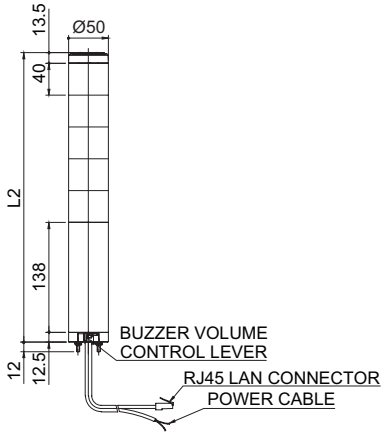


QTR(A)60L-ETN-BZ

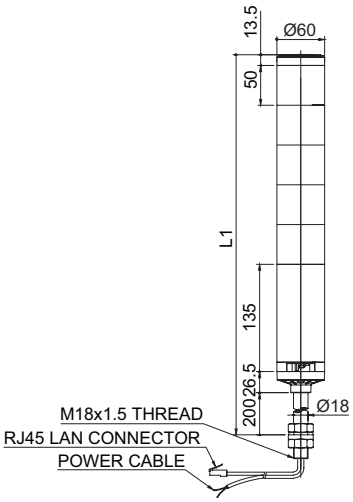


LAYER	L1	L2
1	425	199
2	475	249
3	525	299
4	575	349
5	625	399



QTR(A)60ML-ETN-BZ

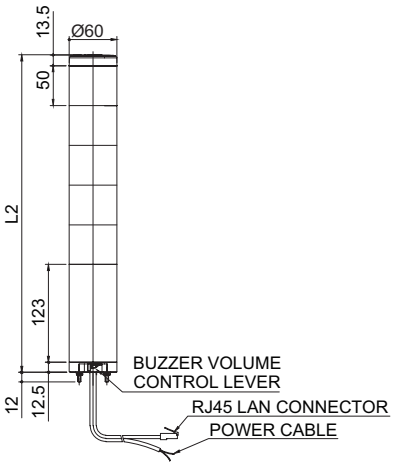


QTR(A)70L-ETN-BZ

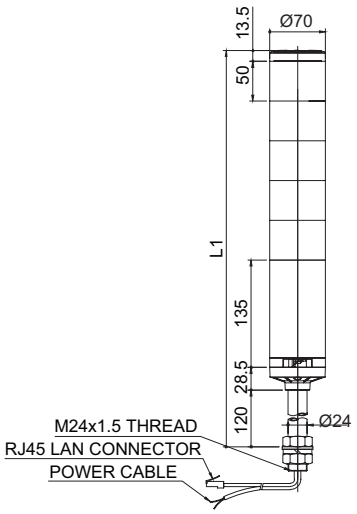


LAYER	L1	L2
1	347	199
2	397	249
3	447	299
4	497	349
5	547	399




QTR(A)70ML-ETN-BZ

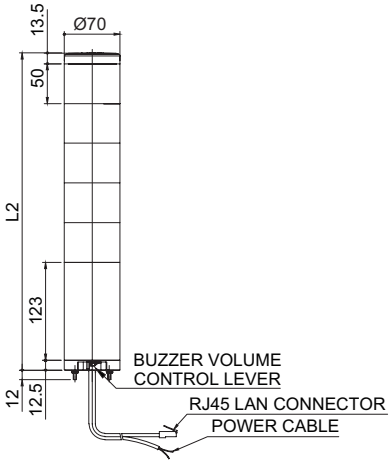

Wiring Instructions

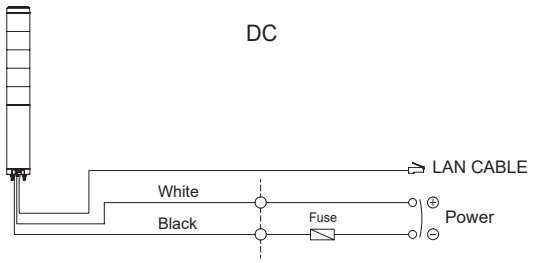

- Connect RJ45 connector that is connected to UTP cable to Ethernet port of a PC or a router.
- External power line - UL1015 AWG18(0.75sq) x 2C 400mm
- For AC type, power cable is equipped with the product.
- UTP Cable : Category 5 cable

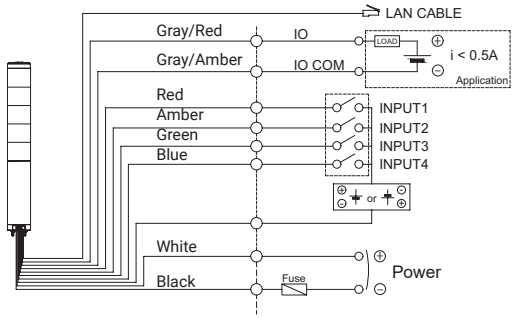

- Connect RJ45 connector that is connected to UTP cable to Ethernet port of a PC or a router.
- External power line - UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line - UL1007 AWG22(0.3sq) 400mm
- For AC type, power cable is equipped with the product.
- UTP Cable : Category 5 cable

Applying the Ethernet Device

1. Please activate default PC network only. Please run Windows CMD(Command line) of PC over the same network in order to confirm network information where the Ethernet product will be connected.
   Example) Windows 7 : Start(Run)->CMD->ipconfig /all
   Windows 10 : Start menu-> Click right mouse button->CMD->ipconfig /all
   - Please refer to below network information when the Ethernet product's network environment is configured.

```
Ethernet adapter Local Area Connection:

        Connection-specific DNS Suffix  . :
        IP Address. . . . . . . . . . . . : 192.168.10.101
        Subnet Mask . . . . . . . . . . . : 255.255.255.0
        Default Gateway . . . . . . . . . : 192.168.10.1
```

Please refer to the manual posted on the website for instructions on how to use the product.

2. Because the ETN tower light is connected to a hub with the PC that is same as the picture on the front page, ETN tower light and the PC are now connected with the same network.
3. Please download the product manual, library file and test program from Qlight website(www.qlight.com) or blog.qlight.com



4. When you unzip the file, there will be a file with the same name below. The instructions are listed inside the file.
5. When you unzip "ETN TEST PROGRAM.zip" file, following folders are created.

1.ETN Test Program
A program for setting IP before testing the ETN device

2.IP Set Program
A program for setting testing the ETN device

Applying the Ethernet Device

6. Run the “Mac_Setting.exe” program that is inside the IP Set Program Folder .

① When the program is running such as the right figure, click the “Mac Find” button in the “Find Mac Address / Select” section


- MAC Address of the connected device appears when you click the Device List combo box. (If the Mac Addr does not appear, make sure that the connection status or the power supply is functional and then retry.)

② Select the MAC Addr of the device you want to change, and then click on the “Read” button.

③ Check the information and settings from the “Mac config status”

④ Set the value of users network information identified in the previous chapter (subnet mask, gateway) in each text box, and set a different IP_Addr than your PC
Apply the settings by pressing the Write button

- The port is set to “20000“by default and the port number can be changed if necessary
- Reconnect After Disconnecting the power from the tower light.

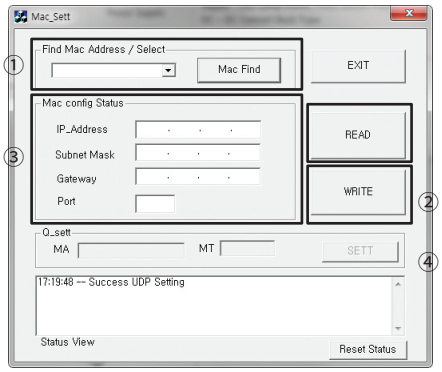

7. ETN Test Program Files folder includes the followings.


QLight_Lamptest_TCP.exe
Test Program

QTvc_dll.dll
Library required for the test program

8. Run the “QLight_Lamptest_TCP” program.


Article	Detailed specification
① Network information setting	- Input port on TCP/PORT and IP address on TCP/IP that set on Ethernet tower lights
② Lamp control	- ON : Click the button Lamp ON - ON/OFF : Click the button Lamp Flash - OFF : Click the button Lamp OFF
③ Sound group selection	- WS : 5 warning sounds(mono) - WP : 5 special warning sounds(mono) - WM(1) : 5 Melodies(mono) - WA(1) : 5 alarms(mono) - WB : Software Buzzer 5 sounds(speaker type) - Buzzer : 5 Buzzer sounds
④ Sound selection	- Select 5 sounds based on model which is fixed on Ordering Specifications

• User can select appropriate sound pattern by referring Ordering Specifications. There’re WS, WM, and WA sound patterns and user can choose the option when placing order.

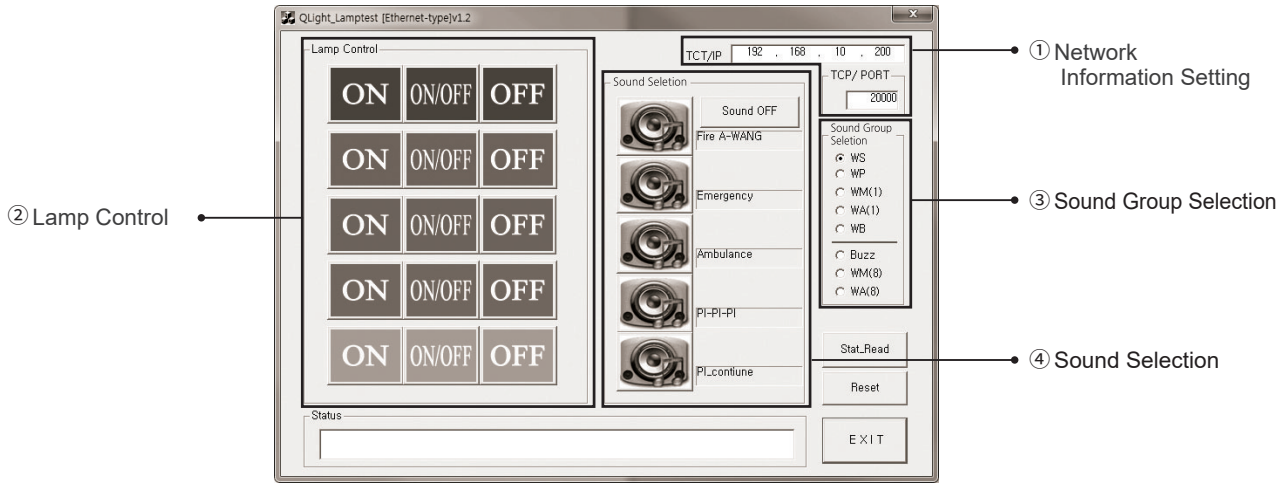

• Fill TCP/IP and TCP/PORT (①Network Information Setting) with IP address and port that has been setted in ethernet tower light.
• When click LAMP ON, correspond lamp turns on.
• When click LAMP OFF, correspond lamp turns off.
• Please choose appropriate sound pattern group by referring ③ Sound Group Selection area.
• You can choose sound pattern by referring ④ Sound Selection.
• Tower lamp plays sound when SOUND button is pressed.
• Tower lamp stops sound when SOUND OFF button is pressed.


Product Installation

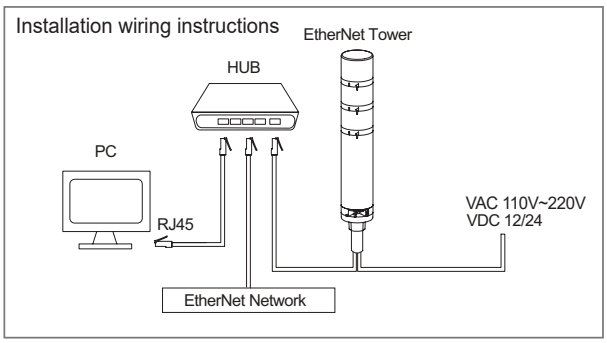


■ Test Ethernet LED Tower Light

1. Please connect LAN cable of the tower light to the router so that the tower light can access Ethernet network by referring left diagram.
2. Please be sure that the power supply shall meet the product specification accordingly.

Parts Definition

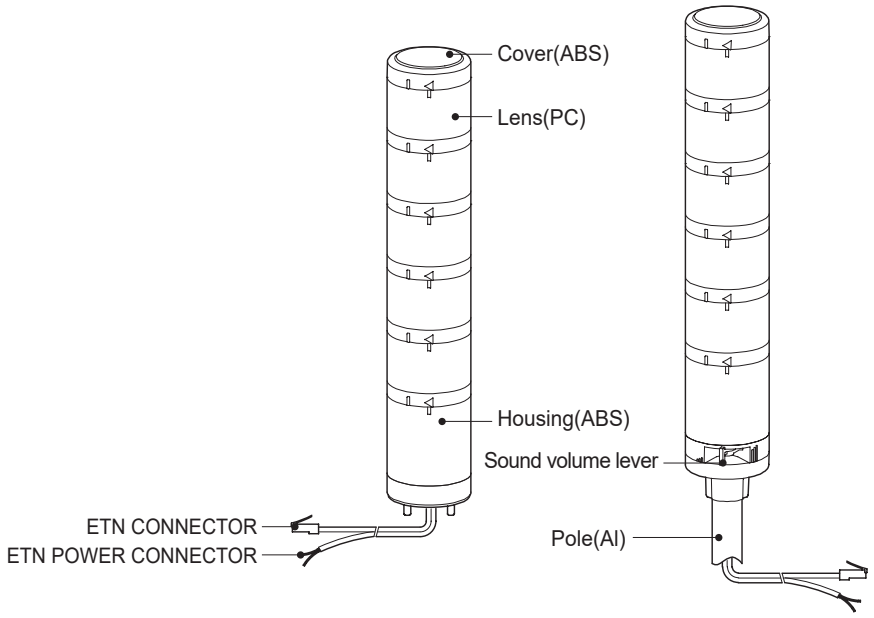


How to Change Lens Kit

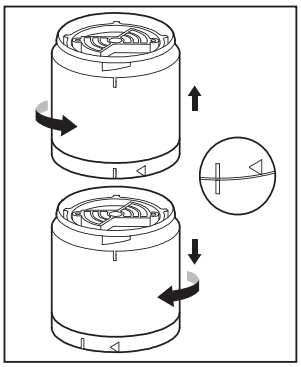


• Disassembling lens kits

① Twist the upper lens kit in a counter-wise direction so the "I" mark from both kits align.

② Disassemble by removing the upper lens kit from the lower one.

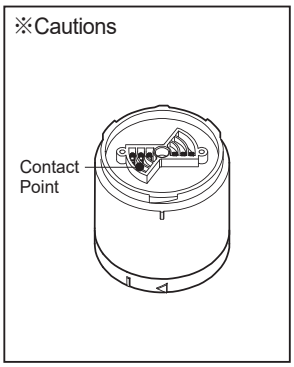

Lens modules are connected through cone-shaped contact point. In case the contact point is damaged, it may cause a contact failure.

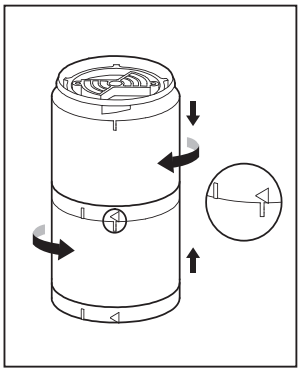


• Assembling lens kits

① Put the two lens kits together by aligning the upper lens' "I" mark and the lower lens' "I" mark together.


② Lock the two kits by twisting the upper lens kit in a counter-wise direction so the upper lens' "◁" mark aligns with the lower lens' "I" mark.

Mounting Hole Specifications


① Machine holes on the mounting surface referring to the diagram below.

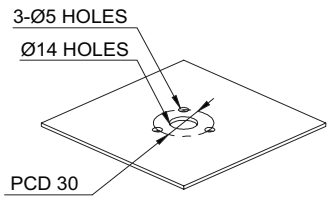

QTR50ML-ETN-BZ

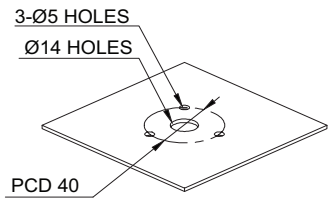

QTR60ML-ETN-BZ

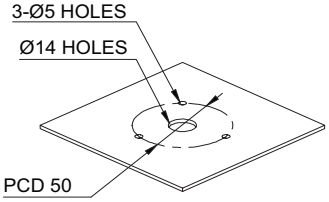

QTR70ML-ETN-BZ





② Remove the flange nuts from bolts and place the product through the mounting surface holes.

③ Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.









Mounting Accessories (Sold Separately)

• Please refer to the dimensions below for installati on of mounting brackets








■QTR50ML-ETN/QTR60ML-ETN/QTR70ML-ETN -Direct Mounting Type Model

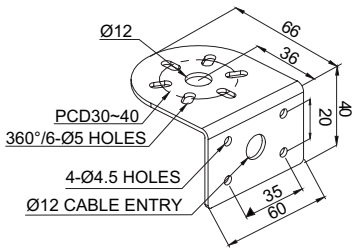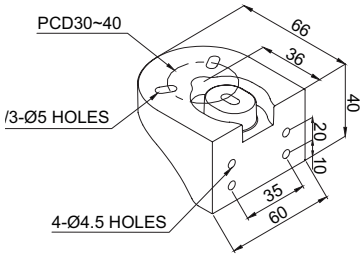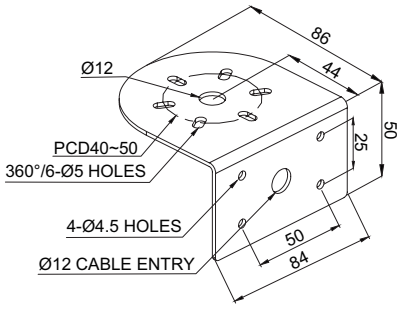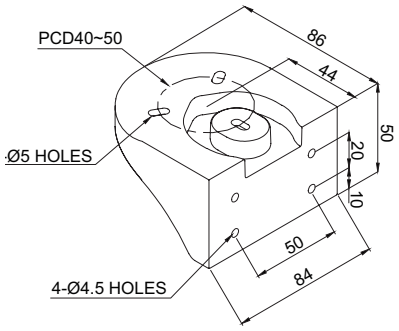	Dimensions	
QTR50ML-ETN QTR60ML-ETN	 TWS45	 TWA45
QTR70ML-ETN	 TWS80	 TWA80

■ QTR50L-ETN/ QTR60L-ETN - Pole Mounting Type Model

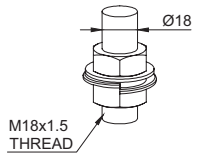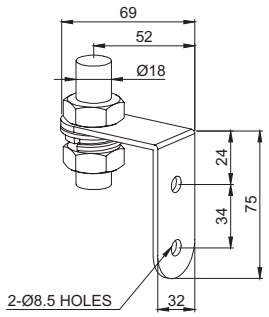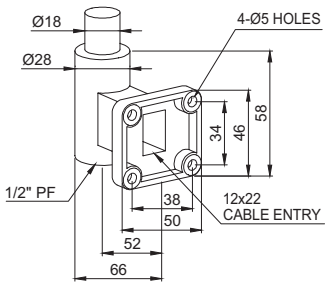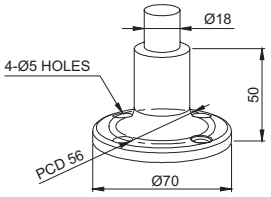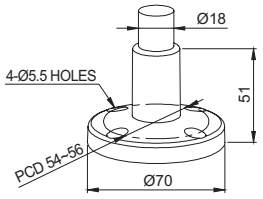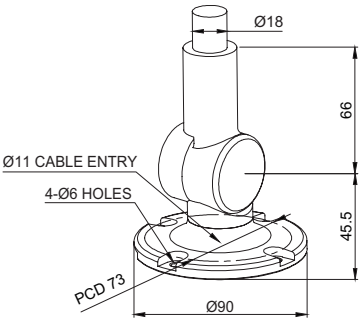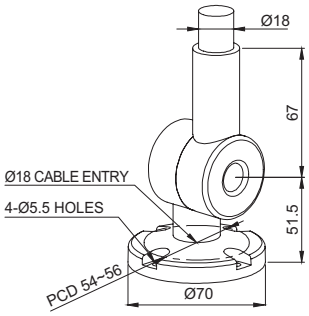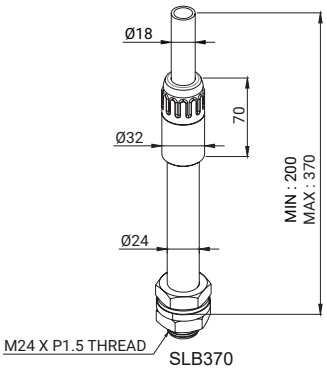	Dimensions	
QTR50L-ETN QTR60L-ETN	 18mm SCREW & NUT	 LB18
	 LW18	 SZ18
	 QZ18	 SL18
	 QL18	 SLB370

■ QTR70L-ETN - Pole Mounting Type Model

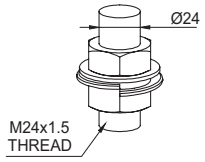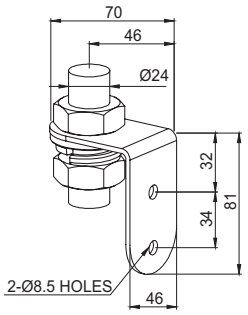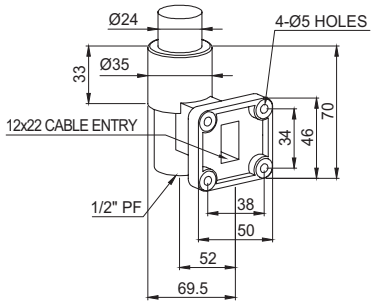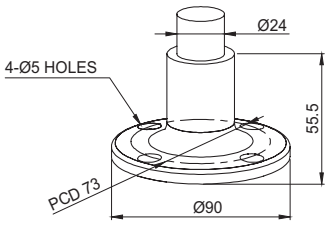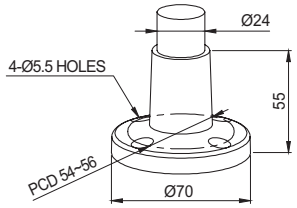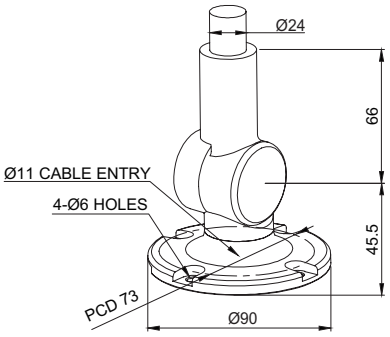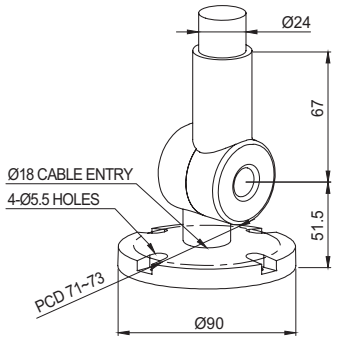	Dimensions	
QTR70L-ETN	 24mm SCREW & NUT	 LB24
	 LW24	 SZ24
	 QZ24	 SL24
	 QL24	


Product installation direction

■ **Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.**

· BEACON/SIGNALING LIGHT


※ For products with a protection rating of less than IPX4, please install it vertically.


Power cord inlet part shall not be facing the sky.

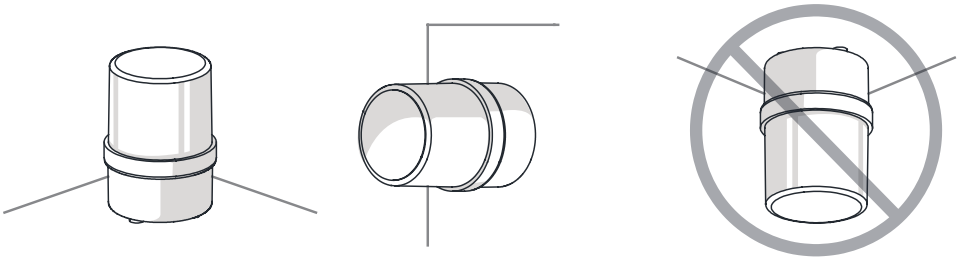

· ELECTRONIC SOUNDER/SIGNAL HORN


Sounder part shall not be facing the sky.

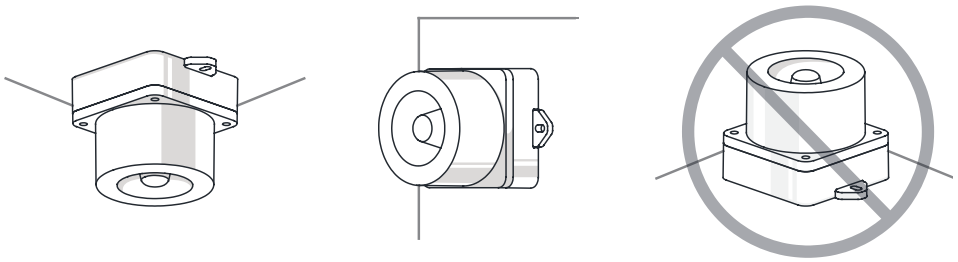

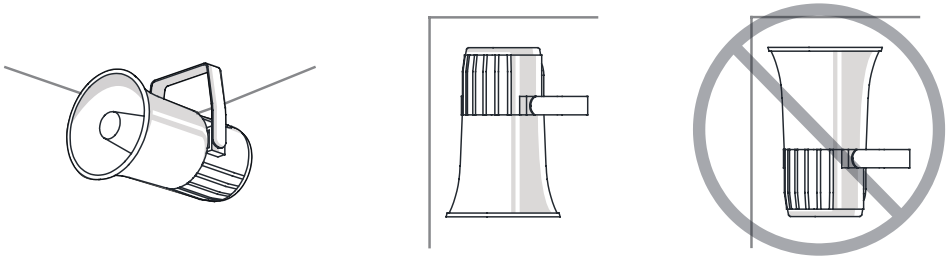

· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS


Sounder part shall not be facing the sky.

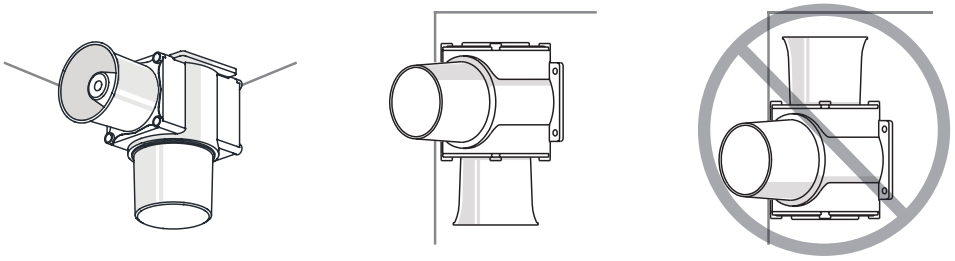

· SIGNAL TOWER LIGHTS

※ For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

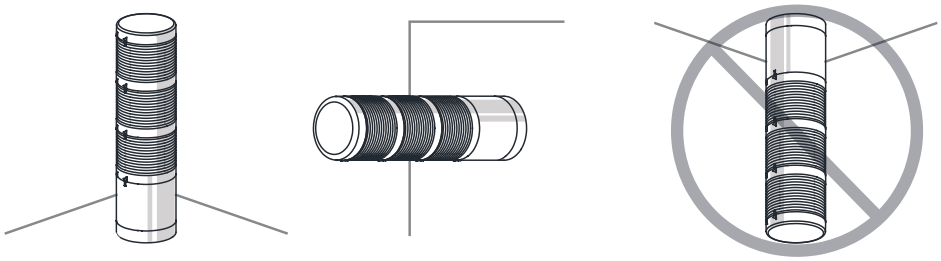

⚠ For your safety

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement.
The newest product information is available on our website.(www.qlight.com)
Please read the instruction manual attached to the product carefully before installation and use.

Korea Corporation Qlight Co., Ltd. www.qlight.com | trade@qlight.com
Head Office | Suite #1510, STX-V Tower, 128 Gasan Digital 1-ro, Geumcheon-gu, Seoul, 08507, South Korea
Tel: +82-2-2679-6152 Fax: +82-2-2679-6154
Factory(Gimhae Production Headquarters) | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnam-do, 50805, South Korea
Tel: +82-55-328-1111
Overseas Sales Department | Qlight Building, 704 Nakdong-daero, Sasang-gu, Busan 47044, South Korea Tel: +82-51-620-4100
Busan Business Centerr | Qlight Building, 704 Nakdong-daero, Sasang-gu, Busan 47044, South Korea Tel: +82-51-245-0017

China Corporation SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com
Sales Corporation (Shanghai) | Room 333 Building B, No.11, Lane 450, Zhenda Road, Baoshan District, Shanghai, China
Tel: +86-21-6651-7100 Fax: +86-21-6315-3929
Manufacturing Corporation (Qidong) | No.33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China
Tel: +86-513-8384-9999 Fax: +86-513-8384-9910

Qlightec
Innovation in Alarm & Signal

Product Operation Inquiry / Customer Support +82-51-620-4100
You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.
※ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.
Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507)
Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)
www.qlight.com

EN - QTR50L-ETN - 2608A